Safety Non-contact Door Switch

SFN Series

INSTRUCTION MANUAL

TCD210005AA

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using. For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ▲ symbol indicates caution due to special circumstances in which hazards may occur.

★ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
- illure to follow this instruction may result in personal injury, economic loss or fire.
- System manager means followings;
 a personnel who is fully aware of installation, setting, operation, and maintenance
- a personnel who well observes standard/regulation/statute on the product by type of machine the product installed in and nation/region the product used in Machine user means a personnel who is appropriately trained about using machine by the system manager, so that machine user can operate the machine correctly. System manager has duty to train the machine user about operation of the product. Machine user has to report directly to the system manager when unusual status has been found while system is operating.
- illure to follow this instruction may result in personal injury, economic loss or fire
- 03. The product has to be installed, set, and combined with machine control system by the qualified system manager.
- Failure to follow this instruction may result in personal injury due to unintended operation
- 04. Before using the product, check that function of the product operates as intended while machine is turned off after installation. Failure to follow this instruction may result in personal injury due to unintended operation
- 05. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, salinity, moisture, or steam, or dust may be present.
- ailure to follow this instruction may result in explosion or fire
- 06. Do not disassemble or modify the unit.
- Failure to follow this instruction may result in personal injury or fire due to loss of safety
- 07. Do not defeat, tamper, modify, or bypass the switch and enter the door.
- 08. Check whether machine is stopped or not when the door is opened. ailure to follow this instruction may result in personal injury
- 09. Check the installed status of the switch, operating status of the switch, and signs of damage, modification, tampering of the switch at the following situation and on a
 - when operating the safety system at first
 - when replacing component of the system
- when the system has not been operated for a long time
 Failure to follow this instruction may result in personal injury due to malfunction of the product and safety function.
- 10. Do not connect, repair, inspect, or replace the unit while connected to a power source.
 - Failure to follow this instruction may result in fire
- 11. Check 'Connections' before wiring. ailure to follow this instruction may result in fire
- 12. Keep away from high voltage lines or power lines to prevent surge and inductive noise, and make cable as short as possible
- In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high
- Failure to follow this instruction may result in personal injury due to malfunction of the product and safety function.

▲ Caution Failure to follow instructions may result in injury or product damage

 
- 01. Use the unit within the rated specifications.
- result in fire or product damag
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.
- 03. Make cable as short as possible, and keep the length of the cable within 100m when extent the length of the cable.
 - Failure to follow this instruction may result in malfunction of the product and safety function
- 04. When wiring two or more products in series, keep the total length of the cable within
- $Failure\ to\ follow\ this\ instruction\ may\ result\ in\ malfunction\ of\ the\ safety\ function\ due\ to$
- 05. When installing two or more product adjacently, give at least 26mm interval.
- 06. Do not install the switch and actuator on the magnetic object. Use bolt and nut of stainless steel or non-magnetic material, when installing the switch and actuator.
- ilure to follow this instruction may result in malfunction or affect sensing distance. 07. Do not use the switch as a guard door stopper. Install separate mechanical stopper.

Cautions during Use


- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Use the switch with the dedicated actuator and controller. Do not use the switch with another actuator or controller randomly.
- The switch is cannot be used without the controller (SFC-N322).
- · Power supply should be insulated and limited voltage/current or Class 2, SELV power supply
- When using switching mode power supply to supply the power, ground F.G. terminal and
- connect a condenser between 0V and F.G. terminal to remove noise. This unit may be used in the following environments.
- Indoors (UL Type 1 Enclosure) Altitude max. 2,000 m
- Pollution degree 3
- Installation category II

Cautions during Installation


- Install the unit correctly with the usage environment, location, and the designated
- When installing the product, tightening the screw of M4 imes 20 mm with the tightening torque of
- Installing more than 2 non-contact door switches closely may result in malfunction due to mutual interference.
- Do not impact on the switch and excessively bend the cables.
- Install the switch to the sensing surface of the switch and the actuator be exactly parallel.



 tion as below with the consideration of moving directions of the



 - and actuator with a gap of minimum 1mm between them.
- of the guard door and the actuator at guard door.



Ordering Information

This is only for reference.

For selecting the specified model, follow the Autonics website.

SFN -М O -

○ Cable

020: cable type (2 m)

050: cable type (5 m) W: cable connector type

Product Components

• Product

• Instruction manual

Sold Separately

- Connector cable: C1D5- \square , CID5- \square , CID5- \square P
- Branch connector: CCD5-SEN_CYD5-SEN.
- Loop connector: CND5-SFN
- Safety controller non-contact door switch unit: SFC-N322

Specifications

Model		SFN-M-□
Operating distance 01)	OFF→ON	≥ 5 mm
	ON→OFF	≤ 15 mm
Approval		CE CEN IN TOYMORE S
Unit weight (packaged)		Cable type (2 m): ≈ 100.5 g (≈ 113.8 g) Cable type (5 m): ≈ 199.5 g (≈ 214.8 g) Cable connector type: ≈ 58.1 g (≈ 71.6 g)

01) It is rated at 23°C of ambient temperature, and it may be differed up to \pm 20 % by ambient temperature.

24 VDC== (± 10 %)			
100 Hz			
≤ 400 mA			
PNP open collector output - 24 VDC==, 10 mA			
ON: green, OFF: red			
≥ 20,000,000 times (with low load)			
≥ 50 MΩ (500 VDC== megger)			
Surge protection circuit, output short over current protection circuit, reverse polarity protection circuit			
1,500 VAC ~ 50/60Hz for 1 minute			
1.0 mm amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 2 hours			
1.0 mm amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 10 min			
300 m/s² (≈ 30 G) in each X, Y, Z direction for 3 times			
300m/s² (≈ 30G) in each X, Y, Z direction in output ON/OFF status for 3 times			
-10 to 55 °C, storage: -20 to 60 °C (no freezing or condensation)			
35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)			
IP67 (IEC standard)			
Cable type / cable connector type model			
Ø 5 mm, 5-wire, cable type: 2 m / 5 m, cable connector type: 0.3 m			
AWG26 (0.08 mm), 28-core, core diameter: Ø 0.74 mm			
M12 plug connector			
Body/CAP: PC			

01) Power to the load is not included

Chara

Safety (with

octeristic level / y category SFC-N322)	IEC 61508 SIL 3 IEC 62061 SIL CL 3 ISO 13849-1 PLe Cat.4 HFT = 1 Diagnostic Coverage: 99 % (high) MTFd = 100 year (high) Mission time = 20 year DEL = 3 85E_00

Safety status in case of error: the switch does not have an internal error recognition function, so it cannot maintain a safety status in the event of error. Error recognition is processed in the connected controller (SEC-N322)

Operation Distance

- Operating distance represents the distance between the sensing surface of switch and that
- Operating distance can be differed according to the moving direction of actuator from the switch. (at ambient temperature of 23 °C)
- The operating distance may be affected by metal or magnetic substances which is placed closely to the switch.

Operation status	Moving direction	n	Operating distance
	Front - Back		≥ 5 mm
OFF→ON	Top - Bottom		≥2 mm
	Left - Right		≥ 5 mm
	Front - Back		≤ 15 mm
ON→OFF	Top - Bottom		≥6 mm
	Left - Right		≤ 15 mm


Connections

Signal	Function	Pin	Color	Controller (SFC-N322)
Doweringut	VCC	1	Brown	D3
Power input	GND	3	Blue	D4
Signal input	IN	2	White	D1
Signal output	OUT	4	Black	D2
Auxiliary output	AUX	5	Yellow	-




Connection Examples

■ Cable type

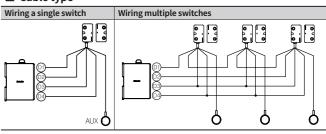

■ Cable connector type

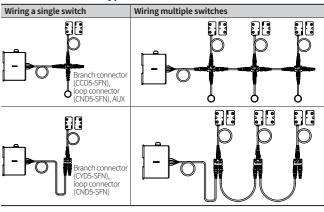


Maximum 30 unit of switches can be connected to a controller (SFC-N322)


Dimensions

· Unit: mm, For the detailed drawings, follow the Autonics website.

■ Cable type

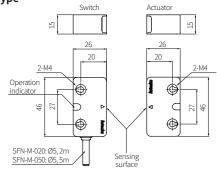

■ Cable connector type

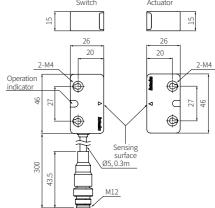

18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan, Republic of Korea, 48002 www.autonics.com | +82-51-519-3232 | sales@autonics.con