

Programming Scheme for MA201 / MA501 / MA2301

- **MA201 / MA2301** : via rear key (Tact Switch)
- **MA501** : via side key (Tact Switch)

Sr.No.	Function	Method	Display Indication
1	To enter programming mode.	Press switch for 5 sec.	Ctr
2	CT Primary Setting (Default setting : 5A AC)	With every press of the key	5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 80, 100, 125, 150, 175, 200, 250, 300, 400, 500, 600, 630, 750, 800, 1000, 1200, 1500, 1600, 2000, 2250, 2500, 3000, 3200, 4000, 5000
3	To exit programming mode	Auto exit :100sec. or switch OFF the unit & then switch it ON.	—

- **MA2301** : 3 \emptyset Current meter. To toggle between the individual current pages, press \blacktriangledown key.
- **MV2307** : 3 \emptyset Voltmeter. **A.** To toggle between L-N & L-L voltage pages, press \blacktriangledown key for 3sec.
B. To scroll through different voltage pages, press \blacktriangledown key.