
# LED Light Bars for Distribution Panel QEL/QELT/QELS/QELTS



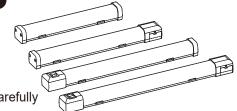

Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

## Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

## A Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

# **Ordering Specifications**

QEL -	200	-	24
[Model number]	[Product length]		[Voltage]
1	1		1
QEL - External power line	• 200 - 200mm		• 24 - DC24V
QELT - Terminal box	• 300 - 300mm		• 110 - AC110V
<ul> <li>QELS - External power line with power switch</li> </ul>	• 400 - 400mm		• 220 - AC220V
QELTS - Terminal box with power switch	• 500 - 500mm		



Please scan the QR code for more detailed product information.

# **Product Specifications**


### Optics Specifications

Lens color		QEL-200/ QELT-200 QELS-200/ QELTS-200	QEL-300/ QELT-300 QELS-300/ QELTS-300	QEL-400/ QELT-400 QELS-400/ QELTS-400	QEL-500/ QELT-500 QELS-500/ QELTS-500
Lens color		Translucent Translucent Translucent Translucent			
Light color (Standard)		Cool daylight			
Color tempera (Standard)	ature	6,000-7,000K			
Luminous flux	DC	254lm	383lm	509lm	606lm
Luminous nux	AC	268lm	384lm	479lm	575lm
Illumination	DC	93Lux	105Lux	165Lux	200Lux
(at 1m)	AC	77Lux	100Lux	145Lux	188Lux

#### General Product Specifications

Model number	QEL-200/ QELT-200 QELS-200/ QELTS-200	QEL-300/ QELT-300 QELS-300/ QELTS-300	QEL-400/ QELT-400 QELS-400/ QELTS-400	QEL-500/ QELT-500 QELS-500/ QELTS-500
Rated voltage	DC24V	DC24V	DC24V	DC24V
	AC110V/ 220V	AC110V/ 220V	AC110V/ 220V	AC110V/ 220V
Range for operating voltage	DC21.5V-26.5V / AC98V-121V / AC198V-245V			
Dower concumption	3.5W	5W	7W	9W
Power consumption	3.0W / 3.5W	3.5W / 5.0W	4.5W / 6.5W	5W / 8.5W
Insulation resistance	Min. 100MΩ(500V DC mega ohm meter)			
Withstanding voltage	DC : 500V AC, 60Hz, 1 minute / AC : 1,500V AC, 60Hz, 1 minute			
Operating temperature	-30°C - +50°C			
Protection rating	Non waterproof			
Materials	Lens : PC, Side cover : ABS, Bracket : STS201			
Certificate	(€ DC24V/AC220V only / C AC220V only(QEL/QELS)			
Maight(approx)	0.08kg	0.10kg	0.13kg	0.15kg
Weight(approx.)	0.10kg	0.12kg	0.15kg	0.17kg

# Dimensions

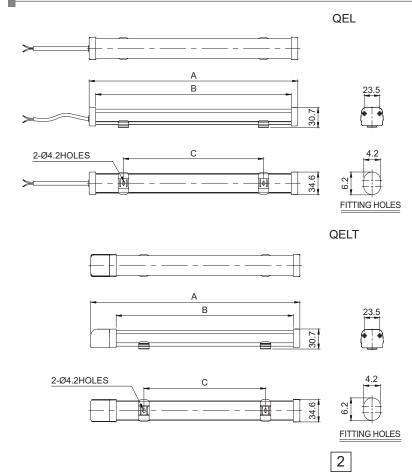


MOD	EL	Α	В	С
QEL-2	200	220	200	16~170
QEL-:	300	320	300	16~270
QEL-4	400	420	400	16~370
QEL-	500	520	500	16~470

MODEL	A	В	С
QELT-200	249	200	16~170
QELT-300	349	300	16~270
QELT-400	449	400	16~370
QELT-500	549	500	16~470


## (Units : mm)

## Dimensions

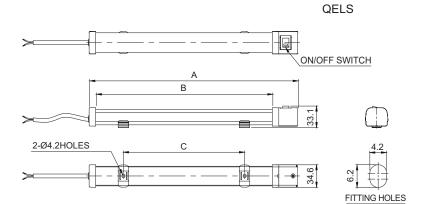


MODEL	А	В	С
QELS-200	249	200	16~170
QELS-300	349	300	16~270
QELS-400	449	400	16~370
QELS-500	549	500	16~470

#### QELTS

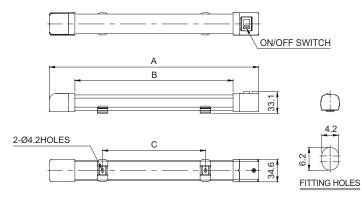

MODEL	А	В	С
QELTS-200	278	200	16~170
QELTS-300	378	300	16~270
QELTS-400	478	400	16~370
QELTS-500	578	500	16~470

## **Wiring Instructions**

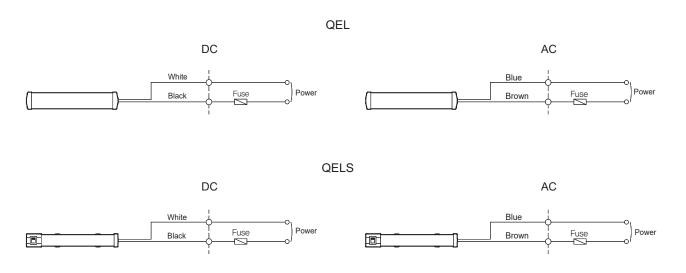


- DC type cable specification : External power line - UL2464 AWG22(0.3sq) x 2C 450mm AC type cable specification : External power line - VCTFK(0.75sq) x 2C 450mm

This product can be wired regardless of polarity.

• For QELT and QELTS model, external power line is sold separately.

#### Parts Definition

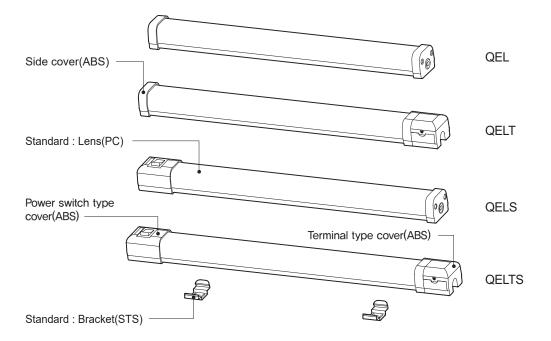


#### Bracket Adjustment

• Mounting brackets are removable with special sliding structure that allows easy adjustment of distance between the two mounting brackets.

#### Terminal Wiring (QELT, QELTS)


• QELT and QELTS models are wired according to the following instructions.

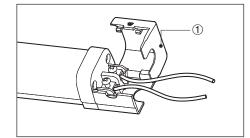


- 1) Lift open the terminal box cover 1
- 2) Loosen the bolts in the terminal box by rotating them in the CCW direction. Connect the power lines to the terminals and then fasten the lines by rotating the bolts in the CW direction (Product can be wired regardless of polarity).
- 3) After the power lines have been connected, please close the terminal box cover ①.

#### ■ Terminal Wiring (QELS, QELTS)

• QELT and QELTS models can be turned off when the switch "O" ① is pushed down and turned on when the switch "I" ① is pushed down.

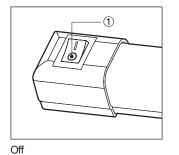

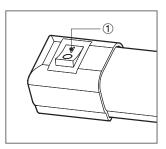




4

# Installation/ Mounting Hole Specifications


#### Installation

- First, machine taps or holes on the mounting surface ①.
- The mounting hole of this product is 4.2mm in diameter (long hole).
- When machining taps, fasten the bolt through the mounting hole of the product.
- When machining holes, insert the bolt through the hole of the product, and tighten the nut from the opposite side of the mounting surface. (Install flat washer and spring washer when fastening bolt and nut.)
- To secure the product to brackets, place the products to brackets and push it lightly until it makes "clark" sound.

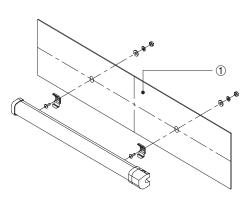

#### Mounting Hole Specifications

• Machine holes on the mounting surface referring to the diagram below.

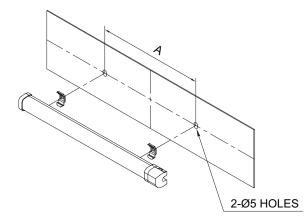

MODEL	A
QEL/ QELT/ QELS/ QELTS-200	16~170
QEL/ QELT/ QELS/ QELTS-300	16~270
QEL/ QELT/ QELS/ QELTS-400	16~370
QEL/ QELT/ QELS/ QELTS-500	16~470

# Installation Environment and Protection Rating


This product is not waterproof.

- This product is designed for only indoor use.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated, it may cause malfunction or damage to the product.
- For further information, please visit our website(www.qlight.com).

# **Technical Certification**

• Qlight products are designed to meet strict quality and technical standards. Thus, the Qlight brand is widely recognized for its high quality and technical innovations from leading institutions around the world.



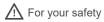

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com) Please read the instruction manual attached to the product carefully before installation and use.

#### Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111) Qlight OverSEAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel : +82-51-620-4100 Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.glight.com www.glightusa.com | sales@glightusa.com 3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

SHANGHAI Qlight Electronic Co., Ltd. www.glight.com www.glightcn.com | glightcn@glight.com China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Sightec Solution such as model name, symptom, telephone number and address. \*ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY FUNCTION OR DESIGN OR OTHERWISE

RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE. Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code : 08507) Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)

www.qlight.com