 
 
# Multiple Color LED Steady/ Flashing Signal Lights SMCL80/ 100/ 125







Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

#### A Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

- During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
   Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury,
- malfunction or damage to the product.) 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to
- follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

#### A Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

## **Ordering Specifications**

SMCL80	- BZ	- 3 -	- 220	- RAG
[Model number]	[Buzzer]	[Color]	[Voltage]	[Color]
I	I.	I	I.	T
• SMCL80 • SMCL100 • SMCL125	<ul> <li>(Blank)</li> <li>No buzzer</li> <li>type</li> <li>BZ</li> <li>Built-in</li> <li>buzzer type</li> </ul>	• 2-2colors • 3-3colors	<ul> <li>12/24</li> <li>DC12V~24V</li> <li>110 - AC110V</li> <li>220 - AC220V</li> </ul>	R-Red A-Amber G-Green

## **Product Specifications**

Model number	Voltage	Current	Certificate	Weight	Color
SMCL80	DC12V ~24V	Max. 0.235A	CE	0.18kg	
	AC110V	0.065A		0.28kg	
	AC220V	0.035A			R-Red A-Amber G-Green
SMCL100	DC12V ~24V	Max. 0.390A		0.23kg	
	AC110V	0.095A		0.32kg	
	AC220V	0.045A			
SMCL125	DC12V ~24V	Max. 0.410A		0.27kg	
	AC110V	0.105A		0.36kg	
	AC220V	0.055A			

• Built-in buzzer : Max.90dB at 1m


• Protection rating : IP44

Ambient operating temperature : -30°C to +50°C




Please scan the QR code for more detailed product information

www.qlight.com

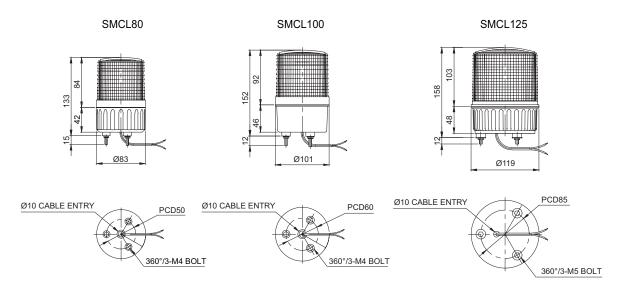


## Wiring Instructions


- SMCLseries can be wired with either external contact or transistor.
- When using a transistor, please choose the NPN transistor which best matches the voltage and product type, then connect them correctly according to the wiring diagram below.

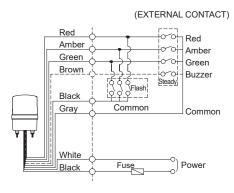

- External power line UL1015 AWG18(0.75sq) x 2C 400mm
- External signal line UL1007 AWG22(0.3sq) 400mm
- This product can be wired regardless of polarity.

#### Parts Definition/ Installation

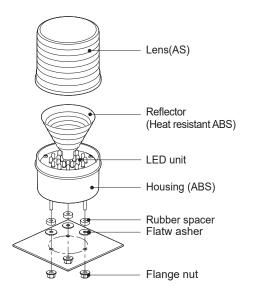

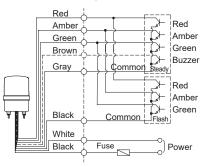


- First, remove the flange nuts from bolts and place the product through the mounting surface holes.
- Fasten the flange nuts on the opposite side of the mounting surface until the product is tightened securely.

#### (EXTERNAL TRANSISTOR-NPN)


#### **Mounting Hole Specifications**

• Machine holes on the mounting surface referring to the diagram below.

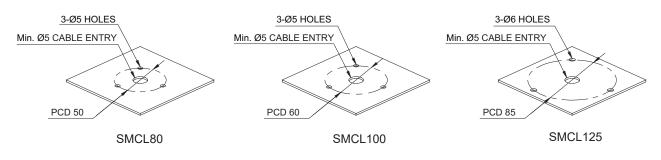

#### Mounting Accessories (Sold Separately)

· Please refer to the dimensions below for installation of mounting brackets

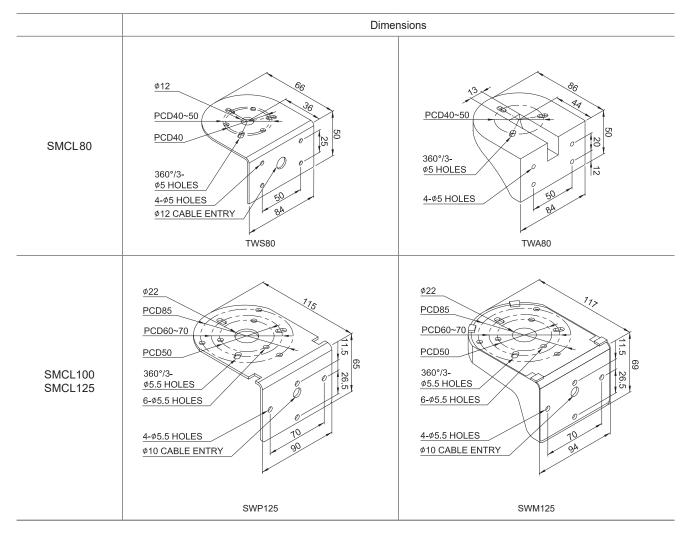

#### Installation Environment and Protection Rating

- This product is designed for use with protection rating of IP44.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP44), it may cause malfunction or damage to the product.
- In case of outdoor applications, install the product in the upright position. Do not install the product horizontal or upsidedown positions where water can potentially penetrate into the product and impact it's operation.
- For further information, please visit our website (www.qlight.com).



Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com) Please read the instruction manual attached to the product carefully before installation and use.

#### Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111) Qlight OverSEAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel : +82-51-620-4100 Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.glight.com www.glightusa.com | sales@glightusa.com 3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

SHANGHAI Qlight Electronic Co., Ltd. www.glight.com www.glightcn.com | glightcn@glight.com China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Sightec Solution such as model name, symptom, telephone number and address. \*ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY FUNCTION OR DESIGN OR OTHERWISE

RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE. Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code : 08507) Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)