Explosion Proof Warning Light/ Signal Light SEA/ SEAL/ SEALR/ SEAS



Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

Safety Precautions for Explosion Proof Products

Please follow the instruction below to ensure safe and correct use of explosion proof products.

- 1. Explosion proof products should be managed according to explosion proof regulations. Do not disassemble, assemble, alter or repair the product arbitrarily.
- The temperature rating of the product is the temperature the product will experience at the applied rated voltage and ambient temperature indicated.
- 3. Use cable glands that satisfy the product's explosion proof grade and temperature grade.
- 4. Unused cable entries must be filled with material that meets the explosion proof grade and temperature rating.
- 5. Before installing the product, please make sure all cautions indicated on the labels, packaging, and operation manual of the product are fully understood.
- 6. Installation, maintenance and repair of the product must be performed by experts in the explosion proof field, or persons who have received relevant training.
- 7. For safety, the product should be installed and operated in environments that avoid high temperature and high pressure.
- 8. Please follow general safety precautions and avoid installing the product in locations that may generate excessive heat.
- 9. When installing the product in places where chemicals are located, please make sure that the environment does not have two or more incompatible chemicals mixed. For safety, please read the instruction manual carefully and be mindful of the chemical compositions where the product is used.
- 10. This product requires grounding.
- 11. Please note that special conditions shall be applied if the sign "X" is placed after the certificate number.
 - 1) For safe use, regular overpressure test must be carried out in accordance with EN 60079-1, clause 15.2.3.
 - 2) For safe use, tempered glass must be protected from strong impact

Precaution for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)


A Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

1

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.


Ordering Specifications

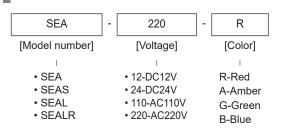



Please scan the QR code for more detailed product information.

www.qlight.com

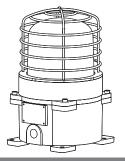

Product Specifications

Explosion Proof Specifications

Model number	SEA	Zone	Zone 1	High risk gas/vapour(Gas)		
	SEAL	definitions(Gas)	Zone 2	Medium risk gas/vapour(Gas)		
	SEALR	0	GROUP II A	Acetone, Petrol, Methanol, Propane, Toluene		
	SEA-S	Group definitions(Gas)	GROUP II B	Ethylene, City gas		
Range of	DC 12V or 24V	deminitions(Oas)	GROUP II C	Hydrogen, Acetylene, Carbon sulphide		
operating voltage	AC 110V or 220V	Maximum surface temperature of electrical Equipment	T1	450°C		
Ex mark	IECEX - Ex db IIC T6 Gb ATEX - 🐼 II2G Ex db IIC T6 Gb KCs- Ex d IIC IP66 T6 NEPSI, CCC - Ex d IIC T6 Gb		T2	300°C		
			Т3	200°C		
		Zone definitions(Dust)	T4	135°C		
			T5	100°C		
Ambient operating	-40°C ≤ Ta ≤ 55°C(KCs)	0	T6	85°C		
temperature	-40°C ≤ Ta ≤ 60°C	Group definitions(Dust)	Zone 21	High risk powder/dust(Dust)		
Explosion proof	7	deminitions(Dust)	Zone 22	Medium risk powder/dust(Dust)		
Zone	Zone1, Zone2	Group definitions(Dust)	GROUP II A	Ignitible fibers/flyings(more than 0.5mm)		
Protection rating	IP66		GROUP II B	Non-conductive dusts		
		deminions(Dust)	GROUP II C	Conductive dusts		

General Product Specifications


Model number Voltage	Valtaga	Current	Bulb specifications		Certificates	Maight	Calar	
	Current	Volts/Watts	Configuration	Part#	Centificates	Weight	Color	
SEA -	DC12V	1.545A	12V15W	G23 15S	17	ATEX CCS	5.36kg	R-Red A-Amber G-Green B-Blue
	DC24V	0.766A	24V15W	G23 15S	18			
	AC110V	0.204A	12V15W	G23 15S	17		5.75kg	
	AC220V	0.102A	12V15W	G23 15S	17			
SEAS -	DC12V -24V	Max. 1.000A	200V -550V	EUB0641 -1A(G) U type	48	ATEX CCS	5.39kg	
	AC110V	0.135A					5.35kg	
	AC220V	0.105A						

Model number	Voltage	Current	Certificates	Weight	Color
SEAL	DC12V-24V	Max.0.185A		4.87kg	R-Red A-Amber G-Green B-Blue
	AC110V	0.044A		5.25kg	
	AC220V	0.022A	IEČEX NEPSI		
SEALR	DC12V	0.183A		E 0.01	
	DC24V	0.127A		5.33kg	
	AC110V	0.035A		5.74kg	
	AC220V	0.017A			


Dimensions

(Units : mm)

134 154

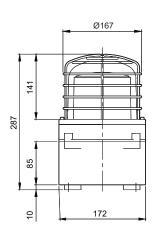


SEA/ SEAL/ SEALR/ SEAS

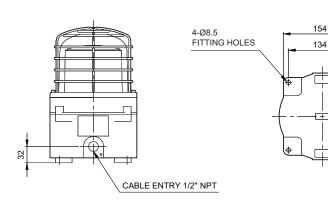




Terminal Box Wiring Instructions

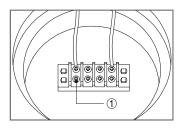

- Terminal block is located inside of the product. Unscrew the 4 bolts located in the upper body to get rid of the upper lighting element of the unit.
- Please apply fork (U-type) or ring (O-type) locking spade terminal at naked tip of the wire for secure connection.
- Please wire the power line to terminal 1
- For AC type products, wire regardless of polarity.
- For DC type products, wire terminal of black line to (-) polarity.


Parts Definition/ Installation/ Light Function Selection

Parts Definition

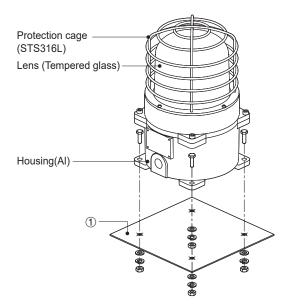


Light Function Selection(SEAL only)

 • Please refer to the chart below to use light function selection switch located inside the product.



►L: Steady

 

▶LF: Flashing


• Default function is set at steady LED. Select the desired function for your application during installation.

Installation


- First, machine taps or holes on the mounting surface ①.
- The mounting hole of this product is 8.5mm in diameter.
- When machining taps, fasten the bolt through the mounting hole of the product.
- When machining holes, insert the bolt through the hole of the product, and tighten the nut from the opposite side of the mounting surface.

Mounting Hole Specifications

 Machine holes on the mounting surface referring to the diagram below.

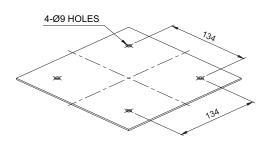


Grounding Instructions

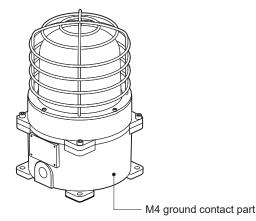


- Please use an M4 bolt at the location marked in the diagram above to ground the product.
- When connecting the grounding cable, please use a ring terminal.
- Please use a grounding cable with a diameter greater than 4mm.

Bulb Replacement Instructions(SEA only)

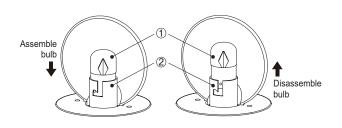

- Please wait at least 1 minute after turning off the power before replacing the bulb.
- In order to dissemble the bulb, please push down the bulb(①) lightly and screw it counterclockwise.
- In order to put the bulb in to the unit, please place the bulb(①) in the socket(②) and screw it clockwise while lightly pushing down the bulb.

Xenon Bulb Replacement Instructions(SEAS only)

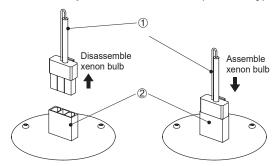

- Please wait at least 30 mimutes after turning off the power before replacing the xenon bulb.
- Please pull out the entire xenon bulb structure ① to disassemble.
- For xenon bulb assembly, please ensure the connector portion of the xenon bulb structure matches the pin location 2.


Installation Environment and Protection Rating

- This product is designed to be explosion proof.
- Please make sure to use the product in an environment that meets the specified explosion proof rating and regulations.
- For further information, please visit our website (http://www.qlight.com).

Technical Certification

• Qlight products are designed to meet strict quality and technical standards. Thus, the Qlight brand is widely recognized for its high quality and technical innovations from leading institutions around the world.



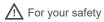

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com) PleaSEA read the instruction manual attached to the product carefully before installation and uSEA.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, SEAoul, Korea Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111) Qlight OverSEAAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel : +82-51-620-4100 Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.glight.com www.glightusa.com | sales@glightusa.com 3003 North First Street, Suite #341, San JoSEA, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

SHANGHAI Qlight Electronic Co., Ltd. www.glight.com www.glightcn.com | glightcn@glight.com China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Product Operation Inquiry / Customer Support +82-51-620-4100 You can expect prompt SEArvice if you have exact information such as model name, symptom, telephone number and address. * ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, ELINCTION OR DESIGN OR OTHERWISES RELIABILITY, FUNCTION OR DESIGN OR OTHERWISEA. Head office : Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, SEAoul, Korea (Postal Code : 08507) Factory : 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code : 50805)

www.qlight.com EN - SEA - 2106A