






One-touch Fittings KQ2 Series

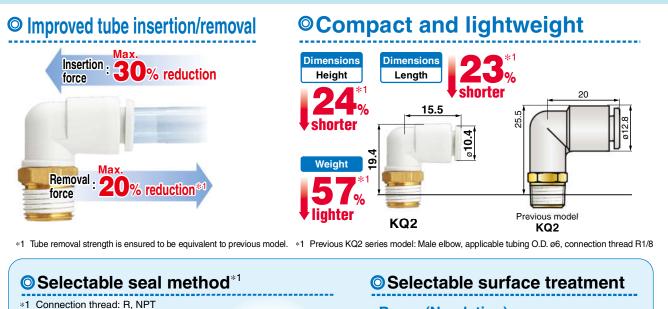

- Brass (No plating)
- Brass + Electroless nickel plating


Face seal adopted for threading.

Face seal

Face seal

Original thread construction which allows for the use of piping taper female threads (Rc, NPT)

Sealant

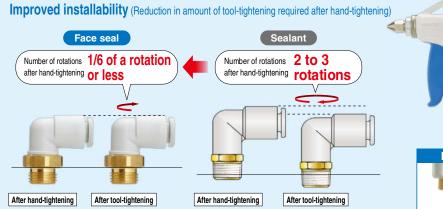


Allows for neat and compact piping without protruding threads

<Application example> Mounted to a blow gun (VMG11W-02-01)



A uniform height when using multiple fittings, contributes to space saving

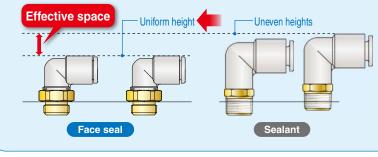

Prevention of sealant residue/protrusion

The current sealant type leaves residue and protrudes out from the threading when installing, making it necessary to clear away the residue using an air blower or similar. However, no residue is created when using a face seal.

Re-piping is possible.

Face seal

1


Repeated re-piping of up to 6 to 10 times is possible due to use of elastic sealant on seating.

Sealant

Sealant tape is necessary because sealant becomes separated with repeated installation.

One-touch Fittings KQ2 Series



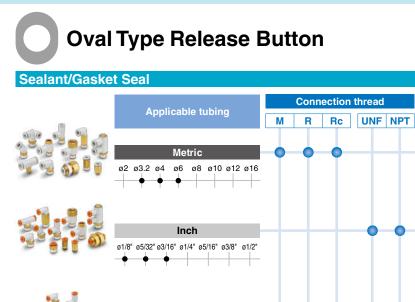

Inch ø1/8" ø5/32" ø3/16" ø1/4" ø5/16" ø3/8" ø1/2"


How to Order P.6 Variations P.7 Dimensions P.7 Made to Order/Clean Series/ Spare Parts P.2	7)
How to Order P.S Variations P.S Dimensions P.S Made to Order/Clean Series/ Spare Parts P.4	31 33
How to Order P.5 Variations P.5 Dimensions P.5 Made to Order/Clean Series/ Spare Parts P.5	51 52

P.5

Face Seal

	Applicable tubing	Connection thread	
a 🔊	Applicable tubing	G R Rc NPT R	How to OrderP.58
			Variations P.59
	Metric	P.57	Dimensions ·····P.60
	Ø2 Ø3.2 Ø4 Ø6 Ø8 Ø10 Ø12 Ø16		Spare Parts P.63
100 Mar 10			How to Order ·····P.66
	Metric	P.65	Variations ·····P.67
	Ø2 Ø3.2 Ø4 Ø6 Ø8 Ø10 Ø12 Ø16		Dimensions ······P.68
			How to Order P.74
	Inch	P.73	Variations ·····P.75
	01/8" 05/32" 03/16" 01/4" 05/16" 03/8" 01/2"		Dimensions P.76
			How to Order P.82
· 🕹 📋 🏑	Inch	• P.81	Variations P.83
	01/8" 05/32" 03/16" 01/4" 05/16" 03/8" 01/2"		Dimensions ·····P.84


Gasket Seal (Uni Thread)

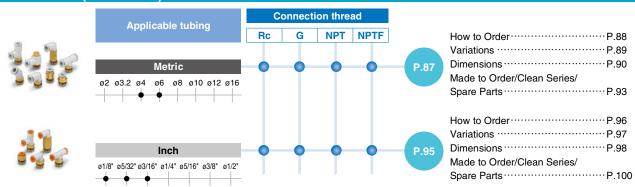


Oval Type Metric Size Uni One-touch Fittings

Applicable Tubing: Metric Size, Connection Thread: Rc, G, NPT, NPTF

KQ2 Series

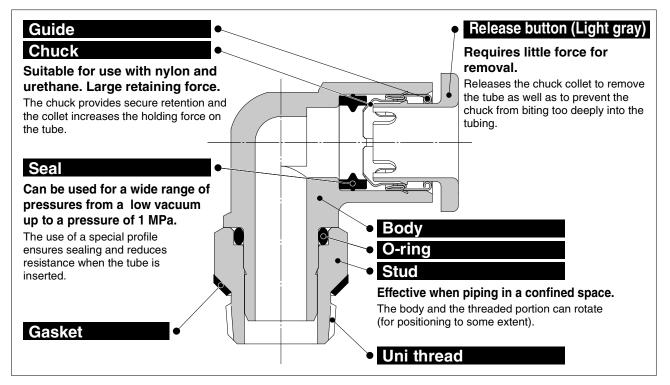



Uni thread ridge shape

A gasket made of a stainless sheet covered with laminated NBR on both sides is seated on the chamfer of a female thread for a perfect sealing construction irrespective of the difference in thread diameters due to the difference in the types of female threads, variation in tolerance, or difference in the size of chamfer. (It is applicable to any female thread with an ordinary chamfer.)

A ridge shape has been created as a Uni thread for common applications for Rc, G, NPT and NPTF.

Drastically cuts piping work-hours with the gasket seal method.



Applicable Tubing

Tubing material	FEP, PFA, Nylon, Soft nylon, Polyurethane
Tubing O.D.	ø4, ø6

Specifications

Fluid	Air, Water ^{*1 *2}
Operating pressure range ^{*3}	-100 kPa to 1 MPa
Proof pressure (at 23°C)	3 MPa
Ambient and fluid temperature	-5 to 60°C, Water: 0 to 40°C
Ambient and fluid temperature	(No freezing)

*1 The surge pressure must be under the maximum operating pressure.

*2 Deionized water is not recommended for use as it may affect the material used in the fittings. In addition, it is known to degrade the water guality.

*3 Do not use the fittings with a leak tester or for vacuum retention because they are not guaranteed for zero leakage.

Principal Parts Material

Body	C3604, PBT
Stud	C3604 (Thread portion)
Chuck	Stainless steel 304
Guide	Stainless steel 304
Release button	POM
Seal, O-ring	NBR
Gasket	Stainless steel 304, NBR



Made to Order (Refer to page 93 for details.)

Metric Size Uni One-touch Fittings KQ2 Series

Oval Type Applicable Tubing: Metric Size, Connection Thread: Rc, G, NPT, NPTF

How to Order KQ2 H 06 -U01 A Threaded Type 1 Inch Size M, R, Rc | Inch Size UNF, NPT | Metric Size M, R, Rc One-touch fittings Oval type release button • Thread material/Surface treatment Model Thread material/Surface treatment Model Symbol Symbol Male connector Α Brass н Hexagon socket head male connector Brass + Electroless nickel plating Sealant/Gasket Seal S Ν Male elbow L κ 45° male elbow ν Universal male elbow Port size т Male branch tee Symbol Size Extended male elbow w U01 Uni1/8 Thread γ Male run tee U02 Uni1/4 connection U03 Uni3/8 Applicable tubing O.D. Symbol Size **Spare Parts** 04 ø4 How to Order Gasket 06 ø6 KQG-U01 Metric Size G For details on applicable tubing O.D. and port size combinations for each model, refer to the charts on the Gasket for Uni • Applicable port size Dimensions page. **One-touch fittings** Symbol Size U01 Uni1/8 U02 Uni1/4 U03 Uni3/8 Inch Size NPT Metric Size R, Rc Face Seal Inch Size R **Metric Size Uni** Gasket Seal

Inch Size Uni

Metric Size Uni One-touch Fittings

	pe Variations		
Hexagon socket head male connector KQ2S P.90	Internal hexagon socket allows tightening with a hexagon wrench in confined spaces.	Universal male KQ2V	e elbow P.91 Hexagon head of the body allows tightening with a box wrench in confined spaces.
45° male elbow KQ2K P.91	Use to pipe a female thread at a 45° angle. Its direction is in- between that of the male connector and male elbow.	Extended male KQ2W	e elbow P.91 Basically, it is used together with a male elbow. Its extended height allows for multi-leveled piping and prevents interference among fittings.
Male connector KQ2H P.90	Use to pipe a female thread in the same direction. Most general model.	P.92 P.92 Use to branch a female thread i same direction at a 90° angle.	in the and
Male elbow KQ2L P.90	Use to pipe a female thread at right angles. Most general model.	P.92 Use to branch a female thread a both 90° angles	at


Tubing =	Tubing 💴 🚺 灯 💶 Tubing	Accessory	Refer to page 7 and after for details.
Plug-in reducer/Plug-in elbow etc.	Union elbow/Union tee/Straight union etc.	Nipple/Plug etc.	



A Box wrenches and socket wrenches may interfere with oval type release buttons. Refer to page 217 for details.

Oval Type Applicable Tubing: Metric Size, Connection Thread: Rc, G, NPT, NPTF

Dimensions

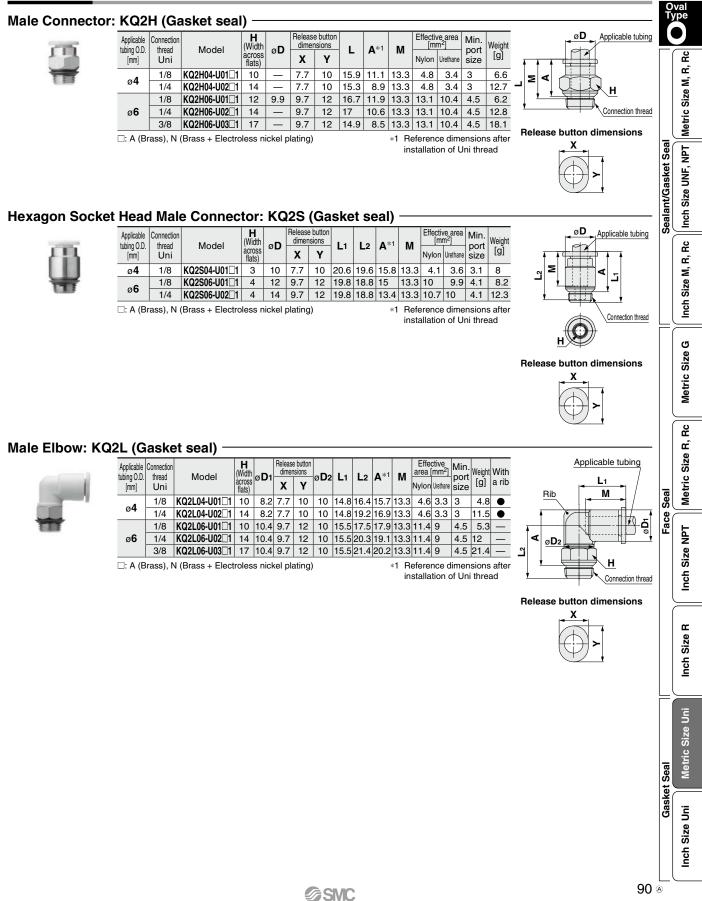

Oval Type Applicable Tubing: Metric Size, Connection Thread: Rc, G, NPT, NPTF


Dimensions

45° Male Elbow: KQ2K (Gasket seal)



Applicable tubing O.D.	Connection thread	Model	H (Width	ø D 1	Release dimer	cione	ø D 2	Lı	L2	A *1	м	Effectiv [mr	re area n²]	Min. port	weigni
[mm]	Uni	Woder	across flats)		X	Y	002		6			Nylon	Urethane		[g]
ø 4	1/8	KQ2K04-U01□1	10	8.2	7.7	10	10	14.4	12.9	20.8	13.3	4.8	3.4	4.5	4.7
Ø 4	1/4	KQ2K04-U02[]	14	8.2	7.7	10	10	14.4	14.7	21	13.3	4.8	3.4	4.5	11.3
	1/8	KQ2K06-U01□1	10	10.4	9.7	12	10	14.7	15	23.8	13.3	8.7	6.9	4.5	5.1
ø 6	1/4	KQ2K06-U02□1	14	10.4	9.7	12	10	14.7	16.8	24	13.3	8.7	6.9	4.5	11.7
	3/8	KQ2K06-U03□1	17	10.4	9.7	12	10	14.7	17.9	25.1	13.3	8.7	6.9	4.5	21.2
□: A (Br	A (Brass), N (Brass + Electroless nickel plating) *1 Reference dimensions after installation of Unitbread														


installation of Uni thread




Release button dimensions



Universal Male Elbow: KQ2V (Gasket seal)



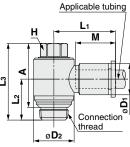

Release button dimensions


Extended Male Elbow: KQ2W (Gasket seal)



tubing O.D.	Connection thread	Model	H (Width	ø D 1	dimer		ø D 2	L1	L2	A *1	IVI	Effe area (mm ²]			With a rib
[mm]	Uni		flats)		Х	Y						Nylon	Urethane	size	[9]	and
~1	1/8	KQ2W04-U01□1	10	8.2	7.7	10	10	14.8	24.1	23.4	13.3	4	4	3	8.3	•
ø 4	1/4	KQ2W04-U02□1	14	8.2	7.7	10	10	14.8	30.1	27.8	13.3	4	4	3	23.9	
	1/8	KQ2W06-U01□1	10	10.4	9.7	12	10	15.5	31.2	31.6	13.3	10.9	8.6	4.5	11.5	—
ø 6	1/4	KQ2W06-U02□1	14	10.4	9.7	12	10	15.5	31.2	30	13.3	10.9	8.6	4.5	24.3	—
ĺ	3/8	KQ2W06-U03□1	17	10.4	9.7	12	10	15.5	32.3	31.1	13.3	10.9	8.6	4.5	41	—
	(rece)	I (Broos - Elect	roloo	o niol	ام ام	atin a)						fore		imon	oiono	ofter

□: A (Brass), N (Brass + Electroless nickel plating)

```
Reference dimensions after
installation of Uni thread
```

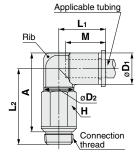


Release button dimensions



Oval Type Applicable Tubing: Metric Size, Connection Thread: Rc, G, NPT, NPTF

Dimensions

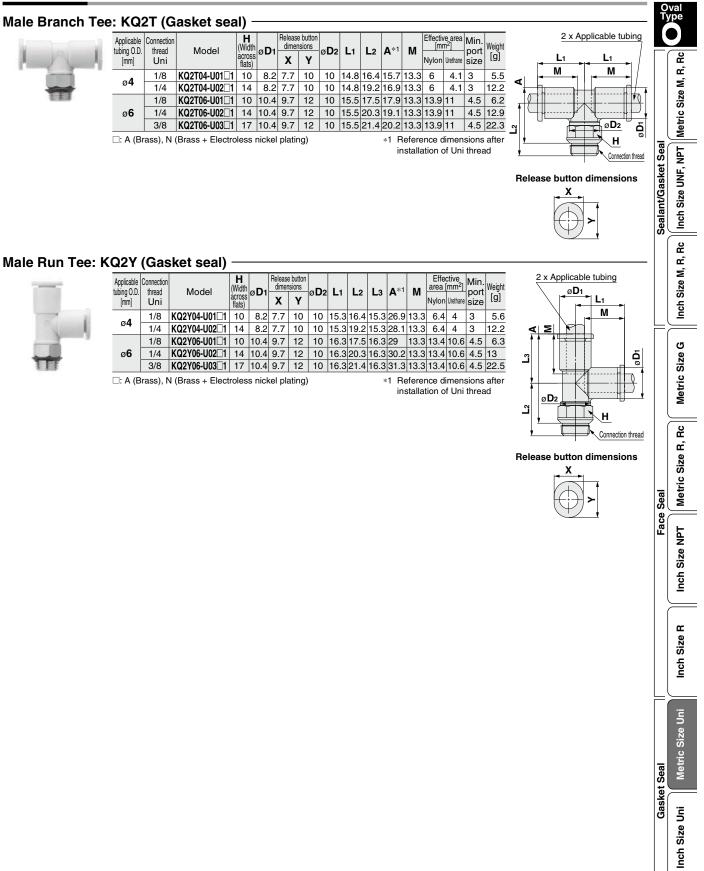

SMC

KQ2 Series Made to Order/Clean Series/Spare Parts

Please contact SMC for detailed dimensions, specifications, and lead times.

1 Made to Order

Symbol	Specifications
X12	Lubricant: White vaseline Release button color: White
X35 *1	Body color: Black Release button color: Light gray
X41	With fixed orifice ^{*2}

*1 The following models are not available as made-to-order: Hexagon socket head male connector/KQ2S, Male connector/KQ2H

*2 Please contact SMC for availability.

The following made-to-order products will be provided based on previous models (KQ2 series). Please contact SMC separately.

Symbol	Specifications
X17	Grease-free Rubber material: NBR (With fluorine coating) Release button color: Light blue
X29	Grease-free Rubber material: NBR (With fluorine coating) Release button color: Light blue Copper-free (With electroless nickel plating)
X39	Grease-free Rubber material: NBR (With fluorine coating) Release button color: Light blue Clean (Copper-free, air blow, double packaging, resin body: white)

3 Spare Parts

Description	Part no.	Applicable thread
	KQG-U01	Uni1/8
Gasket	KQG-U02	Uni1/4
	KQG-U03	Uni3/8

2 Clean Series

Please consult with SMC separately for applicable models.

	Symbol	Specifications
10- Brass parts: With electroless nickel plating Lubricant: Fluorine grease 10- Air blow in a clean room Double packaging Resin body, Release button color: White	10-	Lubricant: Fluorine grease Air blow in a clean room Double packaging


Example) 10-KQ2H06-U01N1

For Pneumatic Piping/Fittings & Tubing **Prior to Use**

Fittings with Sealant

Seal material (fluororesin) is coated on the thread part with the proper thickness and range, that reduces the piping work, such as coating the seal on the thread.



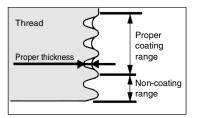

Female Thread Conditions Applicable to Face Seal

- 1. Surface roughness of bearing surface: Rz 25 or less
- 2. Chamfer dimension: øD1, Seal bearing surface diameter: øD2 (Refer to the table below.)
- 3. Female thread inclination angle: 1 $^{\circ}$ or less
- - \cdot Models with width across flats: Body width across flats x 1.1 or more
 - · Models other than hexagon (Hexagon socket head male connector etc.): Body dimensions + 0.2 mm or more
 - * The width across flats and the body dimensions differ depending on the model even when the same thread size is used. Refer to the dimensions in the catalog.

5. If oil content or sealant is sticking to the female thread, this may cause damage of the product. Remove it before piping.

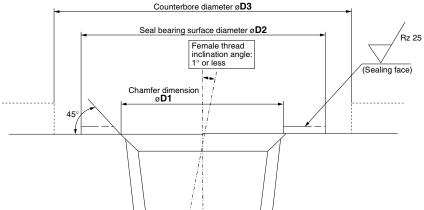


Table 1

Connection thread size	Chamfer dimension ø D1 [mm]	Seal bearing surface diameter ø D2 [mm]
R1/8	10.2 to 10.4	12 or more
R1/4	13.6 to 13.8	17 or more
R3/8	17.1 to 17.3	21 or more
R1/2	21.4 to 21.6	27 or more
NPT1/16	8.2 to 8.4	11.11 or more
NPT1/8	10.5 to 10.7	12.7 or more
NPT1/4	14.1 to 14.3	17.46 or more
NPT3/8	17.4 to 17.6	22 or more
NPT1/2	21.7 to 21.9	28.7 or more
G1/8	10.2 to 10.6	12 or more
G1/4	13.6 to 14.0	17 or more
G3/8	17.1 to 17.5	21 or more
G1/2	21.4 to 21.8	27 or more

A Precautions

For products that do not satisfy the female thread conditions shown above and the piping with a piping pitch narrower than the product dimension, use the current sealant type.

* The rubber parts of the face seal cannot be replaced.

* The rubber parts of the face seal may fall off by the air blow and they cannot be mounted again. Be careful not to perform the air blow.



Be sure to read this before handling products.

Design / Selection

MWarning

1. Confirm the specifications.

Products represented in this catalog are designed only for use in compressed air systems (including vacuum). Do not operate at pressures, temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to the specifications.)

Please contact SMC when using a fluid other than compressed air (including vacuum).

We do not guarantee against any damage if the product is used outside of the specification range.

2. Do not disassemble the product or make any modifications, including additional machining.

It may cause human injury and/or an accident.

3. Check if PTFE can be used in application.


PTFE powder (Polytetrafluoroethylene resin) is included in the sealant. Confirm that the use of it will not cause any adverse affect on the system.

≜Caution


- 1. Keep the connection part of fittings and tubing from rotating or oscillating movement. Use Rotary One-touch Fittings (KS or KX series) in these cases. The fittings may be damaged if they are used in the above manner.
- 2. The tubing bending radius in the vicinity of the fitting should be at least the minimum bending radius of the tubing.

If the bending radius is less than the minimum value, fittings may damage, or tubing may crack or be crushed. The minimum bending radius of the FR soft nylon tubing (TRS series), FR double layer tubing (TRB series), antistatic soft nylon tubing (TAS series), polyolefin tubing (TPH series), and soft polyolefin tubing (TPS series) is measured as following in accordance with JIS B 8381. Tubing deformation ratio at the minimum bending radius is obtained through the following formula, based on tubing diameter and mandrel diameter by winding the same radius mandrel tube.

$\eta = \left(1 - \frac{L - D}{2d}\right) x \ 100$



a : 1 Uping diameter [mm]
L : Measured length [mm]
D : Mandrel diameter [mm] (Twice against the minimum bending radius)
Test temperature: 20 ±5°C
Relative humidity: 65 ±5%

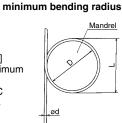

Tube deformation ratio at the

- Do not use fluids other than listed on the specifications. Applicable fluids are air and water. Please consult with SMC if using other fluids.
- 4. When it is used with water, the fittings or tubing may be damaged depending on the surge pressure.
- 5. Depending on the storage or operating environment and the period of storage or use, the surface of the brass (C3604) may blacken. If the discoloration of the brass is a problem, we recommend selecting electroless nickel-plated brass instead.

Mounting / Piping

\land Warning

1. Operation manual

Install the products and operate them only after reading the operation manual carefully and understanding its contents. Also, keep the manual where it can be referred to as necessary.

2. Maintenance space

Allow sufficient space for maintenance and inspection.

3. Adhere to the thread tightening method.

Refer to "Connection Thread Tightening Method" when mounting the product.

4. There may be cases of the tubing detaching from the fitting and thrashing around uncontrollably due to tubing degradation or fitting breakage.

To prevent the situation from becoming uncontrollable, fit the tubing with a protective cover or fix it in place.

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

2. Winding of sealant tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealant do not get inside the pipe. Also, when the sealant tape is used, leave approx. 1 thread ridge exposed at the end of the threads.



- 3. Check the model, type and size before installation. Also, confirm that there is no scratches, gouges or cracks on the product.
- 4. When connecting the tubing, take pressure or possible changes to the tubing length into account, and allow a sufficient margin.

Failure to do so may result in fitting breakage or detachment of the tubing. Refer to the recommended piping conditions.

5. Do not apply unnecessary forces such as twisting, pulling, moment loads, vibration and impact, etc. on fittings or tubing.

This will cause damage to fittings and will crush, burst or release tubing.

- 6. Tubing, with the exception of coiled tubing, requires stationary installation. Do not use standard tubing (noncoiled) in applications where tubing is required to travel inside the flexible protection tube. Tubing that travels may sustain abrasion, extension, or severance due to tensile force, or may result in removal of tubing from fitting. Use caution prior to use for proper application.
- 7. To install the fitting, screw the fitting into the hexagonal face of the body, and tighten with an appropriate wrench.

Affix the wrench at the base of the thread. If the size of hexagonal face and wrench do not match, or tightening takes place near the tube side, it may cause collapse or deformation of the hexagonal face, or damage to the equipment. After installing, confirm that there is no damage to the fitting, etc.

Example) KQ2H06-01 $\underline{N}S$





Be sure to read this before handling products.

Mounting / Piping

8. Interference in oval type release button

The following models cannot be used if a box wrench or socket wrench is used.

///		
		~ 1
	\bigcirc	

KQ2 \$	Series
Mode	Applicat

Model	Applicable tubing	Connection thread	Part number
	ø3.2	M3 x 0.5	KQ2H23-M3G1
	ø3.2	M5 x 0.8	KQ2H23-M5□1
	ø4	M3 x 0.5	KQ2H04-M3G1
	ø4	M5 x 0.8	KQ2H04-M5□1
	ø4	M6 x 1.0	KQ2H04-M6□1
	ø6	M5 x 0.8	KQ2H06-M5□1
	ø6	M6 x 1.0	KQ2H06-M6□1
Male connector	ø6	R1/8	KQ2H06-01□S1
	ø1/8	10-32UNF	KQ2H01-32□1
	ø5/32	10-32UNF	KQ2H03-32□1
	ø3/16	10-32UNF	KQ2H05-32□1
	ø5/32	NPT1/16	KQ2H03-33□S1
	ø1/8	M5 x 0.8	KQ2H01-M5□1
	ø3/16	M5 x 0.8	KQ2H05-M5□1
	ø3/16	R1/8	KQ2H05-01□S1
Female connector	ø4	M3 x 0.5	KQ2F04-M3□1
	ø4	M5 x 0.8	KQ2F04-M5□1
	ø6	M5 x 0.8	KQ2F06-M5□1
	ø1/8	10-32UNF	KQ2F01-32□1
	ø5/32	10-32UNF	KQ2F03-32□1
	ø1/8	M3 x 0.5	KQ2F23-M3□1
	ø1/8	M5 x 0.8	KQ2F23-M5□1

A (Brass), N (Brass + Electroless nickel plating)

KQ2-G Stainless Steel Series

Model	Applicable tubing	Connection thread	Part number
Mala	ø4	M5 x 0.8	KQ2H04-M5G1
Male connector	ø6	M5 x 0.8	KQ2H06-M5G1
connector	ø6	R1/8	KQ2H06-01GS1

Air Supply

Warning

1. Type of fluids

 $\label{eq:please consult with SMC when using the product in applications other than compressed air.$

Regarding products for general fluids, please contact SMC concerning applicable fluids.

2. When there is a large amount of drainage

Compressed air containing a large amount of drainage can cause malfunction of pneumatic equipment. An air dryer or water separator should be installed upstream from filters.

3. Drain flushing

If condensation in the drain bowl is not emptied on a regular basis, the bowl will overflow and allow the condensation to enter the compressed air lines. This causes the malfunction of pneumatic equipment.

If the drain bowl is difficult to check and remove, the installation of a drain bowl with an auto drain option is recommended.

Refer to "SMC Air Preparation System" for further details on compressed air quality.

4. Use clean air.

Do not use compressed air that contains chemicals, synthetic oils that include organic solvents, salt, corrosive gases, etc., as they can cause damage or malfunction.

Air Supply

≜Caution

1. Install an air filter.

Install an air filter at the upstream side of valve. Select an air filter with a filtration degree of 5 μ m or finer.

2. Install an aftercooler, air dryer or water separator, etc.

Compressed air containing a large amount of drainage can cause the malfunction of pneumatic equipment. Therefore, take appropriate measures to ensure air quality, such as by providing an aftercooler, air dryer, or water separator.

3. Ensure that the fluid and ambient temperature are within the specified range.

If the fluid temperature is 5°C or less, the moisture in the circuit could freeze, causing damage to the seals and leading to equipment malfunction. Therefore, take appropriate measures to prevent freezing.

Refer to "SMC Air Preparation System" for further details on compressed air quality.

Operating Environment

AWarning

1. Do not use in an atmosphere where corrosive gases, chemicals, sea water, water, or water steam is present. Do not use in cases where there is direct contact with any of the above.

Refer to each construction drawing on the fittings and tubing material.

- 2. Do not expose the product to direct sunlight for an extended period of time.
- 3. Do not use in a place subject to heavy vibration and/or impact.
- 4. Do not mount the product in locations where it is exposed to radiant heat.
- 5. Do not use the ordinary fittings and tubing in locations where static electricity would be problematic.

It may result in the system failure and trouble. In such places, use of antistatic fittings (KA series) and antistatic tubing (TA series) are recommended.

6. Do not use the ordinary fittings and tubing in locations where spatter is generated.

Spattering may result in a fire hazard. In such a place, use of flame resistant fittings (KR/KRM series) and flame resistant tubing (TRS/TRB/TRBU/TRTU series) are recommended.

7. Do not use in an environment where the product is directly exposed to cutting oil, lubricant, coolant oil, etc.

Please contact SMC if using for an environment exposed to cutting oil, lubricant or coolant oil, etc.

8. Take note that if nylon tubing and soft nylon tubing are used in a clean room.

The antioxidant on the surface of the soft nylon tubing may come off, thereby lowering the cleanness level.

9. Do not use in environments where foreign matter may stick to the product or get mixed in the product's interior.

This may cause leakage or disconnection of the tubing.





Be sure to read this before handling products.

Maintenance

∆Warning

1. Perform maintenance inspections according to the procedures indicated in the operation manual.

If handled improperly, malfunction and damage of machinery or equipment may occur.

2. Maintenance work

If handled improperly, compressed air can be dangerous. The assembly, handling, repair, and element replacement of pneumatic systems should be performed by a knowledgeable and experienced person.

3. Drain flushing

Remove drainage from air filters regularly.

4. Removal of equipment and supply/exhaust of compressed air

When components are removed, first confirm that measures are in place to prevent workpieces from dropping, run-away equipment, etc. Then, cut off the supply pressure and electric power, and exhaust all compressed air from the system using the residual pressure release function.

When the equipment is restarted, proceed with caution after confirming that appropriate measures are in place to prevent cylinders from sudden movement.

ACaution

- 1. Be certain to wear safety glasses at all times during periodical inspections.
- 2. Replace fittings or tubing having the following problems.
 - 1) Cracks, gouges, wearing, corrosion
 - 2) Air leakage
 - 3) Twists or crushing of tubing
 - 4) Hardening, deterioration, softening of tubing
- 3. When replacing tubes or fittings, do not try to mend or repair and then reuse them.

One-touch Fittings Mounting / Piping

≜Caution

1. Installation and removal of tubing for One-touch fittings 1) Installation of tubing

- (1) Cut the tubing perpendicularly, being careful not to damage the outside surface. Use an SMC tube cutter TK-1, 2, 3, 5 or 6. Do not cut the tubing with pliers, nippers, scissors, etc., otherwise, the tubing will be deformed and trouble may result.
- (2) The outside diameter of the polyurethane tubing swells when internal pressure is applied to it. Therefore, it may be possible that the tubing cannot be re-inserted into the Onetouch fitting. Check the tubing outside diameter, and when the accuracy of the outside diameter is +0.07 mm or larger for $\emptyset 2$, +0.15 mm or larger for other sizes, insert into the Onetouch fitting again, without cutting the tubing to use it. When the tubing is re-inserted into the One-touch fitting, confirm that the tubing goes through the release button smoothly.

One-touch Fittings Mounting / Piping

≜Caution

- (3) Grasp the tubing, slowly push it straight (0 to 5°) into the One-touch fitting until it comes to a stop.
- (4) Pull the tubing back gently to make sure it has a positive seal. Insufficient installation may cause air to leak or the tubing to release.

As a guide for checking the tubing is not pulled out, refer to the following table.

Tubing size	Tensile force of tubing [N]
ø2, 3.2, 1/8"	5
ø4, 5/32", 3/16"	8
ø6, 1/4"	12
ø8, 5/16"	20
ø10, 3/8"	30
ø12, 1/2"	35
ø16	50

2) Removal of tubing

- (1) Push the release button flange evenly and sufficiently to release the tube. Do not push in the tubing before pressing the release button.
- (2) Pull out the tubing while keeping the release button depressed. If the release button is not held down sufficiently, the tubing cannot be withdrawn.
- (3) To reuse the tubing, remove the previously lodged portion of the tubing. If the lodged portion is left on without being removed, it may result in air leakage and removal of the tubing difficult.

2. Connecting products with metal rods

Products with metal rods (KC series, previous KQ series, KN series, and KM series, etc.) cannot be connected to KQ2 series One-touch fittings. If connected, the metal rod cannot be retained by the chuck of the One-touch fitting and products with metal rods may project during pressurization, causing serious personal injury or accident.

Even when products with metal rods can be connected to other One-touch fittings, do not use any tube, resin plug, or reducer after connection. This may cause releasing.

For details about One-touch fittings that can connect products with metal rods, contact SMC.



Be sure to read this before handling products.

Connection Thread Tightening Method

1. Connection thread: M3

First, tighten by hand, then use a wrench appropriate for the hexagon flats of the body to tighten an additional 1/4 turn. A reference value for the tightening torque is 0.4 to 0.5 N·m.

2. Connection thread: M5 and 10-32UNF

First, tighten by hand, then use a wrench appropriate for the hexagon flats of the body to tighten an additional 1/6 to 1/4 turn. A reference value for the tightening torque is 1 to 1.5 N·m.

3. Connection thread: M6

First, tighten by hand, then use a wrench appropriate for the hexagon flats of the body to tighten an additional 1/6 to 1/4 turn.

 Excessive tightening may damage the thread portion or deform the gasket and cause air leakage.
 Insufficient tightening may loosen the threads, or cause air

leakage. 4. Fittings with sealant: R, NPT

1) First, tighten the fitting by hand, then use a wrench appropriate for the hexagon flats of the body to tighten it a further two or three turns.

For a tightening torque guide, see the table below.

Connection thread size (R, NPT)	Tightening torque [N·m]
1/16, 1/8	3 to 5
1/4	8 to 12
3/8	15 to 20
1/2	20 to 25

- 2) If the fitting is tightened with excessive torque, a large amount of sealant will seep out. Remove the excess sealant.
- 3) Insufficient tightening may cause seal failure, or loosen the threads.

4) Reuse

- (1) Normally, fittings with a sealant can be reused up to 2 to 3 times.
- (2) To prevent air leakage through the sealant, remove any loose sealant stuck to the fitting by blowing air over the threaded portion.
- (3) If the sealant no longer provides effective sealing, wind sealing tape over the sealant before reusing. Do not use the sealant in any form other than a tape type.
- (4) Once the fitting has been tightened, backing it out to its original position often causes the sealant to become defective. Air leakage will occur.

5. Face seal fittings: R, NPT, G

1) Tighten fittings with sealant using the proper tightening torques in the table below.

Connection thread size (R, NPT, G)	Proper tightening torque [N·m]
1/16, 1/8	3 to 5
1/4	8 to 12
3/8	15 to 20
1/2	20 to 25

2) Insufficient tightening may cause seal failure, or loosen the threads.

3) Reuse

(1) Normally, fittings with a sealant can be reused up to 6 to 10 times.

(2) The seal ring cannot be replaced.

6. Uni thread fittings

 First, tighten the threaded portion by hand, then use a proper wrench, which could be suitable for the width across flats of the hexagon body, to tighten it further at a wrench tightening angle shown below. As a reference value for the tightening torque, refer to the table below.

Connection Female Thread: Rc, NPT, NPTF

Uni thread size	Wrench tightening angle after hand-tightening [deg]	Tightening torque [N·m]
1/8	30 to 60	3 to 5
1/4	30 to 60	8 to 12
3/8	15 to 45	14 to 16
1/2	15 to 30	20 to 22

Connection Female Thread: G

Uni thread size	Wrench tightening angle after hand-tightening [deg]	Tightening torque [N·m]		
1/8	30 to 45	3 to 4		
1/4	15 to 30	4 to 5		
3/8	15 to 30	8 to 9		
1/2	15 to 30	14 to 15		

2) The gasket can be reused up to 6 to 10 times. It can be replaced easily when it has sustained damage. A broken gasket can be removed by holding it and then turning it in the same direction as loosening the thread. If gasket is difficult to remove, cut it with nippers, etc. In such a case, use caution not to scratch the seat face because the seat face of 45° gasket of fitting is the sealing face.

Chamfer Dimension for Female Thread

▲Caution

1. Chamfer dimension for female thread of the connection thread M3, M5, 10-32UNF

Confirming to ISO 16030 (air pressure fluid dynamics – connection – ports and stud ends), the chamfer dimensions shown below are recommended. By chamfering as shown in the following table, machining of threads is easier and effective for burr prevention.



Connection thread size	Chamfer dimension ø D (Recommended value) [mm]
M3	3.1 to 3.4
M5	5.1 to 5.4
10-32UNF	5.0 to 5.3

2. Chamfer dimension of R and NPT thread with sealant, and Uni thread

 D Ø
Rz 12.5

Connection	Chamfer dimension ø D (Recommended value)				
thread size	G	Rc	NPT, NPTF		
1/16	—	—	8.2 to 8.4		
1/8	10.2 to 10.6	10.2 to 10.4	10.5 to 10.7		
1/4	13.6 to 14.0	13.6 to 13.8	14.1 to 14.3		
3/8	17.1 to 17.5	17.1 to 17.3	17.4 to 17.6		
1/2	21.4 to 21.8	21.4 to 21.6	21.7 to 21.9		

* For Uni thread, Rz 12.5 is necessary for sealing at the chamfered part.




Be sure to read this before handling products.

Chamfer Dimension for Female Thread

Caution

- 3. Chamfer dimension for female thread of face seal fitting (R, NPT, G)
 - 1) Surface roughness of bearing surface: Rz 25 or less
 - 2) Chamfer dimension: øD1, Seal bearing surface diameter: øD2 (Refer to the table below.)
 - 3) Female thread inclination angle: 1° or less
 - 4) Counterbore diameter when the female thread is
 - counterbored.: øD3
 - \cdot Models with width across flats: Body width across flats x 1.1 or more
 - Models other than hexagon (Hexagon socket head male connector etc.): Body dimensions + 0.2 mm or more
 - * The width across flats and the body dimensions differ depending on the model even when the same thread size is used. Refer to the dimensions in the catalog.
 - If oil content or sealant is sticking to the female thread, this may cause damage of the product. Remove it before piping.

,	o 1	
Connection thread size	Chamfer dimension ø D1 [mm]	Seal bearing surface diameter ø D2 [mm]
R1/8	10.2 to 10.4	12 or more
R1/4	13.6 to 13.8	17 or more
R3/8	17.1 to 17.3	21 or more
R1/2	21.4 to 21.6	27 or more
NPT1/16	8.2 to 8.4	11.11 or more
NPT1/8	10.5 to 10.7	12.7 or more
NPT1/4	14.1 to 14.3	17.46 or more
NPT3/8	17.4 to 17.6	22 or more
NPT1/2	21.7 to 21.9	28.7 or more
G1/8	10.2 to 10.6	12 or more
G1/4	13.6 to 14.0	17 or more
G3/8	17.1 to 17.5	21 or more
G1/2	21.4 to 21.8	27 or more

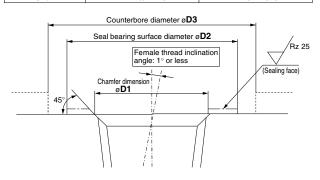

Recommended Piping Conditions

1. When connecting piping to the One-touch fitting, use pipe length with sufficient margin, in accordance with the piping conditions shown in Fig. 1.

Also, when using a tying band, etc., to bind the piping together, make sure that external force does not come to bear on the fitting. (See Fig. 2.)

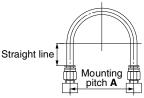


Fig. 1 Recommended piping

| Init: [mm]

				Unit. [mm]
Tubing size	Ν	Nounting pitch	4	Straight line
Tubing size	Nylon tubing	Soft nylon tubing	Polyurethane tubing	length
ø2	—	_	13 or more	10 or more
ø3.2, 1/8"	44 or more	35 or more	25 or more	16 or more
ø4, 5/32"	56 or more	44 or more	26 or more	20 or more
ø3/16"	67 or more	52 or more	38 or more	24 or more
ø6	84 or more	66 or more	39 or more	30 or more
ø1/4"	89 or more	70 or more	57 or more	32 or more
ø8, 5/16"	112 or more	88 or more	52 or more	40 or more
ø10	140 or more	110 or more	69 or more	50 or more
ø3/8"	134 or more	105 or more	69 or more	48 or more
ø12	168 or more	132 or more	88 or more	60 or more
ø1/2"	178 or more	140 or more	93 or more	64 or more
ø16	224 or more	176 or more	114 or more	80 or more

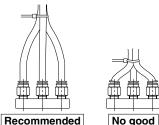


Fig. 2 When using a tying band to bind the piping together

Tubing Design / Selection

ACaution

- 1. When using a tubing other than from SMC, be careful of the tolerance of the tubing O.D. and tubing material.
 - Nylon tubing
- Within ±0.1 mm Within ±0.1 mm
 - 2) Soft nylon tubing
 3) Polyurethane tubing
 Within ±0.

3) Polyurethane tubing Within +0.15 mm, Within -0.2 mm Do not use the tubing which does not satisfy the specified tubing O.D. accuracy, or if the tubing has a different I.D., material, hardness, or surface roughness from those of SMC's tubing. Please consult SMC if there is anything unclear. It may cause difficulty in connecting the tubing, leakage, disconnection of the tubing, or fitting damage. When used with tubing other than those from SMC, due to their properties, the products listed below are not subject to warranty.

KQG2, KQB2, KFG2, KF, ø2M

2. When using fittings other than those from SMC, be certain to confirm that operating conditions are such that no problems will arise.

KQ2C Series Notes when Ordering Color Caps

In order to improve operability, the outside diameter of the release button has been enlarged for the **new KQ2** series. Therefore, the usable color caps will differ between pre-change and post-change products. Please contact SMC if anything is unclear.

Applicable Sizes and Models

	Applicable tubing O.D.	Model	
Metric size	ø8, ø10, ø12, ø16	All models*1	
Inch size	ø1/4", ø3/8", ø1/2"	All models	


*1 Excluding models without release buttons

How to Identify Release Buttons Before and After Change

The release button for both the fitting/KQ2 and color cap/KQ2C after the change can be identified by the protruding mark on the left side of the **SNC** logo, and the release button before the change has no protruding mark. The same identification method is used for metric size and inch size.

* Along with the change of the release button, the model of the color cap/KQ2C is changed from KQ2C-□A to KQ2C-□B.

* There is no change of the model for the fitting/KQ2.

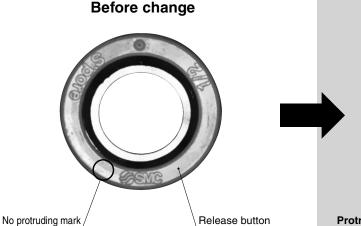

Applicable color cap

Metric Size

Applicable tubing O.D. [mm]	Model	ø D 1	ø D 2	L	Weight [g]
ø 8	KQ2C-08⊟A	12.8	9.2	2.6	0.1
ø 10	KQ2C-10□A	15.2	11.2	2.7	0.1
ø 12	KQ2C-12□A	17.6	13.2	2.7	0.1
ø 16	KQ2C-16⊟A	22.4	17.2	3.2	0.2

□: B (Black), R (Red), YR (Orange), BR (Brown), Y (Yellow), G (Green), CB (Sky blue), GR (Gray), W (White), BU (Blue)

Inch Size

Applicable tubing O.D. [inch]	Model	ø D 1	ø D 2	L	Weight [g]
ø 1/4	KQ2C-07⊟A	10.7	7.5	2.6	0.1
ø 3/8	KQ2C-11□A	14.8	10.7	2.7	0.1
ø 1/2	KQ2C-13□A	18.5	13.9	2.7	0.1

E Black), R (Red), YR (Orange), BR (Brown), Y (Yellow), G (Green), CB (Sky blue), GR (Gray), W (White), BU (Blue)

After change

Applicable color cap

Metric Size

Applicable tubing O.D. [mm]	Model	ø D 1	ø D 2	L	Weight [g]
ø 8	KQ2C-08⊟B	13.6	9.2	2.6	0.1
ø10	KQ2C-10□B	16.2	11.2	2.7	0.1
ø 12	KQ2C-12□B	18.8	13.2	2.7	0.2
ø16	KQ2C-16⊟B	24.2	17.2	3.2	0.3

□: B (Black), R (Red), YR (Orange), BR (Brown), Y (Yellow), G (Green), CB (Sky blue), GR (Gray), W (White), BU (Blue)

Inch Size

Applicable tubing O.D. [inch]	Model	ø D 1	ø D 2	L	Weight [g]
ø 1/4	KQ2C-07⊟B	11.5	7.5	2.6	0.1
ø 3/8	KQ2C-11⊡B	15.7	10.7	2.7	0.1
ø 1/2	KQ2C-13⊡B	19.6	13.9	2.7	0.2

□: B (Black), R (Red), YR (Orange), BR (Brown), Y (Yellow), G (Green), CB (Sky blue), GR (Gray), W (White), BU (Blue)

KQ2C Series Precautions for Color Caps Applicable to Products Other than the New KQ2


Please note that color cap models for products other than the New KQ2 One-touch fittings are different.

The table of applicable color caps is shown below.

Please contact SMC for any questions.

Table of Applicable Color Caps

Metric Size					-		
Description	Applicable series	Applicable tubing O.D. mm	Model	ø D 1	ø D 2	L	Weight g
		ø 3.2	KQ2C-01	9.1	4.35	2.9	0.1
Destance Marking and the	KDM	ø 4	KQ2C-04	10.1	5.2	2.9	0.1
Rectangular Multi-connector	KDM	ø 6	KQ2C-06	12.1	7.2	2.9	0.1
	DMK 0 KK2H KK2E KK2-23L 0 KK2-04L 0	ø 8	KQ2C-08	14.1	9.2	2.9	0.1
Multi-connector with	DMK	ø 3.2	KQ2C-01A-	7.35	4.2	2.5	0.1
One-touch Fittings	DIVIK	ø 4	KQ2C-04A-	8.5	5	2.2	0.1
Straight Type with One-touch Fitting KK2□-□H		ø 3.2	KQ2C-01A-	7.35	4.2	2.5	0.1
S Couplers Bulkhead Type with One-touch Fitting		ø 4	KQ2C-04A-	8.5	5	2.2	0.1
KK2□-ÜE		ø 6	KQ2C-06A-□	10.5	7	2.2	0.1
Elbow Type with One-touch Fitting	KK2□-23L	ø 3.2	KQ2C-01B-	8.8	4.2	2.5	0.1
S Couplers	KK2□-04L	ø 4	KQ2C-04B-	9.7	5	2.2	0.1
	KK2□-06L	ø 6	KQ2C-06B-	12	7	2.2	0.1
	KK3	ø 4	KQ2C-04□	10.1	5.2	2.9	0.1
		ø 6	KQ2C-06□	12.1	7.2	2.9	0.1
S Couplers	KK3, KK4	ø 8	KQ2C-08□	14.1	9.2	2.9	0.1
		ø10	KQ2C-10□	17.1	11.2	2.9	0.2
	KK4, KK6	ø 12	KQ2C-12□	19.1	13.2	2.9	0.2
		ø 4	KQ2C-04□	10.1	5.2	2.9	0.1
One-touch Fittings Manifold	КМ	ø 6	KQ2C-06□	12.1	7.2	2.9	0.1
One-touch Fittings Marinold		ø 8	KQ2C-08	14.1	9.2	2.9	0.1
		ø 10	KQ2C-10□	17.1	11.2	2.9	0.2
		ø 4	KQ2C-04	10.1	5.2	2.9	0.1
Self-seal Fittings		ø 6	KQ2C-06	12.1	7.2	2.9	0.1
	KC KS/KX	ø 8	KQ2C-08□	14.1	9.2	2.9	0.1
Rotary One-touch Fittings	NJ/NA	ø10	KQ2C-10	17.1	11.2	2.9	0.2
¥.		ø 12	KQ2C-12	19.1	13.2	2.9	0.2
		ø 4	KQ2C-04	10.1	5.2	2.9	0.1
		ø 6	KQ2C-06	12.1	7.2	2.9	0.1
Distant Madula	KD.	ø 8	KQ2C-08	14.1	9.2	2.9	0.1
Piping Module	KB	ø10	KQ2C-10	17.1	11.2	2.9	0.2
		ø 12	KQ2C-12	19.1	13.2	2.9	0.2
		ø16	KQ2C-16	26.3	17.2	3.9	0.3



: B (Black), R (Red), YR (Orange), BR (Brown), Y (Yellow), G (Green), CB (Sky blue), GR (Gray), W (White), BU (Blue)

Inch Size

Description	Applicable series	Applicable tubing O.D. Inch	Model	ø D 1	ø D 2	L	Weight g
Rectangular Multi-connector	KDM	1/8"	KQ2C-01	9.1	4.35	2.9	0.1
Rectangular Multi-connector KDM	KD M	1/4"	KQ2C-07□	12.6	7.5	2.9	0.1
	КМ	1/4"	KQ2C-07□	12.6	7.5	2.9	0.1
One-touch Fittings Manifold		3/8"	KQ2C-11	16.6	10.65	2.9	0.2
		1/2"	KQ2C-13	20.6	1.85	2.9	0.2
Batami One taugh Eittings KO	KS	1/4"	KQ2C-07□	12.6	7.5	2.9	0.1
Rotary One-touch Fittings	кЭ	3/8"	KQ2C-11	16.6	10.65	2.9	0.2

🗆: B (Black), R (Red), YR (Orange), BR (Brown), Y (Yellow), G (Green), CB (Sky blue), GR (Gray), W (White), BU (Blue)

▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)^{*1}, and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury. Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger : Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

 The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.
 Since the product specified here is used under various operating conditions.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

- *1) ISO 4414: Pneumatic fluid power General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
 - ISO 10218-1: Manipulating industrial robots Safety. etc.

Caution

 The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand

and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warrantly period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

dition B * Correction of errors in dimensions	* Addition of made to order (White vaseline, Black body)	* Number of pages increased from 88 to 124	R
* Pages 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16,	* Addition of Clean Series RS	Edition D * Addition of oval type release button	
18, 19, 20, 22, 24, 25, 26, 27, 28, 29, 38, 39,	Edition C * Addition of face seal	* Addition of products with interchangeable	
41, 49, 52, 53, 60, 68, 70	* Correction of errors in dimensions	effective area (KQ2DD-DDQD)	
* Addition of proof pressure conditions	Pages 11, 13, 15, 16, 23, 26, 40, 46, 51, 60,	* Addition of made to order	
* Change of tightening conditions (Torque, Num-	61, 104, 105	* Number of pages increased from 124 to 224	ι
ber of rotations)	* Deletion of the note about "Applicable Tubing"		
* Addition of color cap	Pages 1, 33, 57, 65, 101, 109		

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.