2-Color Display High-Precision Digital Pressure Switch



Settings can be copied to up to 10 slave sensors at once.

The settings of the master sensor can be copied to the slave sensors.

Reduced setting efforts
 Reduced chance of set-value input error










Added vacuum range.

Rated pressure range: 0.0 to -101.0 kPa



Expanded pressure range for positive-pressure type to the vacuum range.

Rated pressure range: -0.100 to 1.000 MPa

2 added outputs

- NPN or PNP open collector 2 outputs
- NPN or PNP open collector 1 output + Analog output (1 to 5 V or 4 to 20 mA)









Mounting


Bracket configuration allows mounting in four orientations.


Bracket B Mounting example

Bracket C Mounting example

Bracket B/C


Bracket A








Mountable side by side without clearance

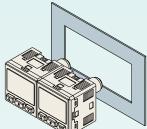

One opening!


- Reduction of panel-cut job
- Space-saving

Series

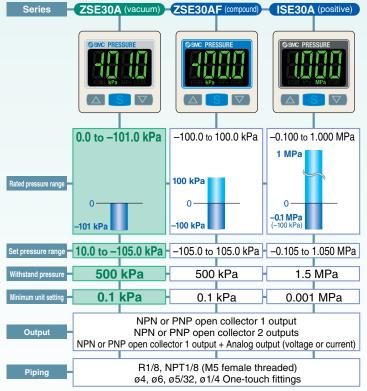


Replaceable One-touch fittings

The clip type allows easy removal of fittings. Fitting's type and size can be changed.

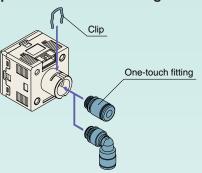

Lead wire

Added the connector cover.



4-digit display

4-digit display allows easy reading of displayed values. Example: 0.5 MPa



Possible to check set-value during key locking

Additional functions

Secret code setting function

The key locking function keeps unauthorized persons from tampering with buttons.

Power-saving function

Power consumption is reduced by turning off the monitor. (Reduce power consumption by up to 20%.)

Resolution-switch function


It reduces the monitor to flicker.




(Accuracy is not changed, only the displayed values.)

MPa/kPa switch function

Vacuum, compound and/or positive pressure can be displayed in MPa or kPa.



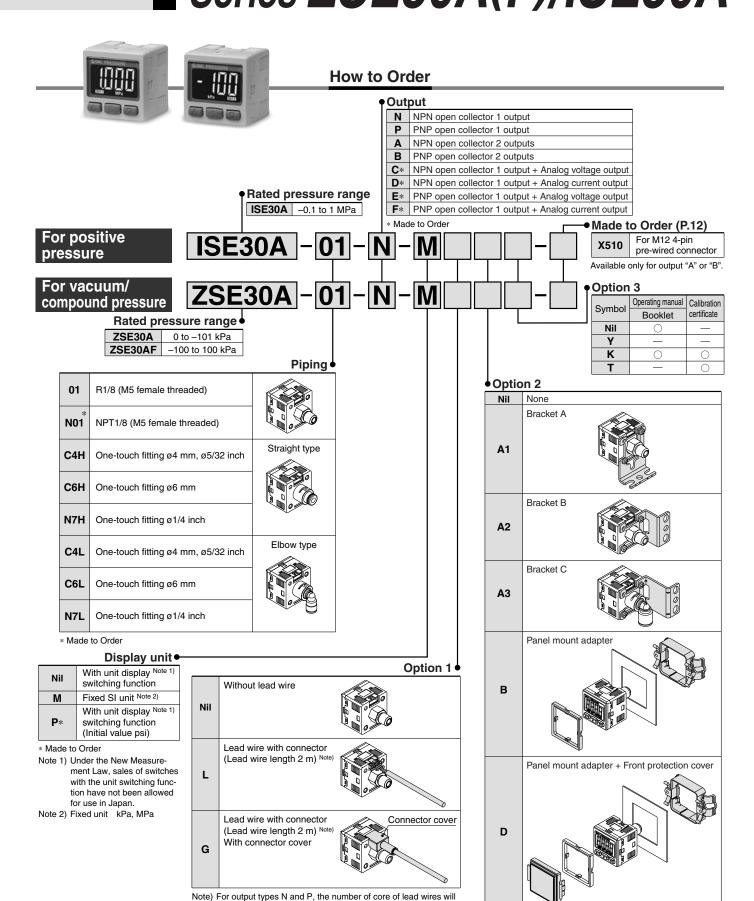



be 3, and for other types, it will be 4.

Specifications

Model			ZSE30A (Vacuum pressure)	ZSE3	0AF (Compound pressure)	ISE30A (Positive pressure)			
Rated pressure range			0.0 to -101.0 kPa		-100.0 to 100.0 kPa	-0.100 to 1.000 MPa			
Set pressure range			10.0 to -105.0 kPa		-105.0 to 105.0 kPa	-0.105 to 1.050 MPa			
Withstand pressure			500 kPa		500 kPa	1.5 MPa			
Minimum	unit settir	ng	0.1 kPa		0.1 kPa	0.001 MPa			
Applicabl	e fluid		Air, Non-corrosive gas, Non-flammable gas						
Power su	pply volta	ge	12 to 24 VDC ±10%, Ripple (p-p) 10% or less (with power supply polarity protection)						
Current c	onsumptio	on	40 mA or less						
Switch output			NPN or PNP open collector 1 output, NPN or PNP open collector 2 outputs (selectable)						
Maximum load current			80 mA						
	Maximum	n applied voltage			28 V (at NPN output)				
	Residual	voltage		1 V or le	ss (with load current of 80 mA)				
	Response	e time	2.5 ms or less (with anti-chattering function: 20, 100, 500, 1000, 2000 ms)						
	Short circ	cuit protection			Yes				
Repeatab	ility				±0.2% F.S. ±1 digit				
Hystere-	Hysteres	is mode		\/a	vriable (0 or above) Note 1)				
sis	Window comparator mode		Variable (0 or above) Note 1)						
	Note 2)	Output voltage (Rated pressure range)	1 to 5V ±2.5% F.S. 0.6 to 5 V ±2.5						
	Voltage output	Linearity	±1% F.S. or less						
Analog	Juipui	Output impedance							
output	Note 3)	Output current (Rated pressure range)	4 to 20 mA ±2.5% F.S. 2.4 to 20 mA ±2.						
ou.pu.	Current	Linearity	±1% F.S. or less						
	output	Load impedance	Maximum load impedance: Power supply voltage 12 V: 300 $\Omega,$ Power supply voltage 24 V: 600 Ω Minimum load impedance: 50 Ω						
Display			4-digit, 7-segment, 2-color LCD (Red/Green)						
Display a	ccuracy		±2% F.S. ±1 digit (Ambient temperature of 25 ±3°C)						
Indicator	light		Lights up when switch output is turned ON. OUT1: Green, OUT2: Red						
	Enclosi	ure	IP40						
	Operati	ng temperature range							
Environ-	Operati	ng humidity range	Operating/Stored: 35 to 85% RH (No condensation)						
ment		ind voltage	1000 VAC for 1 minute between live parts and case						
resistance	e Insulati	on resistance	$50~\text{M}\Omega$ or more between live parts and case (at 500 VDC Mega)						
	Vibratio	on resistance	10 to 150 Hz at whichever is smaller of 1.5 mm amplitude or 20 m/s ² acceleration, in X, Y, Z directions, for 2 hours each (Non-energized)						
	Impact	resistance	100 m/s ² in X, Y, Z directions, 3 times each (Non-energized)						
Temperature characteristics			±2% F.S. (Based on 25°C)						
Lead wire			Oilproof heavy-duty vinyl cable, 3 cores ø3.5, 2 m 4 cores Conductor area: 0.15 mm² (AWG26), Insulator O.D.: 1.0 mm						
Standards			CE Marking, UL/CSA, RoHS compliance						
		6	and the state of t		to a second objects of a second				

Note 1) If applied pressure fluctuates near the set value, set the hysteresis above the fluctuation range to prevent chattering.

Piping Specifications

Model		01	N01	C4H	C6H	N7H	C4L	C6L	N7L
Port size		R1/8 M5 x 0.8	NPT1/8 M5 x 0.8	_	_	_	_	_	_
	One-touch fitting, Straight type	_	_	ø4 mm ø5/32 inch	ø6 mm	ø1/4 inch	_	_	_
	One-touch fitting, Elbow type	_	_	_	_	_	ø4 mm ø5/32 inch	ø6 mm	ø1/4 inch
Wetted	parts C3602 (electroless nickel pla		Sensor pressure receiving area: Silicon						
parts material			' '	PBT, POM, Stainless steel 304, C3604 (electroless nickel plated) O-ring: NBR					ed)
	Including lead wire with connector (3 cores, 2 m)	81	g	70 g	71 g	73 g	75 g	73 g	75 g
Weight	Including lead wire with connector (4 cores, 2 m)	85 g		74 g	75 g	77 g	79 g	77 g	79 g
	Excluding lead wire with connector	43 g		32 g	33 g	35 g	37 g	35 g	37 g

Optional Part No.

When optional parts are required separately, use the following part numbers to place an order.


Part no.	Option	Note		
ZS-38-A1	Bracket A	Mounting screw (with 2 pcs. of M3 x 5L)		
ZS-38-A2	Bracket B	Mounting screw (with 2 pcs. of M3 x 5L)		
ZS-38-A3 Bracket C		Mounting screw (with 2 pcs. of M3 x 5L)		
ZS-27-C Panel mount adapter		Mounting screw (with 2 pcs. of M3 x 8L)		
ZS-27-D	Panel mount adapter + Front protection cover	Mounting screw (with 2 pcs. of M3 x 8L)		
ZS-27-01	Front protection cover			
ZS-38-3L	Lead wire with connector	3 cores, for 1 output, 2 m		
ZS-38-4L	Lead wire with connector	4 cores, for 2 outputs, 2 m		
ZS-38-3G Lead wire with connector (with connector cover)		3 cores, for 1 output, 2 m		

Part no.	Option	Note	
ZS-38-4G	Lead wire with connector (with connector cover)	4 cores, for 2 outputs, 2 m	
ZS-38-5L	Lead wire with a connector for copying	3 cores, copy function, 1 m	
ZS-38-U	Lead wire unit with a connector for copying	Copy function (up to 10 slaves)	
ZS-38-C4H	One-touch fittings ø4 mm straight	O-ring, one-touch clip included	
ZS-38-C6H	One-touch fittings ø6 mm straight	O-ring, one-touch clip included	
ZS-38-N7H	One-touch fittings ø1/4 inch straight	O-ring, one-touch clip included	
ZS-38-C4L	One-touch fittings ø4 mm elbow	O-ring, one-touch clip included	
ZS-38-C6L	One-touch fittings ø6 mm elbow	O-ring, one-touch clip included	
ZS-38-N7L	One-touch fittings ø1/4 inch elbow	O-ring, one-touch clip included	



Note 2) When analog voltage output is selected, analog current output cannot be used together. Note 3) When analog current output is selected, analog voltage output cannot be used together.

Analog Output

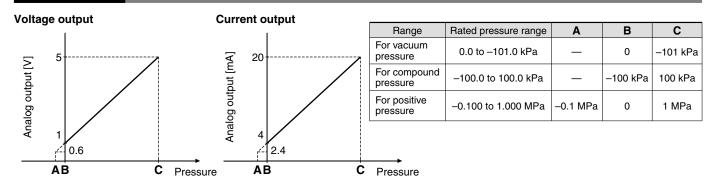

S

Descriptions

Unit display

Displays present unit (only for units of kPa and MPa).

Output (OUT1) display (Green)

Lights up when switch output (OUT1) is turned ON.

△ button (UP)

Use this button to select the mode or increase the $\ensuremath{\mathsf{ON}}/\mathsf{OFF}$ set-value.

It is also used for switching to the peak display mode.

S button (SET)

Use this button to change the mode or confirm the set-value.



Displays the current pressure, set mode, and error code. Always use red or green display; or switch between green and red according to the output. Four different display settings are available.

Output (OUT2) display (Red)

Lights up when switch output (OUT2) is turned ON.

▽ button (DOWN)

Use this button to select the mode or decrease the ON/OFF set-value.


It is also used for switching to the bottom display mode.

Functions (Refer to pages 10 and 11 for details.)

Copy function	Copies the settings of the master sensor to the slave sensors.			
Auto-preset function	Calculates and enters rough set values automatically from the actual operating conditions.			
Precision indicator setting function	Evens out deviations in the displayed value.			
Peak display function	Can retain the maximum pressure value displayed during measurement.			
Bottom display function	Can retain the minimum pressure value displayed during measurement.			
Key lock function (Security code input can be selected.)	The key board can be locked to prevent any incorrect function of the operation switch.			
Zero-out function	The pressure display can be set at zero when the pressure is open to the atmosphere.			
Anti-chattering function	Prevents possible malfunction due to sudden fluctuations in the primary pressure by adjusting the response time.			
Unit display switching function	Can convert the display value.			
Power-saving mode	Reduces power consumption.			
Display resolution-switch function	Converts display resolution from the normal value of 1/1000 to 1/100. It reduces the monitor to flicker.			
kPa⇔MPa switch function	Converts the unit between kPa and MPa.			




Internal Circuits and Wiring Examples






NPN (1 output)

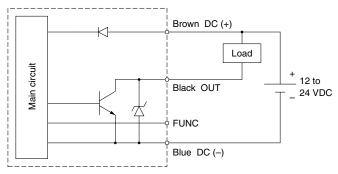

Max. 28 V, 80 mA Residual voltage 1 V or less

P


PNP (1 output)

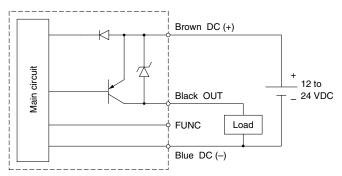

Max. 80 mA Residual voltage 1 V or less




NPN (2 outputs)

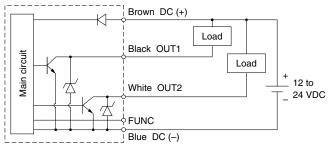

Max. 28 V, 80 mA Residual voltage 1 V or less



PNP (2 outputs)

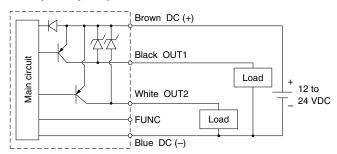


Max. 80 mA Residual voltage 1 V or less

* The FUNC terminal is connected using a dedicated lead wire (ZS-38-5L or ZS-38-U) when the copy function is used. (Refer to "Copy function" on page 10.)



NPN (1 output) + Analog voltage output

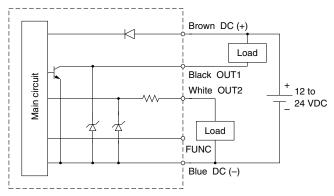


Max. 28 V, 80 mA Residual voltage 1 V or less

Analog voltage output Output impedance: Approx. 1 $k\Omega$

Е

PNP (1 output) + Analog voltage output

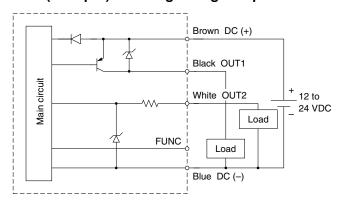


Max. 80 mA Residual voltage 1 V or less

Analog voltage output Output impedance: Approx. 1 $k\Omega$



NPN (1 output) + Analog current output

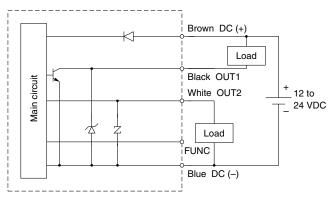


Max. 28 V, 80 mA Residual voltage 1 V or less

Analog current output Max. load impedance:

Power supply voltage 12 V: 300 Ω Power supply voltage 24 V: 600 Ω Min. load impedance: 50 Ω



PNP (1 output) + Analog current output

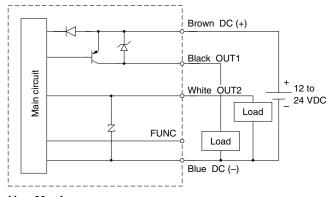

Max. 80 mA Residual voltage 1 V or less


Analog current output Max. load impedance:

Power supply voltage 12 V: 300 Ω Power supply voltage 24 V: 600 Ω Min. load impedance: 50 Ω





^{*} The FUNC terminal is connected using a dedicated lead wire (ZS-38-5L or ZS-38-U) when the copy function is used. (Refer to "Copy function" on page 10.)

Dimensions




01 / N01

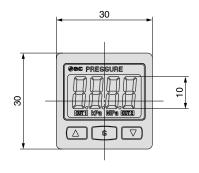

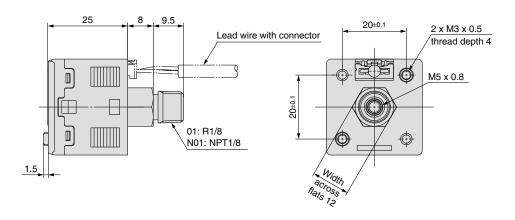


C4H

One-touch fitting ø4 mm ø5/32 inch straight

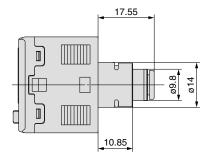


С6Н

One-touch fitting ø6 mm straight

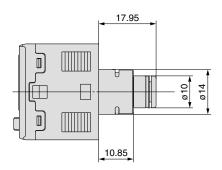


N7H

One-touch fitting ø1/4 inch straight

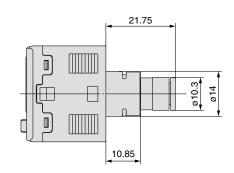


C4L

One-touch fitting ø4 mm ø5/32 inch elbow

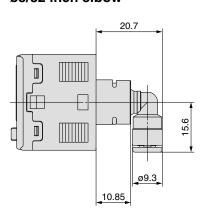


C6L

One-touch fitting ø6 mm elbow

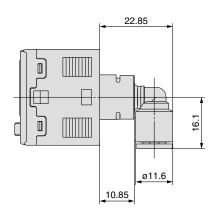

N7L

One-touch fitting ø1/4 inch elbow

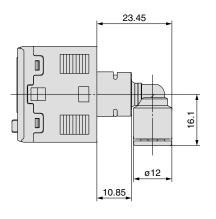












Bracket A


(Option unit part no.: ZS-38-A1)

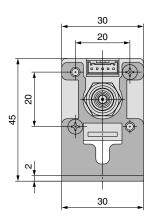

Option 2

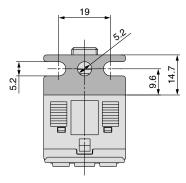

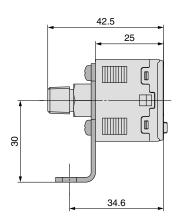

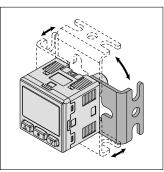

* Bracket configuration allows mounting in four orientations.


Bracket B


(Option unit part no.: ZS-38-A2)




Bracket C

(Option unit part no.: ZS-38-A3)

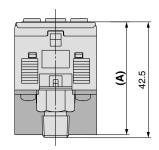


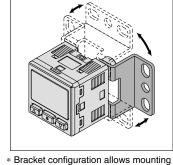

in four orientations.

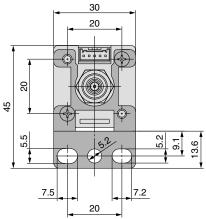


SMC

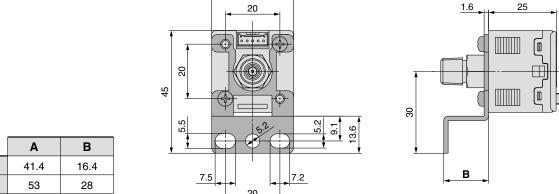

Dimensions


Panel mount








Panel mount adapter

(Option unit part no.: ZS-27-C)

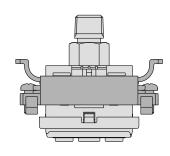

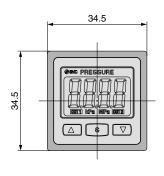


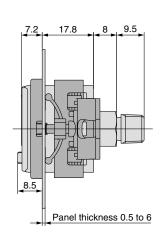


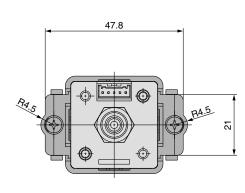



Panel mount adapter + Front protection cover (Option unit part no.: ZS-27-D)

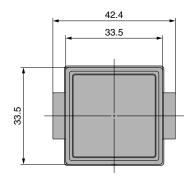


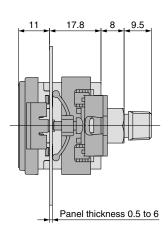


Panel-cut dimensions





Multiple (2 pcs. or more) horizontal mounting

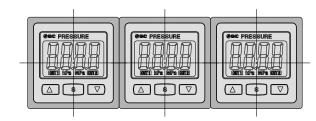

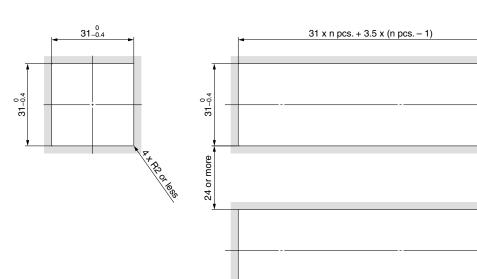

Multiple (2 pcs. or more) vertical mounting

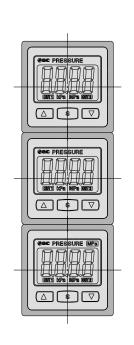

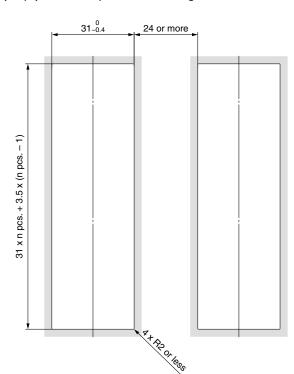



Function Details


A Copy function (F97)


The settings of the master sensor can be copied to the slave sensors.

It is to reduce the time taken for setting and prevent the input of wrong values.

Settings can be copied to up to 10 slave sensors at once.

(Max. transmission distance: 4 m)



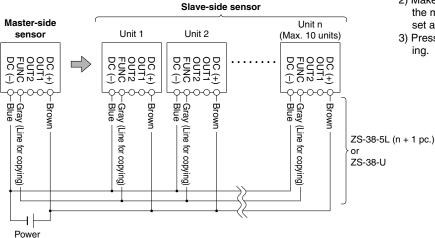


- The sensors are connected by a dedicated lead wire (ZS-38-5L (for master and one slave) or ZS-38-U (for master and up to 10 slaves)). Copying is performed through a dedicated communication line.
- Make the slave sensor which needs to be the master into the master by button operation. (Initially all sensors are set as slaves.)
- Press the S button on the master sensor to start copying.

B Auto-preset function (F5)

Auto-preset function, when selected in the setting, calculates and stores the set-value from the measured pressure.


The optimum set-value is determined automatically by repeating vacuum and break with the target workpiece several times.

Suction Verification

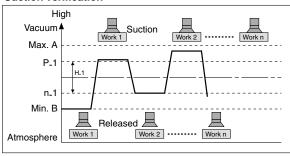

C Precision indicator setting function (F6)

Fine adjustment of the indicated value of the pressure sensor can be made within the range of $\pm 5\%$ of the read value. The scattering of the indicated value can be eliminated.

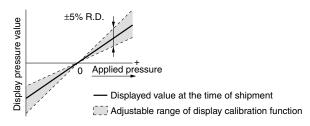

Note) When the precision indicator setting function is used, the set pressure value may change ± 1 digit.

Formula for Obtaining the Set-Value

P_1 or P_2	H_1 or H_2
P_1 (P_2) = A - (A-B)/4 n_1 (n_2) = B + (A-B)/4	H_1 (H_2) = (A-B)/2

D Peak and bottom display function

This function constantly detects and updates the maximum (minimum) value and allows to hold the maximum (minimum) pressure value

When the \triangle ∇ buttons are simultaneously pressed for 1 second or longer, while "holding", the held value will be reset.

E Key lock function

This function prevents incorrect operations such as accidentally changing the set-value.

E Zero-out function

This function clears and resets the zero value on the display of measured pressure.

For the pressure switch with analog output, the analog output shifts according to the indication. A displayed value can be adjusted within $\pm 7\%$ F.S. of the pressure when ex-factory. ($\pm 3.5\%$ F.S. for ZSE30AF (compound pressure))



 $\mathsf{F}\square$ in brackets stand for the function codes. Refer to the operating manual for how to operate and function codes in detail.

G Error indication function

Error name	Error code	Description	Solution		
Overcurrent	Er 1	Load current of switch output (OUT1) exceeds 80 mA.	Shut off the power supply. After eliminating the out-		
error	ErZ	Load current of switch output (OUT2) exceeds 80 mA.	put factor that caused the excess current, turn the power supply back on.		
Residual pressure error Table 2 Zero-out function. (±3.5% F.S. or more for ZSE30AF (compour pressure)) The switch will automatically return to measuring mode in 1 se		The switch will automatically return to measuring mode in 1 second, however. Due to individual product differences, the setting	Bring the pressure back to atmospheric pressure and try using the zero-out function.		
Applied	HHH	Supply pressure exceeds the maximum set pressure.	Bring the pressure back to within the set pressure		
pressure error	LLL	Supply pressure is below the minimum set pressure.	range.		
	ErO				
	Ery				
System error	Er5	Internal data error	Shut off the power supply. Turn the power supply		
	Er 7	internal data enoi	back on. If the switch will not recover to normal, consult SMC for investigation.		
	Er8				
	E-9				

If the switch will not recover to normal even after all of the above-mentioned solutions have been applied, consult SMC for investigation.


H Anti-chattering function (F3)

A large bore cylinder or ejector consumes a large volume of air in operation and may experience a temporary drop in the supply pressure. This function prevents detection of such temporary drops in the supply pressure as an error.

Available response time settings
20 ms, 100 ms, 500 ms, 1000 ms, 2000 ms

Principle

This function averages pressure values measured during the response time set by the user and then compares the average pressure value with the pressure set point value to output the result on the switch.

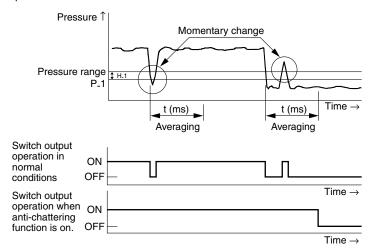

Unit display switching function (F0)

Display units can be switched with this function.

Display unit	PA		GF	bAr	PSi	inH	mmH
Min. unit setting	kPa	MPa*	kgf/cm ²	bar	psi	inHg	mmHg
ZSE30A (Vacuum pressure)	0.1	0.001	0.001	0.001	0.01	0.1	1
ZSE30AF (Compound pressure)	0.1	0.001	0.001	0.001	0.01	0.1	1
ISE30A (Positive pressure)	1	0.001	0.01	0.01	0.1		

^{*} For the ZSE30A (vacuum pressure) and ZSE30AF (compound pressure), when the display unit is MPa, setting and display resolutions are changed.

J Power-saving mode (F7)

Power-saving mode can be selected.

It shifts to the power-saving mode without button operation for 30 seconds. It is set to the normal mode (Power-saving mode is OFF.) when ex-factory. (Decimal points and operation indicator light (only when the switch output is turned ON.) blink in the power-saving mode.)

K Secret code setting (F8)

It can be set whether code number input is required or not when key is locked. It is set to input no code number when ex-factory.



Series ZSE30A(F)/ISE30A Made to Order


Please contact SMC for detailed dimensions, specifications, and lead times.




M12 4-pin pre-wired connector (Lead wire length 100 mm)


X510

How to Order




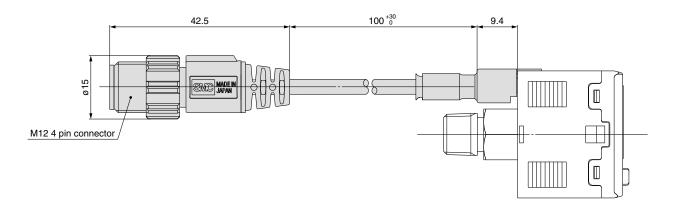

Option cable ZS-38-4GM12

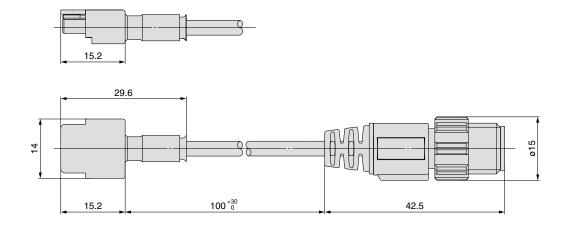

Connector pin numbers



Pin no.	Pin description
1	DC (+)
2	OUT (2)
3	DC (-)
4	OUT (1)





Series ZSE30A(F)/ISE30A Specific Product Precautions 1

Be sure to read this before handling.

Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Pressure Switches Precautions.

Handling

⚠ Warning

- 1. Do not drop, bump, or apply excessive impacts (100 m/s²) while handling. Although the body of the sensor may not be damaged, the internal parts of the sensor could be damaged and lead to a malfunction.
- The tensile strength of the cord is 35 N. Applying a greater pulling force on it can cause a malfunction. When handling, hold the body of the sensor—do not dangle it from the cord.
- 3. Do not exceed the screw-in torque of 7 to 9 N·m when connecting the pipe to the switch. Exceeding these values may cause the switch to malfunction.
- 4. Do not use pressure sensors with corrosive and/or flammable gases or liquids.
- Allow a sufficient margin of tube length in piping in order to prevent application of torsional, tensile or moment load to the tubes and fittings.
- 6. When a brand of tubing other than SMC is used, make sure that the tolerance of the tube's O.D. satisfies the following specifications.
 - 1) Nylon tubing: ±0.1 mm or less
 - 2) Soft nylon tubing: ±0.1 mm or less
 - 3) Polyurethane tubing: +0.15 mm or less, -0.2 mm or less
- 7. The applicable fluid is air. Consult SMC if the switch is to be used with other types of fluids.

Connection

⚠ Warning

- 1. Incorrect wiring can damage the switch and cause a malfunction or erroneous switch output. Connections should be done while the power is turned off.
- Do not attempt to insert or pull the pressure sensor or its connector when the power is on. A switch output malfunction may occur.

⚠ Caution

- Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Malfunctions may occur due to noise from these other lines.
- 2. If a commercial switching regulator is used, make sure that the F.G. terminal is grounded.

Operating Environment


- This pressure switch is CE marked; however, it is not equipped with surge protection against lightning. Lightning surge countermeasures should be applied directly to system components as necessary.
- 2. This pressure switch does not have an explosion proof rating. Never use in the presence of an explosive gas as this may cause a serious explosion.
- 3. Do not use in an environment where static electricity can cause problems, otherwise system failure or malfunction may result.

Back page 1

Mounting


⚠ Caution

1. Mounting and removing with panel mount adapter

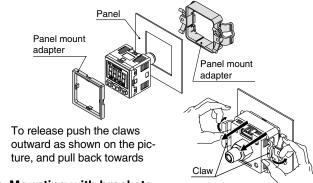

2. Mounting with brackets


 Mount a bracket to the using two M3 x 5L mounting screws and install on piping. The switch can be installed horizontally depending on the installation location.



When using bracket B, take piping dimensions into consideration for installation.

Connection/Removal of Connector


- To connect the connector, insert it straight while pinching the lever, and then push the lever into the jack of the housing and lock it.
- To remove the connector, pull it straight out while applying pressure with your thumb to the lever and unhooking it from the jack.



 Do not attempt to insert or pull the pressure sensor or its connector when the power is on. A switch output malfunction may occur.

Piping

- Cut the tube perpendicularly.
- Hold the tube and insert it into the One-touch fitting carefully and securely all the way to the bottom.

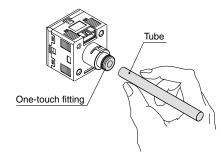



Series ZSE30A(F)/ISE30A Specific Product Precautions 2

Be sure to read this before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Pressure Switches Precautions.

Set Pressure Range and Rated Pressure Range


A Caution

Set the pressure within the rated pressure range.

The set pressure range is the range of pressure that is possible in setting.

The rated pressure range is the range of pressure that satisfies the specifications (accuracy, linearity, etc.) on the switch.

Although it is possible to set a value outside the rated pressure range, the specifications will not be guaranteed even if the value stays within the set pressure range.

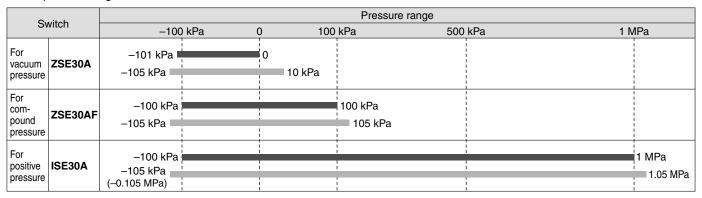

Rated pressure range of switch
Set pressure range of switch



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury.

⚠ Danger :

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*2)
 - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Revision history

Edition B * Addition of Bracket C to options.

* Addition of Made to Order (M12 4-pin pre-wired connector (X510)).

ΟZ

Safety Instructions Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

SMC Corporation

Akihabara UDX 15F

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN

Phone: 03-5207-8249 Fax: 03-5298-5362

URL http://www.smcworld.com

© 2010 SMC Corporation All Rights Reserved