

Single Display PID Temperature Controllers

TC Series INSTRUCTION MANUAL

DRW170775AC

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- △ symbol indicates caution due to special circumstances in which hazards may occur.

△ Warning

Failure to follow instructions may result in serious injury or death

01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)

Failure to follow this instruction may result in personal injury, economic loss or fire.

02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. Install on a device panel to use.

Failure to follow this instruction may result in fire or electric shock.

04. Do not connect, repair, or inspect the unit while connected to a power source.

Failure to follow this instruction may result in fire or electric shock.

05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire.

06. Do not disassemble or modify the unit.

Failure to follow this instruction may result in fire or electric shock.

△ Caution

Failure to follow instructions may result in injury or product damage

01. When connecting the power input and relay output, use AWG 20 (0.50 mm²) cable or over and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N m.

When connecting the sensor input and communication cable without dedicated cable, use AWG 28 to 16 cable and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N m.

Failure to follow this instruction may result in fire or malfunction due to contact failure.

02. Use the unit within the rated specifications.

Failure to follow this instruction may result in fire or product damage

03. Use a dry cloth to clean the unit, and do not use water or organic solvent.

Failure to follow this instruction may result in fire or electric shock.

04. Keep the product away from metal chip, dust, and wire residue which flow into the unit.

Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor. For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length. For thermocouple (TC) temperature sensor, use the designated compensation wire for extending wire.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line. Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
- When changing the input sensor, turn off the power first before changing. After changing the input sensor, modify the value of the corresponding parameter.
- 24 VAC~, 24-48 VDC: power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Make a required space around the unit for radiation of heat. For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude Max. 2,000 m
 - Pollution degree 2
 - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations.
For selecting the specified model, follow the Autonics website.

T	C	4	①	-	②	③	④
---	---	---	---	---	---	---	---

① Size

S: DIN W 48 × H 48 mm
SP: DIN W 48 × H 48 mm (11 pin plug type)
Y: DIN W 72 × H 36 mm
M: DIN W 72 × H 72 mm
H: DIN W 48 × H 96 mm
W: DIN W 96 × H 48 mm
L: DIN W 96 × H 96 mm

② Power supply

2: 24 VAC~ 50/60 Hz, 24-48 VDC:=
4: 100-240 VAC~ 50/60 Hz

③ Control output

N: Indicator - without control output
R: Relay + SSR drive

④ Alarm output

N: No alarm

1: 1 alarm

2: 2 alarm

Product Components

- Product
- Instruction manual

Sold Separately

- 11 pin socket: PG-11, PS-11 (N)
- Terminal protection cover: RSA / RMA / RHA / RLA Cover

Specifications

Series	TC4□-□2□	TC4□-□4□
Power supply	24 VAC~ 50/60 Hz ±10% 24-48 VDC: ±10%	100 - 240 VAC~ 50/60 Hz ±10%
Power consumption	AC: ≤ 5 VA, DC: ≤ 3 W	≤ 5 VA
Sampling period	100 ms	
Input specification	Refer to 'Input Type and Using Range'.	
Control output	Relay SSR	250 VAC~ 3 A, 30 VDC: 3 A, 1a 12 VDC: ±2 V, ≤ 20 mA
Alarm output		250 VAC~ 1 A 1a
Display type	7 Segment (red, green, yellow), LED type	
Control type	Heating, Cooling	ON/OFF, P, PI, PD, PID Control
Hysteresis	1 to 100 (0.1 to 50.0) °C/F	
Proportional band (P)	0.1 to 999.9 °C/F	
Integral time (I)	0 to 9,999 sec	
Derivative time (D)	0 to 9,999 sec	
Control cycle (T)	0.5 to 120.0 sec	
Manual reset	0.0 to 100.0%	
Relay life cycle	Mechanical Electrical	OUT1/2, AL1/2: ≥ 5,000,000 operations OUT1/2: ≥ 200,000 operations (load resistance: 250 VAC~ 3A) AL1/2: ≥ 300,000 operations (load resistance: 250 VAC~ 1 A)
Dielectric strength		Between input terminal and power terminal: 1,000 VAC~ 50/60 Hz for 1 min Between input terminal and power terminal: 2,000 VAC~ 50/60 Hz 1 min
Vibration		0.75 mm amplitude at frequency 5 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours
Insulation resistance	≥ 100 MΩ (500 VDC: megger)	
Noise immunity	Square shaped noise (pulse width: 1 μs) by noise simulator ±2 kV R-phase, S-phase	
Memory retention	≈ 10 years (non-volatile semiconductor memory type)	
Ambient temperature	-10 to 50 °C, storage: -20 to 60 °C (no freezing or condensation)	
Ambient humidity	35 to 85%RH, storage: 35 to 85%RH (no freezing or condensation)	
Insulation type	Mark: □, double or reinforced insulation (dielectric strength between the measuring input part and the power part: 1 kV) Mark: □, double or reinforced insulation (dielectric strength between the measuring input part and the power part: 2 kV)	
Approval	CE, FCC, EAC	
Unit weight (packaged)	• TC4S: ≈ 94 g (≈ 141 g) • TC4Y: ≈ 85 g (≈ 174 g) • TC4W: ≈ 122 g (≈ 194 g) • TC4L: ≈ 155 g (≈ 254 g)	• TC4P: ≈ 76 g (≈ 123 g) • TC4M: ≈ 133 g (≈ 204 g) • TC4H: ≈ 122 g (≈ 194 g)

Input Type and Using Range


The setting range of some parameters is limited when using the decimal point display.

Input type	Decimal point	Display	Using range (°C)	Using range (°F)
Thermo -couple	K (CA)	1	RCR	-50 to 1,200
	J (IC)	1	JIC	-30 to 500
	L (IC)	1	LIC	-40 to 800
RTD	Cu50 Ω	1	CUS.H	-50 to 200
		0.1	CUS.L	-50.0 to 200.0
	DPt100 Ω	1	DP.T.H	-100 to 400
		0.1	DP.T.L	-100.0 to 400.0

Display accuracy

Input type	Using temperature	Display accuracy
Thermo -couple	At room temperature (23°C ± 5°C)	(PV ±0.5% or ±1 °C higher one) ±1-digit • Thermocouple L, RTD Cu50 Ω: (PV ±0.5% or ±2 °C higher one) ±1-digit
	Out of room temperature range	(PV ±0.5% or ±2 °C higher one) ±1-digit • Thermocouple L, RTD Cu50 Ω: (PV ±0.5% or ±3 °C higher one) ±1digit
RTD		• In case of TC4SP Series, ±1°C will be added.

Unit Descriptions

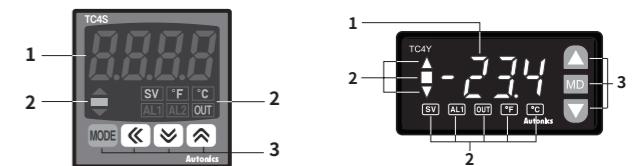

1. Temperature Display part (Red)

- Run mode: Displays PV (Present value).
- Setting mode: Displays parameter name, setting value.

2. Indicator


Display	Name	Description
▲	Deviation	Displays PV deviation based on SV (Setting value) by LED. ▲: ON when deviation is over +2 °C ■: ON when deviation is within ±2 °C ▼: ON when deviation is under -2 °C Flashes during auto tuning every 1 sec
SV	Setting value	Turns ON when SV is displayed on temperature display part.
°C, °F	Temperature unit	Displays selected unit (parameter).
AL1/2	Alarm output	Turns ON when each alarm output is ON.
OUT	Control output	Turns ON when control output is ON. • CYCLE/PHASE control of SSR drive output: Turns ON when MV is over 3.0%. (only for AC power model)

Errors

Display	Description	Troubleshooting
OPEn	Flashes when input sensor is disconnected or sensor is not connected.	Check input sensor status.
HHHH	Flashes when PV is higher than input range.	When input is within the rated input range, this display disappears.
LLL	Flashes when PV is lower than input range.	


Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.
- Below is based on TC4S Series.

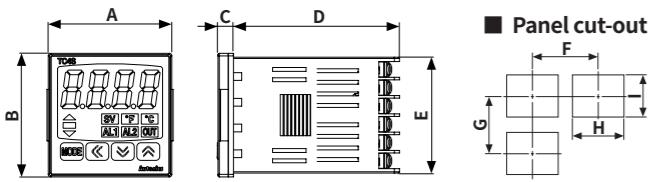

Series	Body				Panel cut-out				
	A	B	C	D	E	F	G	H	I
TC4S	48	48	6	64.5	45	≥ 65	≥ 65	$45^{+0.5}_{-0}$	$45^{+0.5}_{-0}$
TC4SP	48	48	6	72.2	45	≥ 65	≥ 65	$45^{+0.5}_{-0}$	$45^{+0.5}_{-0}$
TC4Y	72	36	7	77	30	≥ 91	≥ 40	$68^{+0.7}_{-0}$	$31.5^{+0.5}_{-0}$
TC4W	96	48	6	64.5	44.7	≥ 115	≥ 65	$92^{+0.8}_{-0}$	$45^{+0.6}_{-0}$
TC4M	72	72	6	64.5	67.5	≥ 90	≥ 90	$68^{+0.7}_{-0}$	$68^{+0.7}_{-0}$
TC4H	48	96	6	64.5	91.5	≥ 65	≥ 115	$45^{+0.6}_{-0}$	$92^{+0.8}_{-0}$
TC4L	96	96	6	64.5	91.5	≥ 115	≥ 115	$92^{+0.8}_{-0}$	$92^{+0.8}_{-0}$

Bracket

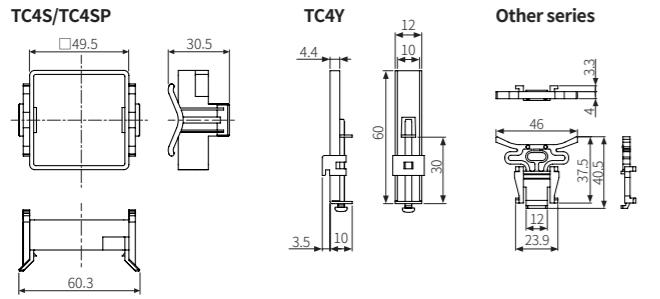


Installation Method

- TC4S**: Flathead screwdriver
 - TC4Y**: Crosshead screwdriver
 - Other series**: Flathead screwdriver
- Mount the product to panel with bracket, push it to arrow direction by using screw driver.
• In case of TC4Y Series, fasten the bolts.

Crimp Terminal Specifications

- Unit: mm, Use the crimp terminal of follow shape.

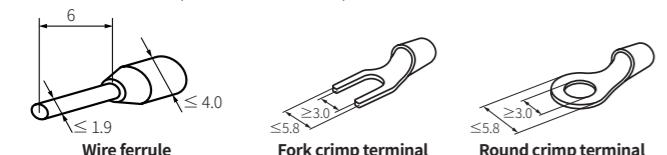

Connections

TC4S

