DRW200893AA Autonics

Rectangular Inductive Proximity Sensors



PFI Series (AC 2-wire)

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- Flat, compact design (10 mm height) allows easy installation in limited spaces
- Excellent noise immunity with specialized sensor IC
- Built-in surge protection circuit, output short over current protection circuit, reverse polarity protection
- Operation indicator (red LED)
- Durable and reliable alternative to micro switches and limit switches
- IP67 protection structure (IEC standard)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ▲ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. Do not disassemble or modify the unit.

Failure to follow this instruction may result in fire or electric shock.

04. Do not connect, repair, or inspect the unit while connected to a power source.

Failure to follow this instruction may result in fire or electric shock.

05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire or electric shock.

▲ Caution Failure to follow instructions may result in injury or product damage.

01. Use the unit within the rated specifications.

Failure to follow this instruction may result in fire or product damage.

- **02.** Use a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire or electric shock.
- 03. Do not supply power without load.

Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Wire as short as possible and keep away from high voltage lines or power lines, to
 prevent surge and inductive noise. Do not use near the equipment which generates
 strong magnetic force or high frequency noise (transceiver, etc.). In case installing the
 product near the equipment which generates strong surge (motor, welding machine,
 etc.), use diode or varistor to remove surge.
- Do not connect capacity load to the output terminal directly.
- This unit may be used in the following environments
- Indoors (in the environment condition rated in 'Specifications')
- Altitude max. 2,000 m
- Pollution degree 2 - Installation category II

Cautions for Installation

- Install the unit correctly with the usage environment, location, and the designated specifications.
- Do NOT impacts with a hard object or excessive bending of the wire lead-out. It may cause damage the water resistance.
- Do NOT pull the Ø 2.5 mm cable with a tensile strength of 20 N, the Ø 4 mm cable with a tensile strength of 30 N or over and the Ø 5 mm cable with a tensile strength of 50 N or over. It may result in fire due to the broken wire.
- When extending wire, use AWG 22 cable or over within 200 m.
- Tighten the installing screws with under 1.47 N m torque.

Ordering Information

This is only for reference.

For selecting the specific model, follow the Autonics web site.

|--|--|

① Control output

O: Normally Open

C: Normally Closed


Product Components

• M3 Bolt × 2


Connection

- LOAD can be wired to any direction.
- \bullet Connect LOAD before suppling the power.

■ Cable type



■ Inner circuit



Operation Timing Chart

	Normally open	Normally closed
Sensing target	Presence	Presence
	Nothing — L	- Nothing — L
Load	Operation	Operation
	Return — L	- Return L L
Operation	ON _	ON
indicator (red)	OFF — L	- OFF

Specifications


Installation	Upper side type
Model	PFI25-8A□
Sensing side length	25 mm
Sensing distance	8 mm
Setting distance	0 to 5.6 mm
Hysteresis	≤ 10 % of sensing distance
Standard sensing target: iron	25 × 25 × 1 mm
Response frequency 01)	20 Hz
Affection by temperature	$\leq \pm~10~\%$ for sensing distance at ambient temperature 20 °C
Indicator	Operation indicator (red)
Approval	C€ EHI
Unit weight	≈ 70 g

01) The response frequency is the average value. The standard sensing target is used and the width is set as 2 times of the standard sensing target, 1/2 of the sensing distance for the distance.

Power supply	100-240 VAC∼ 50/60 Hz, operating voltage: 85-264 VAC∼
Leakage current	≤ 2.5 mA
Control output	5 to 150 mA
Residual voltage	≤ 10 V
Protection circuit	Surge protection circuit
Insulation type	\geq 50 M Ω (500 VDC== megger)
Dielectric strength	1,500 VAC~ 50/60 Hz for 1 min
Vibration	1 mm amplitude at frequency 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 2 hours
Shock	500 m/s² (≈ 50 G) in each X, Y, Z direction for 3 times
Ambient temperature	-25 to 70 °C, storage: -30 to 80 °C (non-freezing or non-condensation)
Ambient humidity	35 to 95 %RH, storage: 35 to 95 %RH (non-freezing or non- condensation)
Protection structure	IP67 (IEC standards)
Connection	Cable type model
Wire spec.	Ø 4 mm, 2-wire, 2 m
Connector spec.	AWG 22 (0.08 mm, 60-wire), insulator diameter: Ø 1.25 mm
Material	Case: PPS, standard type cable (black): polyvinyl chloride (PVC)

Dimensions

 \bullet Unit: mm, For the detailed dimensions of the product, follow the Autonics web site.

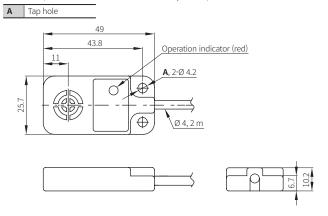


Setting Distance Formula

Detecting distance can be changed by the shape, size or material of the target.

For stable sensing, install the unit within the 70% of sensing distance.

Setting distance (Sa)

= Sensing distance (Sn) imes 70%




Mutual-interference & Influence by Surrounding Metals

■ Mutual-interference


When plural proximity sensors are mounted in a close row, malfunction of sensor may be caused due to mutual interference.


Therefore, be sure to provide a minimum distance between the two sensors, as below table.




■ Influence by surrounding metals


When sensors are mounted on metallic panel, it must be prevented sensors from being affected by any metallic object except target. Therefore, be sure to provide a minimum distance as below chart.






Sensing Distance Feature Data by Target Material and Size



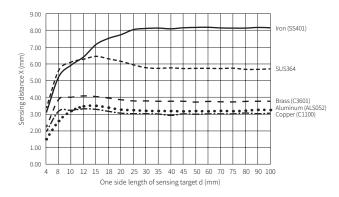

Sensing Distance Feature Data by Parallel (Left/Right) Movement



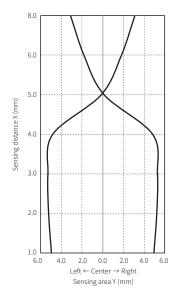

Autonics DRW200892AA

Rectangular Inductive **Proximity Sensors**



PFI Series (DC 3-wire)

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- Flat, compact design (10 mm height) allows easy installation in limited spaces
- · Excellent noise immunity with specialized sensor IC
- Built-in surge protection circuit, output short over current protection circuit, reverse polarity protection
- · Operation indicator (red LED)
- Durable and reliable alternative to micro switches and limit switches
- IP67 protection structure (IEC standard)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ▲ symbol indicates caution due to special circumstances in which hazards may occur.

Marning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

ailure to follow this instruction may result in explosion or fire.

- **03. Do not disassemble or modify the unit.**Failure to follow this instruction may result in fire
- 04. Do not connect, repair, or inspect the unit while connected to a power source.

Failure to follow this instruction may result in fire.

05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire.

⚠ Caution Failure to follow instructions may result in injury or product damage.

01. Use the unit within the rated specifications.

ailure to follow this instruction may result in fire or product damage

02. Use a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected
- 12-24 VDC == power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, after 0.8 sec of supplying power.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive noise

Do not use near the equipment which generates strong magnetic force or high frequency noise (transceiver, etc.).

In case installing the product near the equipment which generates strong surge (motor, welding machine, etc.), use diode or varistor to remove surge.

- · This unit may be used in the following environments
- Indoors (in the environment condition rated in 'Specifications')
- Altitude max. 2,000 m
- Pollution degree 2
- Installation category II

Cautions for Installation

- Install the unit correctly with the usage environment, location, and the designated specifications.
- Do NOT impacts with a hard object or excessive bending of the wire lead-out. It may cause damage the water resistance.
- Do NOT pull the Ø 2.5 mm cable with a tensile strength of 20 N, the Ø 4 mm cable with a tensile strength of 30 N or over and the Ø 5 mm cable with a tensile strength of 50 N or over. It may result in fire due to the broken wire
- When extending wire, use AWG 22 cable or over within 200 m.
- Tighten the installing screws with under 1.47 N m torque

Ordering Information

This is only for reference.

For selecting the specific model, follow the Autonics web site.

PFI 25 8 D 0

① Control output


N: NPN Normally Open N2: NPN Normally Closed P: PNP Normally Open P2: PNP Normally Closed


Product Components


• M3 Bolt \times 2

Connections

■ Cable type







12-24 VDC==

Operation Timing Chart

		Normally open	Normally closed
Sensing target		Presence	Presence
		Nothing — L	Nothing — L
Load		Operation	Operation
		Return — L	Return
Output voltage	NPN		н п
	output		
	PNP	н п	н — — —
	output		
Operation indicator (red)		ON	ON
		OFF — L	OFF L

Specifications


Installation	Upper side type
	opper side type
Model	PFI25-8D□
Sensing side length	25 mm
Sensing distance	8 mm
Setting distance	0 to 5.6 mm
Hysteresis	≤ 10 % of sensing distance
Standard sensing target: iron	25 × 25 × 1 mm
Response frequency 01)	200 Hz
Affection by temperature	\leq \pm 10 % for sensing distance at ambient temperature 20 °C
Indicator	Operation indicator (red)
Approval	C € EHI
Unit weight	≈ 70 g

01) The response frequency is the average value. The standard sensing target is used and the width is set as 2 times of the standard sensing target, 1/2 of the sensing distance for the distance.

2 times of the standard sensing dispet, 1/2 of the sensing distance for the distance.		
12-24 VDC= (ripple P-P: ≤ 10 %), operating voltage: 10-30 VDC=		
≤ 10 mA		
≤ 200 mA		
≤ 1.5 V		
Surge protection circuit, output short over current protection circuit, reverse polarity protection		
\geq 50 M Ω (500 VDC== megger)		
1,500 VAC~ 50/60 Hz for 1 min		
$1~\rm{mm}$ amplitude at frequency $10~\rm{to}$ 55 Hz (for $1~\rm{min})$ in each X, Y, Z direction for $2~\rm{hours}$		
500 m/s ² (\approx 50 G) in each X, Y, Z direction for 3 times		
-25 to 70 °C, storage: -30 to 80 °C (non-freezing or non-condensation)		
35 to 95 %RH, storage: 35 to 95 %RH (non-freezing or non- condensation)		
IP67 (IEC standards)		
Cable type model		
Ø 4 mm, 3-wire, 2 m		
AWG 22 (0.08 mm, 60-wire), insulator diameter: Ø 1.25 mm		
Case: PPS, standard type cable (black): polyvinyl chloride (PVC)		

Dimensions

 \bullet Unit: mm, For the detailed dimensions of the product, follow the Autonics web site.

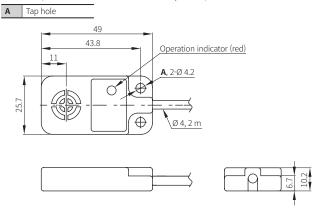


Setting Distance Formula

Detecting distance can be changed by the shape, size or material of the target.

For stable sensing, install the unit within the 70% of sensing distance.

Setting distance (Sa)

= Sensing distance (Sn) imes 70%




Mutual-interference & Influence by Surrounding Metals

■ Mutual-interference


When plural proximity sensors are mounted in a close row, malfunction of sensor may be caused due to mutual interference.


Therefore, be sure to provide a minimum distance between the two sensors, as below table.




■ Influence by surrounding metals


When sensors are mounted on metallic panel, it must be prevented sensors from being affected by any metallic object except target. Therefore, be sure to provide a minimum distance as below chart.





Sensing Distance Feature Data by Target Material and Size



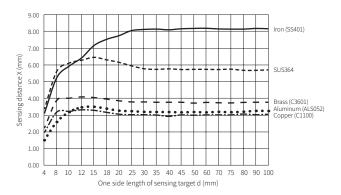

Sensing Distance Feature Data by Parallel (Left/Right) Movement



