


Low Voltage

Source changeover systems

Compact NSX100-630, Compact NS630b-1600,
Interpact, Masterpact

Catalogue
2012



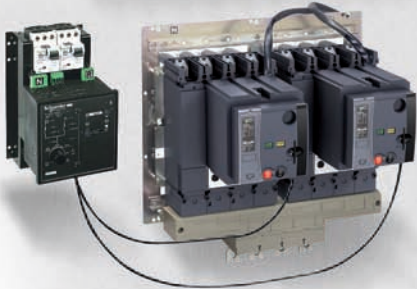

Efficient energy management and continuity of service with source-changeover system


To ensure continuity of service for critical applications, LV electrical installations need to be connected to at least **two independent power sources**:

① **A normal source (N)**

② **And a replacement source (R)***

used to supply energy to the installation when the normal source unavailable, or, for instance, when its quality and/or availability is no longer guaranteed.

The source-changeover system switches the load (partly or fully) between these two sources.

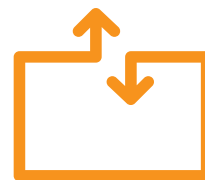

A few basics on source-changeover systems

- > A source-changeover system **can be automated to manage transfers according to external conditions.**
- > Switching from a main power source to a replacement source **can be performed either manually or automatically.**
- > A source-changeover system **comprises circuit breakers, switch-disconnectors or contactors.**

* The replacement source (R) can be: a second power source (with possibly different characteristics from the normal source) or an electrical generator

3
ways

to switch the load to meet your needs

1

Manual source-changeover system

(or MTSE: Manual Transfer Switching Equipment)

The simplest way to switch the load. It is controlled manually by an operator. The time required to switch from the 'N' source to 'R' source can vary.



System

2 or 3 mechanically interlocked manually-operated circuit breakers or 2 switch-disconnectors.

Applications

Buildings and infrastructure where the need for continuity of service is significant but not a priority: offices, small and medium-sized businesses.

2

Remote-operated source-changeover system

(or RTSE: Remote Transfer Switching Equipment)

The most commonly used system for devices with high ratings. No direct human intervention is required. Source-changeover is controlled electrically.



System

2 or 3 circuit breakers that may have different configurations, linked by an electrical interlocking system. In addition, a mechanical interlocking system protects against electrical malfunctions or incorrect manual operations.

Applications

Industry (assembly lines, engine rooms on ships, critical auxiliaries in thermal powerstations, etc.); **Infrastructure** (port and railway installations, runway lighting systems, control systems on military sites, etc.).

3

Automatic source-changeover system

(or ATSE: Automatic Transfer Switching Equipment)

An automatic controller may be added to a remote-operated source-changeover system. It is possible to automatically control source transfer according to programmed (dedicated controllers) or programmable (PLC) operating modes. These solutions ensure optimum energy management.



System

2 or 3 circuit breakers that may have different configurations, linked by an electrical interlocking system. A mechanical interlocking system protects against electrical malfunctions or incorrect manual operations, with an automatic control system (dedicated controllers or PLC).

Applications

Commercial and service sector (operating rooms in hospitals, safety systems for buildings, computer rooms for banks and insurance companies, lighting and emergency lighting systems in malls, etc.), **industry and infrastructure.**

Whatever the system, you benefit from our expertise!

> MTSE range



Interpact
From 40 A to 630 A


> RTSE range



Compact NSX
From 100 A to 630 A

Masterpact NT / NW
From 630 A to 6300 A

> ATSE range

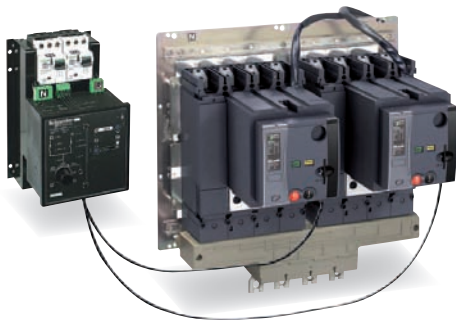

UA Controller **Compact NSX**
From 100 A to 630 A



Our expertise and support come together with the source-changeover system you choose for your LV electrical installation.

With Interpact INS, Compact NSX and Masterpact NT and NW, we offer a complete range of solutions, designed around key values:

Maximum continuity of service

- > Energy availability is ensured whatever the external requirements (e.g. high power demand).
- > Maintenance and replacement of the sources (N or R) can be done with no interruption of service.

You can maintain a continuous level of service and customer satisfaction.

Maximum safety

For LV electrical installations where safety and continuity of service are critical for people and/or equipment such as hospitals, airports, banks, malls, etc.

Optimized energy management

- > Transfer the load to a replacement source according to external requirements.
 - > Manage power sources according to power quality and power costs.
 - > Perform system regulation.
 - > Switch to an emergency replacement source.
- You are no longer dependent on your power supply (and supplier)!

Simplicity and reliability

- > **Simple installation** on LV switchboard.
- > **Optimized size** of the switchboard.
- > System **based on pre-tested components**.
- > Compliance with **IEC 60947-6-1**.



For critical applications
in particular
For all others
in general



A source-changeover system is indispensable for applications that need a continuous supply of electric power (hospitals, airports, banks, government facilities, etc.).

But a source-changeover system is also suitable for all LV electrical installations exposed to:

- > Nominal voltage loss or dip (when there is high demand for electric power)
- > Unpredictable power quality
- > Frequent power cuts.

These factors, and many others, can damage the continuity of service of your electrical installation.

For infrastructure managers, a source-changeover system gives direct economic benefits: it is possible to select your source based on power cost. In this case, the replacement source (R) is used as an alternative, more economical source.



**Managing
energy
efficiently**
Power Cost
Safety

Presentation	2
--------------	---

Functions and characteristics	A-1
----------------------------------	-----

Dimensions	B-1
------------	-----

Electrical diagrams	C-1
---------------------	-----

Catalogue numbers and order forms	D-1
--------------------------------------	-----


For maximum continuity of service...

Incoming feeders and main LV switchboards



PB105014

Currents
From 630 to 6300 A.

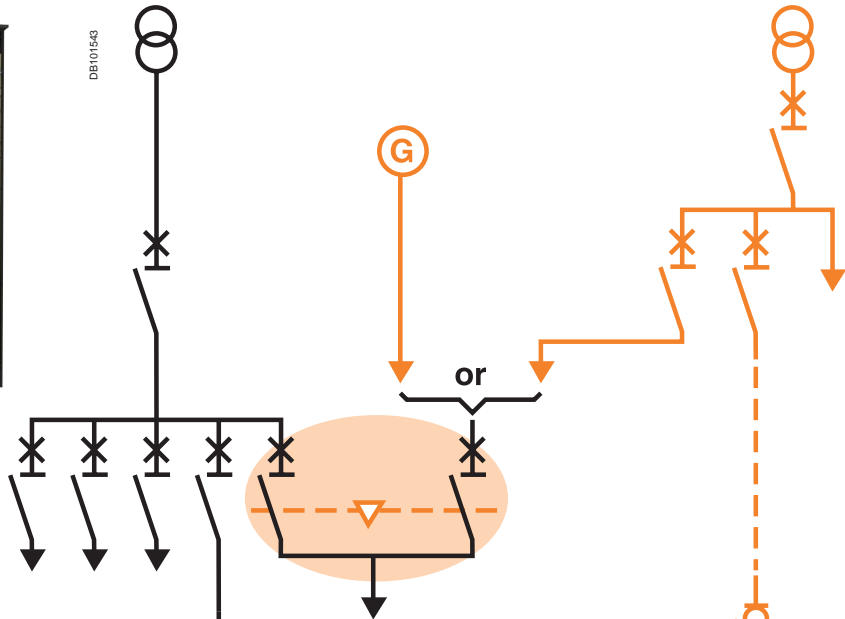


Power distribution



PB30395C_SE_R_35

Currents
From 250 to 3200 A.

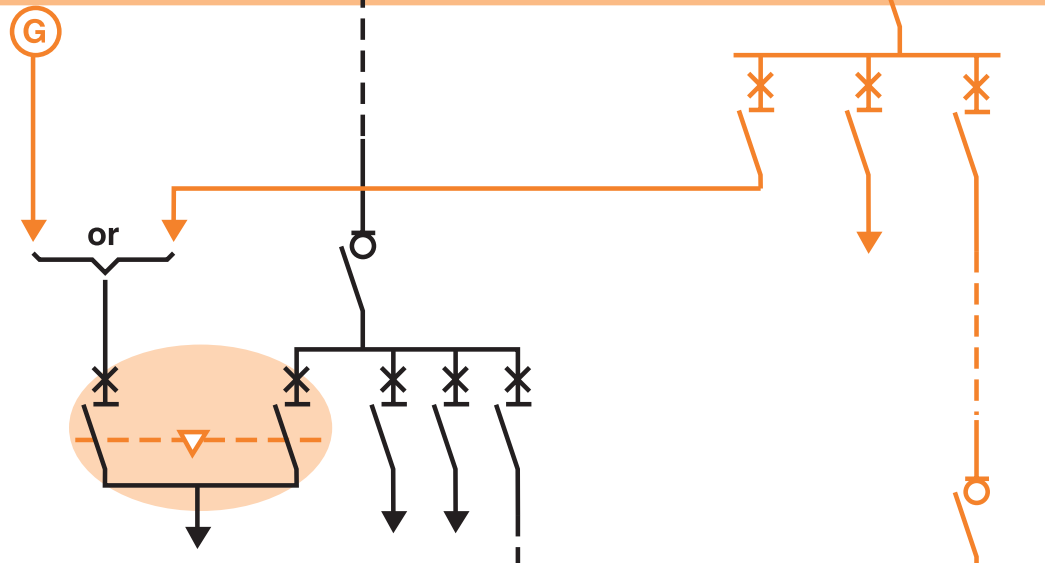


Loads




PB104782_R

Currents
From 40 to 400 A.

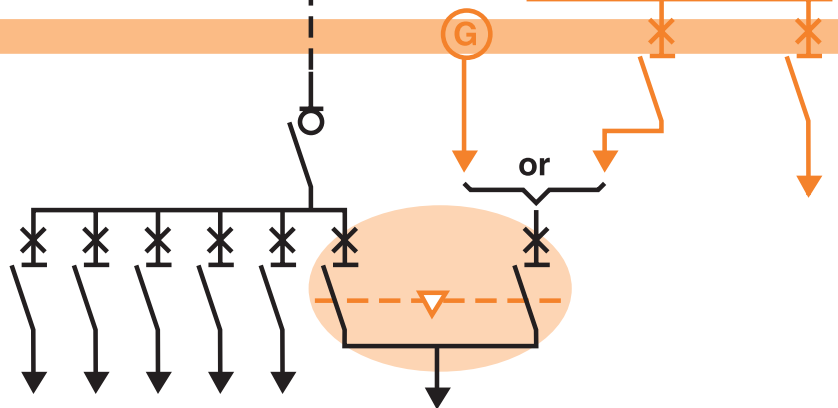


... in a wide range of applications

1 normal source
1 replacement source

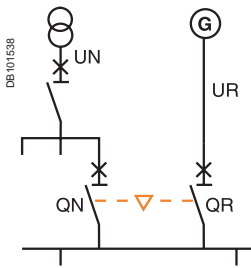

QN	QR
0	0
1	0
0	1


2 sources with coupler on busbars

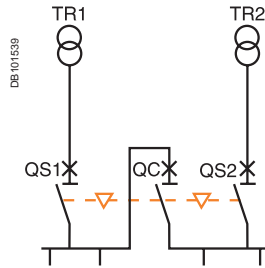

QS1	QC	QS2
0	0	0
1	0	1
1	1	0
0	1	1
1	0	0 ⁽¹⁾
0	0	1 ⁽¹⁾


(1) possible by forcing operation.

2 normal sources
1 replacement source

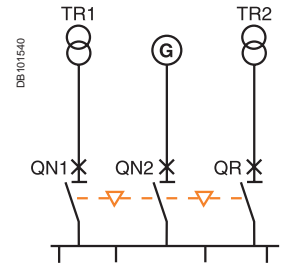

QN1	QN2	QR
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Generator or permanent source

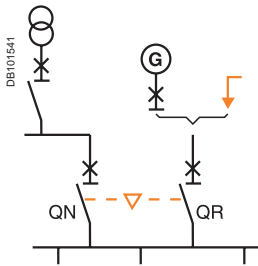


QN	QR
0	0
1	0
0	1


Typical applications:

- continuous production processes
- operating rooms
- computer rooms...

Generator or permanent source

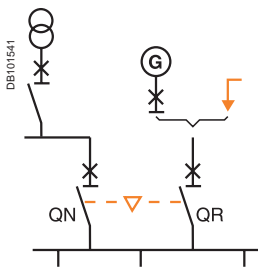

Generator or permanent source

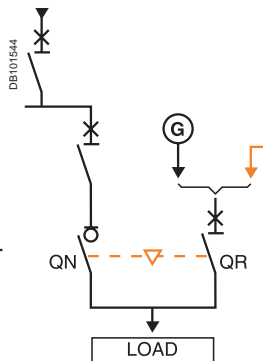

QN	QR
0	0
1	0
0	1

Typical applications:

- large electrical installations (e.g. airports)
- refrigeration units
- special electricity tariffs
- pumping stations...

schneider-electric.com

This international site allows you to access all the Schneider Electric Solution and Product information via:

- comprehensive descriptions
- range data sheets
- a download area
- product selectors
- ..

You can also access the information dedicated to your business and get in touch with your Schneider Electric country support.

The screenshot displays the Schneider Electric website interface. At the top left is the Schneider Electric logo with the tagline "the global specialist in energy management". To the right are navigation links for "Global", "Home", "Site map", "Contact", and "Français", along with a search bar. Below this is a horizontal menu with categories: "Solutions", "Products and Services", "Support", "Your business", and "Company".

The "Solutions" section features a grid of industry-specific images and labels: Electric Utilities, Water & Wastewater, Marine, Oil & Gas, Mining, Mineral, Metals, Food & Beverage, Data Centres, Healthcare, Life Sciences, Hotels, Office Buildings, Retail, Energy Efficiency, and Machine Control Solutions.

The "EcoStruxure" section is highlighted, showing five main product categories with their respective icons and lists of sub-products:

- Power Management:**
 - Power Management Systems
 - High Density Metering
 - Energy Tariff Optimization
 - Power Quality Mitigation
 - Local LV/MV Protection & Control
 - Intelligent Power & Motor Control
 - Renewable Energy Conversion
 - EVlink charging solutions for electric vehicles
- Process & Machines Management:**
 - Process & Machines Management Systems
 - General Machines Control
 - Packaging Control
 - Material Handling Control
 - Hoisting Control
- IT / Server Room Management:**
 - IT / Server Room Management Systems
 - Rack Systems
 - Uninterruptible Power Supply
 - Cooling Control
 - Surveillance
- Building Management:**
 - Lighting Control
 - Outdoor Lighting Control
 - HVAC Control
 - Room Control
- Security Management:**
 - Security Management Systems
 - Access Control
 - Video Security
 - Fire & Life Safety
 - Intrusion Detection

At the bottom, there is a footer with navigation links: "Home | Solutions | Products and Services | Support | Your business | Company" and copyright information: "© Schneider Electric | Privacy Policy".

<i>Presentation</i>	2
Overview of solutions	A-2
Manual source-changeover systems	
Interpact INS/INV40 to 630 A, Compact NSX100/630 A	A-2
Manual source-changeover systems Compact NS and Masterpact NT/NW 630 A to 6300 A	A-3
Remote-operated source-changeover systems	
Compact NSX100/630, Compact NS630b/1600 A	A-4
Remote-operated source-changeover systems	
Masterpact NT/NW 630 A to 6300 A	A-5
Manual source-changeover systems	A-6
Possible combinations	A-6
Remote-operated source-changeover systems	A-10
Mechanical interlocking Compact NSX, Compact NS or Masterpact NT/NW	A-10
Mechanical interlocking Compact NS or Masterpact NT/NW	A-11
General characteristics Compact NSX	A-12
General characteristics Compact NS, Masterpact NT/NW	A-13
Mechanical and electrical durability Interpact INS, Compact NSX, NS, Masterpact NT/NW	A-14
Connection and insulation accessories for Compact NSX and INS ≤ 630 A	A-15
Electrical interlocking	A-16
Standard configurations	A-17
Associated controllers	A-18
Controller selection	A-18
Controller installation	A-19
BA controller	A-20
BA controller, Operating sequences	A-21
UA controller	A-22
UA controller, Operating sequences, Forced operation mode	A-23
UA controller, Operating sequences, Special-tariff mode	A-24
UA controller, Operating sequences, Test mode and automatic operation	A-25
Operating sequences	A-26
IVE unit	A-26
BA/UA controller	A-27
COM communications option	A-28
<i>Dimensions</i>	<i>B-1</i>
<i>Electrical diagrams</i>	<i>C-1</i>
<i>Catalogue numbers and order forms</i>	<i>D-1</i>

Overview of solutions



Manual source-changeover systems

Interpact INS/INV 40 to 630 A, Compact NSX100/630





Range	Interpact		Compact
Models	INS40 to INS80 INS100 to INS160	INS250 to INS630 INV250 to INV630	NSX100 to NSX250 NSX400 to NSX630
Rating (A)	40 to 160	100 to 630	100 to 630
Type of device	Switch-disconnectors with extended handles	Switch-disconnectors	N/H/L circuit breakers NA switch-disconnectors

Manual source-changeover systems




Interlocking via toggles

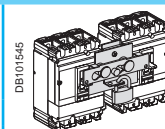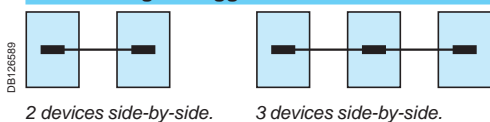



Interlocking via rotary handles

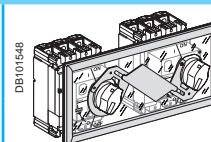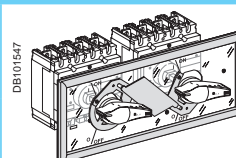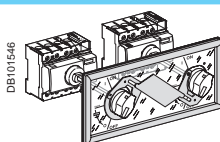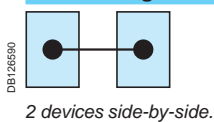



Interlocking via keylocks with captive keys

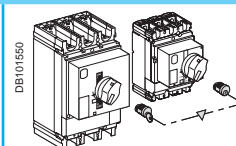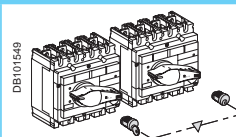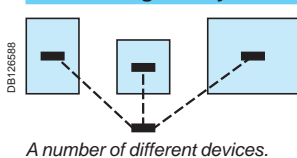

Interlocking on a base plate

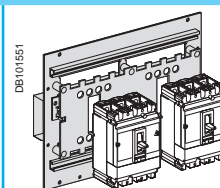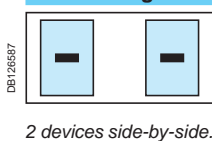

Complete source-changeover assemblies

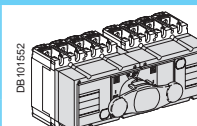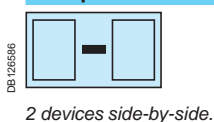

Manual source-changeover systems



Compact NS and Masterpact NT/NW

630 A to 6300 A





Range	Compact	Masterpact	
Models	NS630b to NS1600	NT06 to NT16	NW08 to NW63
Rating (A)	630 to 1600	630 to 1600	800 to 6300
Type of device	N/H/L circuit breakers NA switch-disconnectors	H1/L1 circuit breakers HA switch-disconnectors	N1/H1/H2/H3/L1 circuit breakers NA/HA/HF switch-disconnectors

Manual source-changeover systems



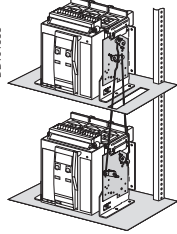
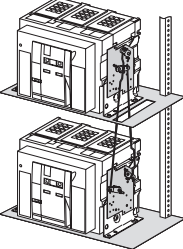
Interlocking via extended rotary handles

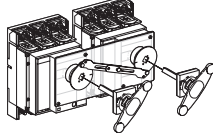 <p>DB126580</p> <p>2 devices side-by-side.</p>	 <p>DB101553</p>		
--	---	--	--






Interlocking via keylocks with captive keys

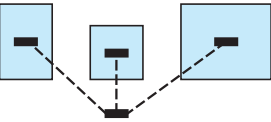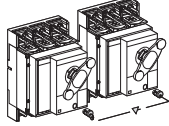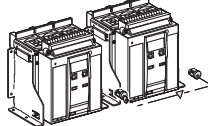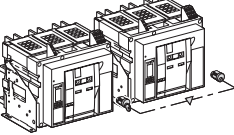 <p>DB126588</p> <p>A number of different devices.</p>	 <p>DB101554</p>	 <p>DB101555</p>	 <p>DB101556</p>
---	---	--	---

Mechanical interlocking using connecting rods

 <p>DB126585</p> <p>2 devices one above the other.</p>	 <p>DB101557</p> <p>(1)</p>	 <p>DB101558</p>	 <p>DB101559</p>
---	--	--	---

Mechanical interlocking using cables

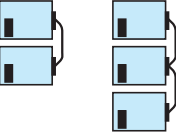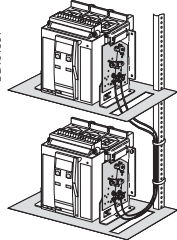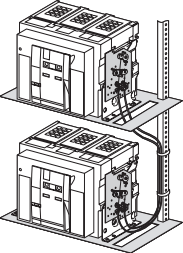 <p>DB126584</p> <p>2 or 3 devices one above the other.</p>	 <p>DB101560</p> <p>(1)</p>	 <p>DB101561</p>	 <p>DB101562</p>
 <p>DB126583</p> <p>2 or 3 devices side-by-side.</p>	<p>(2)</p>		

For this case and other cases, please consult us

 <p>DB126580</p>			
---	--	--	--

(1) Implemented with NS630b to NS1600 electrically-operated devices only.

(2) For source-changeover systems using cables, always respect the installation conditions specified on [page A-13](#).


Overview of solutions

Remote-operated source-changeover systems Compact NSX100/630, Compact NS630b/1600 A

Range	Compact	
Models	NSX100 to NSX630	NS630b to NS1600
Rating (A)	100 to 630	630 to 1600
Type of device	N/H/L circuit breakers NA switch-disconnectors	N/H/L circuit breakers NA switch-disconnectors


Remote-operated source-changeover system

Mechanical interlocking on base plate + electrical interlocking




DB126587

2 electrically-operated devices side-by-side combined with an electrical interlocking system.

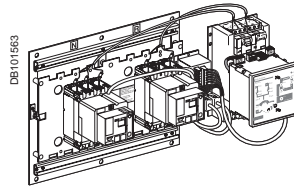


DB101563

Mechanical interlocking using connecting rods + electrical interlocking



DB126585

2 electrically-operated devices one above the other combined with an electrical interlocking system.

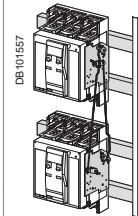

DB101557

Mechanical interlocking using cables + electrical interlocking




DB126581

2 electrically-operated devices one above the other combined with an electrical interlocking system.



DB126582

2 electrically-operated devices side-by-side combined with an electrical interlocking system.

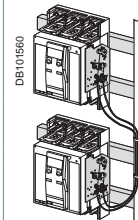

DB101560

(2)

Automatic source-changeover systems

Remote-operated source-changeover system combined with an automatic-control system



DB126581

The automatic controller operates the devices depending on external parameters.

BA: Simple controller that manages the changeover function.


UA: Controller that also manages engine generator sets.

UA150: UA controller with a communication option.




DB126582

DB126572

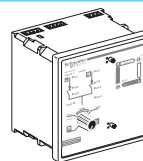

BA controller

DB126583

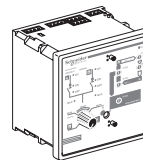

UA and UA150 controller


(2) For source-changeover systems using cables, always respect the installation conditions specified on page A-13.

Remote-operated source-changeover systems Masterpact NT/NW 630 A to 6300 A

Range	Masterpact	
Models	NT06 to NT16	NW08 to NW63
Rating (A)	630 to 1600	800 to 6300
Type of device	H1/L1 circuit breakers HA switch-disconnectors	N1/H1/H2/H3/L1 circuit breakers NA/HA/HF switch-disconnectors


Remote-operated source-changeover system

Mechanical interlocking using connecting rods + electrical interlocking




DB126585

2 electrically-operated devices side-by-side combined with an electrical interlocking system.

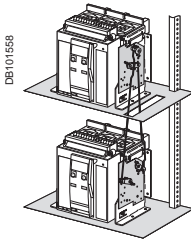


DB101558

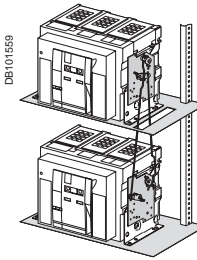


DB101559

Mechanical interlocking using cables + electrical interlocking

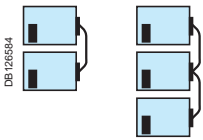


DB126584


2 or 3 electrically-operated devices one above the other combined with an electrical interlocking system⁽¹⁾.

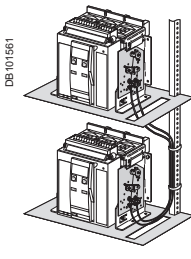

DB101561

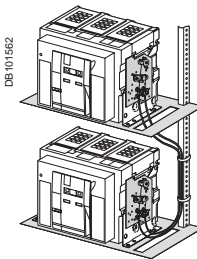

DB101562



DB126583

2 or 3 electrically-operated devices side-by-side combined with an electrical interlocking system⁽¹⁾.

(2)

Automatic source-changeover systems

Remote-operated source-changeover system combined with an automatic-control system




DB126581

The automatic controller operates the devices depending on external parameters.

BA: Simple controller that manages the changeover function.

UA: Controller that also manages engine generator sets.

UA150: UA controller with a communication option.

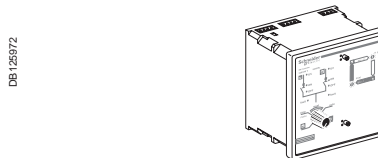


DB126572

BA controller



DB126582

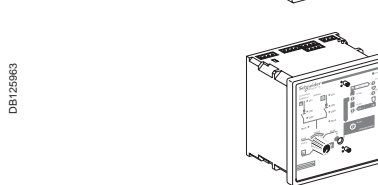

DB126583

UA and UA150 controller

(1) Three devices with Masterpact NW only.

(2) For source-changeover systems using cables, always respect the installation conditions specified on page A-13. For other cases, please consult us.

Manual source-changeover systems

Possible combinations

A manual source-changeover system can be installed on two or three manually-operated and mechanically interlocked circuit breakers or switch-disconnectors. Interlocks prevent connection to both sources at the same time, even momentarily.

All possibilities for manual source-changeover systems

Type of device	Type of interlocking for two devices			
	Complete assembly	Keylock	Direct rotary handle	Extended rotary handle
Interpact switch-disconnectors				
INS40 to INS160				■
INS250-100 to INS630	■	■	■ ▲	■ ▲
INV100 to 630		■	■ ▲	■ ▲ ▲
INS/INV630b to 2500		■		

Legend:

▲ Possible but visible break function disabled.

▲ 250 A and 630 A ratings can be mixed by using INS320/630 rotary handle interlocking system.

Type of device	Type of interlocking for two devices					
	Toggle	Keylock	Direct rotary handle	Extended rotary handle	On base plate (toggle or direct extended rotary control)	On base plate (motor mechanism)
Compact fixed or withdrawable circuit breakers						
NSX100 to 250	■ ■	■ ■ ●	■ ■	■ ■	■ ■ ■	■ ■ ■
NSX400 to NS630	■ ■	■ ■ ●	■ ■	■ ■	■ ■ ■	■ ■ ■
NSX100 to 630		■ ■ ●	■ ■ ●	■ ■ ●	■ ■ ■ ●	■ ■ ■ ●
NS630b to 1600 with rotary handle		■ ■ ●	■ ■	■ ■		

Legend:

■ Fixed devices only.

■ Fixed or withdrawable devices.

■ Devices must be either both fixed or both withdrawable.

● With NSX400/630 rotary handle interlocking system.

● Possible with NSX400/630 base plate + NSX100-250 adaptation kit.

● Devices equipped with rotary handles.


Type of device	Type of interlocking for either all fixed or all withdrawable devices					
	Keylock	Cable-type, 2 devices side-by-side	Cable-type, 3 devices side-by-side	Cable-type, 2 devices one above the other	Cable-type, 3 devices one above another	Rod-type, 3 devices one above another
Compact fixed or withdrawable circuit breakers or switch-disconnectors, with motor mechanism						
NS630b to 1600	■	■		■		■
Masterpact fixed or withdrawable circuit breakers or switch-disconnectors, manual operation or with motor mechanism						
NT06 to 16	■	■		■		■
NW08 to 63	■	■	■	■	■	■
NT06 to NW63	■	■		■		

Possible combinations

Complete source-changeover assembly for two switch-disconnectors

All possibilities for manual source-changeover systems

DB101571

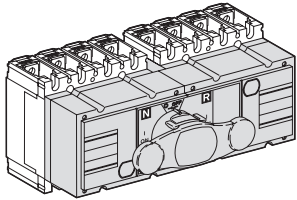

These assemblies provide an easy way to implement source changeover functions with:

- a single 3-position rotary handle that controls the two switch-disconnectors (Normal source ON, OFF, Replacement source ON)
- a smaller size, taking up less room in the switchboard.


A complete source changeover assembly can be ordered with a single catalogue number.

"Normal N"	"Replacement" R							
	INS250-100	INS250-160	INS200-200	INS250-250	INS320	INS400	INS500	INS630
INS250-100								
Ratings 100 A	■							
INS250-160								
Ratings 160 A		■						
INS200-200								
Ratings 200 A			■					
INS250-250								
Ratings 250 A				■				
INS320								
Ratings 320 A					■			
INS400								
Ratings 400 A						■		
INS500								
Ratings 500 A							■	
INS630								
Ratings 630 A								■

Interlocking of two or three toggle-controlled devices

Possible combinations of "Normal" and "Replacement" source circuit breakers

DB101566

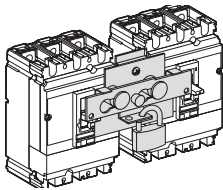

Two devices can be interlocked using this system. Two identical interlocking systems can be used to interlock three devices installed side by side, in which case one device is in the ON position and the two others are in the OFF position. Devices must all have the same configuration, i.e. fixed, plug-in, withdrawable or drawout.

The system is locked using one or two padlocks (shackle diameter 5 to 8 mm).

Two interlocking system models are available for:


- Compact NSX100 to 250
- Compact NSX400 to 630.

"Normal N"	"Replacement" R				
	NSX100	NSX160	NSX250	NSX400	NSX630
NSX100					
Ratings 16... 100 A	■	■	■	■	■
NSX160					
Ratings 80...160 A	■	■	■	■	■
NSX250					
Ratings 125...250 A	■	■	■	■	■
NSX400					
Ratings 150... 400 A	■	■	■	■	■
NSX630					
Ratings 630 A	■	■	■	■	■

Interlocking of a number of devices using keylocks (captive keys)

Combination of "Normal" and "Replacement" devices

DB101569

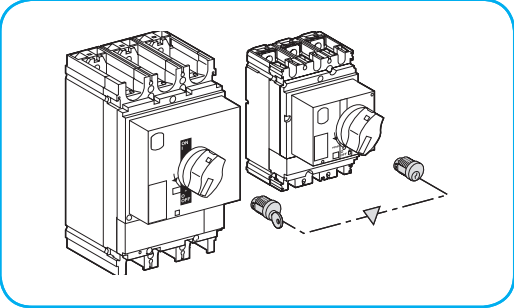

All Interpact, Compact and Masterpact circuit breakers and switch-disconnectors from 100 to 6300 A with rotary handles or motor mechanisms can be interlocked.


Interlocking is based on two identical keylocks with a single key and a keylock adapter (different for each device). This solution enables interlocking between two devices that are physically distant or that have very different characteristics, for example between a low and a medium-voltage device, or between Compact NSX circuit breakers and switch-disconnectors.

A system of wall-mounted captive key boxes makes possible a large number of combinations between many devices.

Interlocking of two devices with rotary handles

Possible combinations of "Normal" and "Replacement" source circuit breakers

DB101568

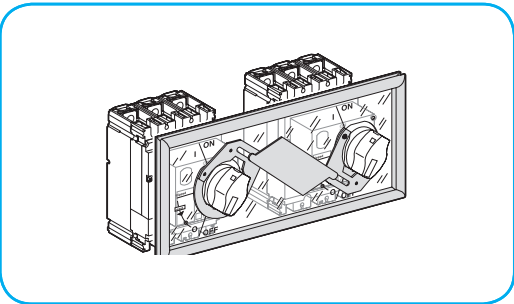

The direct or extended rotary handles are padlocked with the devices in the OFF position. The mechanism prevents simultaneous closing of the devices, but allows them to be opened.

"Normal N"	"Replacement" R				
Compact NSX100/630 ⁽¹⁾	NSX100	NSX160	NSX250	NSX400	NSX630
NSX100					
Ratings 16... 100 A	■	■	■	□	□
NSX160					
Ratings 80...160 A	■	■	■	□	□
NSX250					
Ratings 125...250 A	■	■	■	□	□
NSX400					
Ratings 160... 400 A	□	□	□	■	■
NSX630					
Ratings 630 A	□	□	□	■	■

□ 250 A and 630 A ratings can be mixed by using NSX400/630 rotary handle interlocking system.

"Normal N"	"Replacement" R				
Compact NS630b/1600 ⁽¹⁾	NS630b	NS800	NS1000	NS1200	NS1600
NS630b					
Ratings 250... 630 A	■	■	■	■	■
NS800					
Ratings 320... 800 A	■	■	■	■	■
NS1000					
Ratings 400... 1000 A	■	■	■	■	■
NS1200					
Ratings 480... 1200 A	■	■	■	■	■
NS1600					
Ratings 640... 1600 A	■	■	■	■	■


⁽¹⁾ When mixing NSX100/250 and NSX400/630 circuit breakers, use the NSX400/630 interlocking system.

Possible combinations

Interlocking of two devices with rotary handles

Possible combinations of "Normal" and "Replacement" source switch-disconnectors

DB107742

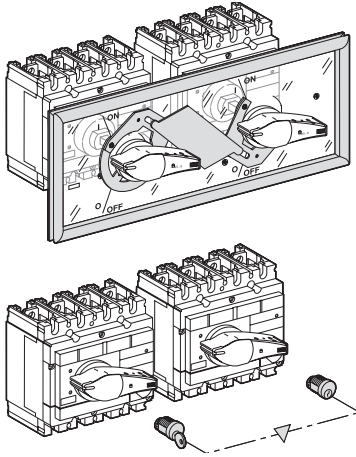

The direct or extended rotary handles are padlocked with the devices in the OFF position. The mechanism prevents simultaneous closing of the devices, but allows them to be opened.

"Normal N" Interpact INS ⁽¹⁾	"Replacement" R					
	INS40	INS63	INS80	INS100	INS125	INS160
INS40						
Ratings 40 A	■	■	■	■	■	■
INS63						
Ratings 63 A	■	■	■	■	■	■
INS80						
Ratings 80 A	■	■	■	■	■	■
INS100						
Ratings 100 A	■	■	■	■	■	■
INS125						
Ratings 125 A	■	■	■	■	■	■
INS160						
Ratings 160 A	■	■	■	■	■	■

(1) With extended rotary handles only.

(2) Possible with INV, but visible-break function is significantly impaired.


"Normal N" Interpact INS /INV ⁽²⁾	"Replacement" R							
	INS250-100/ INV100	INS250-160/ INV160	INS250-200/ INV200	INS250-250/ INV250	INS320/ INV320	INS400/ INV400	INS500/ INV500	INS630/ INV630
INS250-100/INV100								
Ratings 100 A	■	■	■	■	□	□	□	
INS250-160/INV160								
Ratings 160 A	■	■	■	■				
INS250-200/INV200								
Ratings 200 A	■	■	■	■				
INS250-250/INV250								
Ratings 250 A	■	■	■	■	□			□
INS320/INV320								
Ratings 320 A	□			□	■	■	■	■
INS400/INV400								
Ratings 400 A					■	■	■	■
INS500/INV500								
Ratings 500 A					■	■	■	■
INS630/INV630								
Ratings 630 A	□			□	■	■	■	■

□ 250 A and 630 A ratings can be mixed by using INS320/630 rotary handle interlocking system.

Interlocking of two devices on a base plate

Possible combinations of Compact NSX "Normal" and "Replacement" source circuit breakers

DB101570

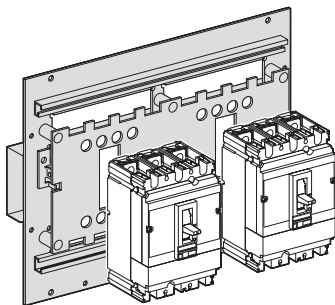


A base plate is available for mechanical interlocking of two manually-operated Compact NSX100 to 630 circuit breakers or switch-disconnectors.

"Normal N"	"Replacement" R				
	NSX100	NSX160	NSX250	NSX400	NSX630
NSX100					
Ratings 16... 100 A	■	■	■	■	■
NSX160					
Ratings 80... 160 A	■	■	■	■	■
NSX250					
Ratings 125... 250 A	■	■	■	■	■
NSX400					
Ratings 150... 400 A	■	■	■	■	■
NSX630					
Ratings 630 A	■	■	■	■	■

Interlocking of a number of devices using keylocks

Combination of Masterpact devices

DB101903

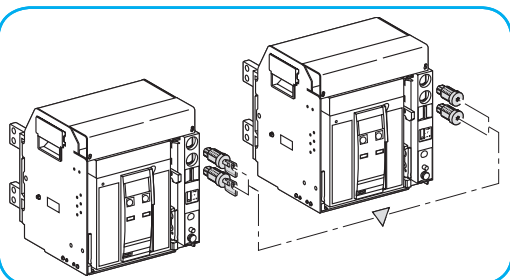

Interlocking uses two identical keylocks with a single key. This solution enables interlocking between two devices that are physically distant or that have significantly different characteristics.

Remote-operated source-changeover systems

Mechanical interlocking Compact NSX, Compact NS or Masterpact NT/NW

Mechanical interlocking of two or three devices is used to create a remote-operated source-changeover system. A basic mechanical interlocking system enhances the reliability of system operation.



Interlocking of two electrically-operated Compact NSX circuit breakers using a base plate.

Interlocking of two Compact NSX100 to 630 devices using a base plate

A base plate designed for two Compact circuit breakers can be installed horizontally or vertically on a mounting rail. Interlocking is carried out on the base plate by a mechanism located behind the breakers. Access to the circuit breaker controls and trip units is conserved. Circuit breakers must be fixed or plug-in versions, with or without earth-leakage protection or measurement modules. The base plate and the circuit breakers are supplied separately.

■ **Base plate for Compact NSX100 to 250 devices**

This base plate is intended for two Compact NSX100 to 250 devices.

■ **Base plate for Compact NSX400 to 630 devices**

This base plate is intended for two Compact NSX400 to 630 devices. It may also be used, without any modifications, to interlock a fixed Compact NSX100 to 250 with a Compact NSX400 or 630 device.

An adapter kit is required for plug-in versions of the Compact NSX100 to 250 devices.

Compact NSX100 to 250 devices, in both fixed and plug-in versions, may be equipped with spreaders.

Possible combinations of “Normal” and “Replacement” Compact NSX source circuit breakers

“Normal N”	“Replacement” R				
	NSX100	NSX160	NSX250	NSX400	NSX630
NSX100					
Ratings 12,5... 100 A	■	■	■	■	■
NSX160					
Ratings 12,5...160 A	■	■	■	■	■
NSX250					
Ratings 12,5...250 A	■	■	■	■	■
NSX400					
Ratings 160... 400 A	■	■	■	■	■
NSX630					
Ratings 250... 630 A	■	■	■	■	■

Interlocking of two Compact NS630b to 1600 or two Masterpact NT and NW devices using connecting rods

The two devices must be mounted one above the other (either 2 fixed or 2 withdrawable/drawout devices).

Combinations are possible between Compact NS630b to NS1600 devices and between Masterpact NT and Masterpact NW devices.

Installation

This function requires:

■ an adaptation fixture on the right side of each circuit breaker or switch-disconnector


■ a set of connecting rods with no-slip adjustments.

The adaptation fixtures, connecting rods and circuit breakers or switch-disconnectors are supplied separately, ready for assembly by the customer.

The maximum vertical distance between the fixing planes is 900 mm.

Possible combinations of “Normal” and “Replacement” source circuit breakers

“Normal N”	“Replacement” R			
	NS630b to NS1600	NT06 to NT16	NW08 to NW40	NW40b to NW63
NS630b to NS1600				
Ratings 250... 1600 A	■			
NT06 to NT16				
Ratings 250... 1600 A		■	■	■
NW08 to NW40				
Ratings 320... 4000 A		■	■	■
NW40b to NW63				
Ratings 4000... 6300 A		■	■	■

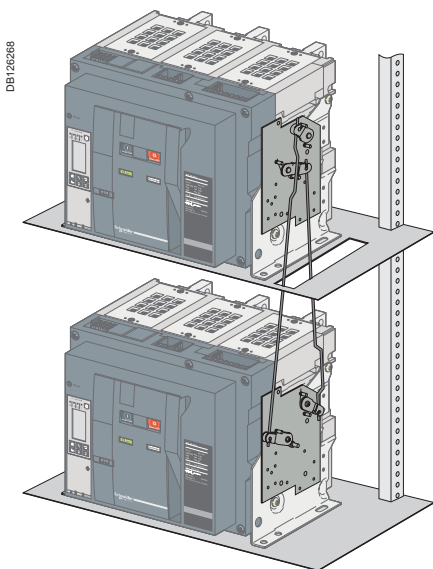

Interlocking of two Masterpact NT or NW circuit breakers using connecting rods.

Mechanical interlocking

Compact NS or Masterpact NT/NW



Interlocking of two Masterpact circuit breakers using cables.

Interlocking of two Compact NS630b to 1600 or two Masterpact NT/NW or up to three Masterpact NW devices using cables

For cable interlocking, the circuit breakers may be mounted one above the other or side-by-side.

The interlocked devices may be fixed or drawout, three-pole or four-pole, and have different ratings and sizes.

Interlocking between two devices (Compact NS630b to 1600 or Masterpact NT and NW)

This function requires:

- an adaptation fixture on the right side of each device
- a set of cables with no-slip adjustments.

The maximum distance between the fixing planes (vertical or horizontal) is 2000 mm.

Interlocking between three devices (Masterpact NW only)

This function requires:

- a specific adaptation fixture for each type of interlocking, installed on the right side of each device
- two or three sets of cables with no-slip adjustments.

The maximum distance between the fixing planes (vertical or horizontal) is 1000 mm.

Installation

The adaptation fixtures, sets of cables and circuit breakers or switch-disconnectors are supplied separately, ready for assembly by the customer.

Installation conditions for cable interlocking systems:

- cable length: 2.5 m
- radius of curvature: 100 mm
- maximum number of curves: 3.

Possible combinations of "Normal" and "Replacement" source circuit breakers

"Normal N"	"Replacement" R			
	NS630b to NS1600	NT06 to NT16	NW08 to NW40	NW40b to NW63
NS630b to NS1600				
Ratings 250... 1600 A	■			
NT06 to NT16				
Ratings 250... 1600 A		■	■	■
NW08 to NW40				
Ratings 320... 4000 A		■	■	■
NW40b to NW63				
Ratings 4000... 6300 A		■	■	■

It is not possible to combine Compact NS630b to 1600 and Masterpact NT (or Masterpact NW) devices.

All combinations of two Masterpact NT and Masterpact NW devices are possible, whatever the rating or size of the devices.

Possible combinations of three device

"Normal N"	"Replacement" R			
	NS630b to NS1600	NT06 to NT16	NW08 to NW40	NW40b to NW63
NS630b to NS1600				
Ratings 250... 1600 A				
NT06 to NT16				
Ratings 250... 1600 A				
NW08 to NW40				
Ratings 320... 4000 A			■	■
NW40b to NW63				
Ratings 4000... 6300 A			■	■

Only Masterpact NW may be used for three-device combinations.

Types of mechanical interlocking and combinations

See page A-4 to page A-9.

Remote-operated source-changeover systems

General characteristics

Compact NSX

Range		Compact NSX	
Types of devices		NSX100 to NSX250	NSX400 to NSX630
Types of circuit breakers		N / H / L	N / H / L
Switch-disconnector version		NA	NA
Mixing possibilities		all devices NS100 to NS250 N/H/L/NA fixed or plug-in	all devices NS100 to NS630 N/H/L/NA fixed or plug-in
Electrical characteristics			
Rating		15 to 250 A	15 to 630 A
Insulating voltage U_i (V AC)		750	750
Positive break indication		■	■
Number of poles (N and R devices must have the same number of poles)		3, 4	
Electrical durability		See page A-14	
Operating temperature		-25 °C to +70 °C (50 °C for 440 V - 60 Hz)	
Control characteristics			
Control voltage	AC	48 V - 50 Hz 110/130, 220/240, 380/440 V - 50/60 Hz	48 V - 50 Hz 110/130, 220/240, 380/440 V - 50/60 Hz
	DC	24-250 V	24-250 V
Maximum consumption	AC	500 VA	500 VA
	DC	500 W	500 W
Minimum switching time		800 ms	800 ms
Interlocking			
Mechanical (see page A-10)			
Electrical	by diagram (without IVE)	■	■
	with IVE unit	■	■
	auxiliary contacts used by circuit breaker	1 OF + 1 SDE	1 OF + 1 SDE
Protection and measurement			
Overload protection	long time	■	■
Short-circuit protection	short time	■	■
	instantaneous	■	■
Earth-fault protection			■
Zone selective interlocking (ZSI)			■
Earth-leakage protection	by Vigi module	■	■
	by control unit		
	by add-on Vigirex relay	■	■
Current measurements			
Voltage, frequency, power measurements, etc.			
Indication and control auxiliaries			
Available auxiliary indication contacts		OF + SD (+ SDV)	3 OF + SD (+ SDV)
Voltage releases	MX shunt	■	■
	MN undervoltage	■	■
Voltage presence indicator		■	■
Voltage transformer		■	■
Ammeter module		■	■
Insulation monitoring module		■	■
Source-changeover controller			
With permanent replacement source		■ BA controller	
With standby generator set		■ UA controller	
Remote communication via bus			
Device status indications			
Device remote control			
Transmission of settings		■	■
Indication and identification of protection status and alarms		■	■
Transmission of measurements		■	■
Installation and connection			
Fixed front connected			
Fixed rear connected		■ (long rear connections)	■ (long rear connections)
Withdrawable, plug-in or drawout		■ (plug-in on base)	■ (plug-in on base)
Installation and connection accessories			
Downstream coupling accessory		■	■
Bare-cable connectors		■	■
Terminal extensions		■	■
Terminal shields and inter-phase barriers		■	■
Locking	by padlock	■	■
	by keylock	■	■
Front panel escutcheons		■	■

Remote-operated source-changeover systems

Mech. and elect. durability Interpact INS,
Compact NSX, NS, Masterpact NT/NW

Interpact INS switch-disconnectors

		INS250-100		INS250-160		INS250-200		INS250	
Number of poles		3, 4		3, 4		3, 4		3, 4	
Conventional thermal current (A) I_{th} at 60 °C		100		160		200		250	
Rated operational current (A) I_e	Electrical AC, 50/60 Hz	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A
	440-480 V	100	100	160	160	200	200	250	250
	660-690 V	100	100	160	160	200	200	250	250
Durability (category A) (O _N -C _R -O _R -C _N cycles)	Mechanical	15000		15000		15000		15000	
	Electrical AC, 50/60 Hz	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A
	440-480 V	1500	1500	1500	1500	1500	1500	1500	1500
	660-690 V	1500	1500	1500	1500	1500	1500	1500	1500

		INS320		INS400		INS500		INS630	
Number of poles		3, 4		3, 4		3, 4		3, 4	
Conventional thermal current (A) I_{th} at 60 °C		320		400		500		630	
Rated operational current (A) I_e	Electrical AC, 50/60 Hz	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A
	440-480 V	320	320	400	400	500	500	630	630
	660-690 V	320	320	400	400	500	500	630	630
Durability (category A) (O _N -C _R -O _R -C _N cycles)	Mechanical	10000		10000		10000		10000	
	Electrical AC, 50/60 Hz	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A
	440-480 V	1500	1500	1500	1500	1500	1500	1500	1500
	660-690 V	1500	1500	1500	1500	1500	1500	1500	1500

Compact NSX100-630, Compact NS630b-1600

	NSX100-250	NSX400-630	NS630b-NS1600
Number of poles	3, 4	3, 4	3, 4
Rated current I _n (A)	100 to 250	400 to 630	630 to 1600
Mechanical durability (O _N -C _R -O _R -C _N cycles)	20000 - 40000 - 50000	15000	8000
Electrical durability at I _n (O _N -C _R -O _R -C _N cycles) for ≤ 440 V and 480 V NEMA ⁽²⁾	10000 - 20000 - 30000	4000 - 6000	2000
Electrical durability at I _n (O _N -C _R -O _R -C _N cycles) for U = 500 V to 690 V ⁽²⁾	5000 - 7500 - 10000	2000 - 3000	1500

Masterpact NT06-NT16/NW08-NW63 ⁽¹⁾

	NT06-NT10	NT12-NT16	NW08-NW16	NW20	NW25-NW40	NW50-NW63
Number of poles	3, 4	3, 4	3, 4	3, 4	3, 4	3, 4
Rated current I _n (A)	630 to 1600	1250 to 1600	800 to 1600	2000	2500 to 4000	5000 to 6300
Mechanical durability (O _N -C _R -O _R -C _N cycles)	8000	8000	10000	10000	10000	5000
Electrical durability at I _n (O _N -C _R -O _R -C _N cycles) for ≤ 440 V and 480 V NEMA ⁽²⁾	6000	6000 NT16: 3000	10000	8000	5000	1500
Electrical durability at I _n (O _N -C _R -O _R -C _N cycles) for U = 500 V to 690 V ⁽²⁾	3000	2000 NT16: 1000	10000	6000	2500	1500

⁽¹⁾ Mechanical and electrical durability not applicable to Masterpact H3 and L versions.

⁽²⁾ Electrical durability tests carried out with a power factor of 0.8 as per IEC 947-2.

Note:


O_N: opening of Normal source

C_R: closing of Replacement source

O_R: opening of Replacement source

C_N: closing of Normal source

Connection and insulation accessories for Compact NSX and INS ≤ 630 A

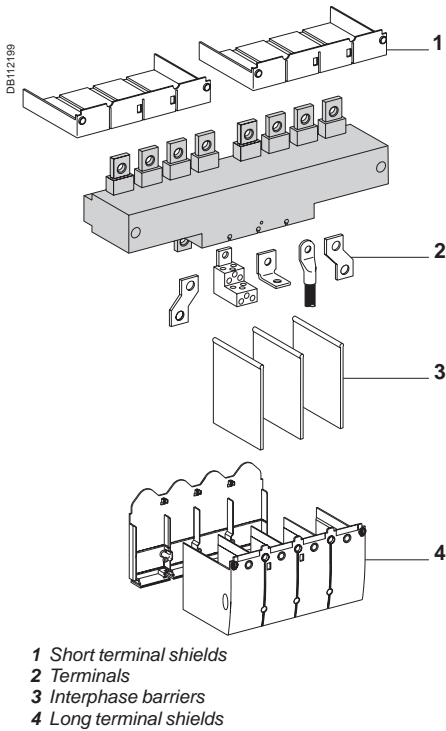

Downstream coupling accessory

This accessory simplifies connection to bars and cables with lugs. It may be used to couple two circuit breakers (Compact NSX100 to 630) or switch-disconnectors (Interpact INS/INV100 to 630) of the same size.

Pitch between outgoing terminals:

- Interpact INS250 and INV100 to 250: 35 mm
- Interpact INS/INV320 to 630: 52.5 mm
- Compact NSX100 to 250: 35 mm
- Compact NSX400 to 630: 52.5 mm.

For Compact NSX circuit breakers, the downstream coupling accessory can be used only with **fixed versions**.

Connection and insulation accessories

The coupling accessory can be fitted with the same connection and insulation accessories as the circuit breakers and switch-disconnectors.

Possible uses

Downstream coupling

	Possible	Outgoing pitch (mm)
Manual source-changeover systems		
INS250 (100 to 250 A) with rotary handle	■	35
NSX100/250 with rotary handle	■	35
NSX100/250 on base plate with toggle control	■	35
INS400/630 (320 to 630 A) with rotary handle	■	52.5
NSX400/630 with rotary handle	■	52.5
NSX400/630 on base plate with toggle control	■	52.5
Complete source-changeover assembly		
INS250 (100 to 250 A)	■	35
INS400/630 (320 to 630 A)	■	52.5
Remote-operated source-changeover systems		
NSX100/250	■	35
NSX400/630	■	52.5

Remote-operated source-changeover systems

Electrical interlocking

Electrical interlocking is used with a mechanical interlocking system.

An automatic controller may be added to take into account information from the distribution system.

Moreover, the relays controlling the “normal” and “replacement” circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

Electrical interlocking is carried out by an electrical control device.

For Compact NSX up to 630 A, electrical interlocking is implemented by the IVE unit integrating control circuits and an external terminal block in accordance with the pages C-2 to C-5 of the chapter “Electric diagrams” of this catalogue.

The integrated control circuits implement the time delays required for correct source transfer.


For Compact NS630b to 1600 and Masterpact, this function can be implemented in one of two ways:

- using the IVE unit
- by an electrician based on the diagrams in accordance with the pages C-9 to C-19 of the chapter “Electric diagrams” of this catalogue.

Characteristics of the IVE unit

- external connection terminal block:
- inputs: circuit breaker control signals
- outputs: status of the SDE contacts on the “Normal” and “Replacement” source circuit breakers
- 2 connectors for the two “Normal” and “Replacement” source circuit breakers:
- inputs:
 - status of the OF contacts on each circuit breaker (ON or OFF)
 - status of the SDE contacts on the “Normal” and “Replacement” source circuit breakers
- outputs: power supply for operating mechanisms
- control voltage:
- 24 to 250 V DC
- 48 to 415 V 50/60 Hz - 440 V 60 Hz.

The IVE unit control voltage must be same as that of the circuit breaker operating mechanisms.

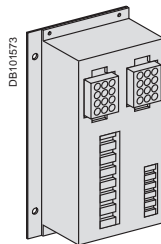

IVE unit.

Necessary equipment

For Compact NSX100 to 630, each circuit breaker must be equipped with:

- a motor mechanism
- an OF contact
- an SDE contact.

The components are supplied ready for assembly and the circuit breakers prewired. The rewiring must not be modified.

For Compact NS630b to 1600, each circuit breaker must be equipped with:

- a motor mechanism
- an available OF contact
- a CE connected-position contact (carriage switch) on withdrawable circuit breakers
- an SDE contact.

For Masterpact NT and NW, each circuit breaker must be equipped with:

- a remote-operation system made up of:
 - MCH gear motor
 - MX or MN opening release
 - XF closing release
 - PF “ready to close” contact
- an available OF contact
- one to three CE connected-position contacts (carriage switches) on drawout circuit breakers (depending on the installation).

Standard configurations

Compact NS, Masterpact NT and NW

Types of mechanical interlocking	Possible combinations	Typical electrical diagrams	Diagram no.							
2 devices										
<p>DB101574</p>	<table border="1"> <thead> <tr> <th>QN</th> <th>QR</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>1</td> </tr> </tbody> </table>	QN	QR	0	0	1	0	0	1	<p>Compact NSX100 to 630:</p> <ul style="list-style-type: none"> ■ electrical interlocking without emergency power off (EPO) auxiliaries: <ul style="list-style-type: none"> <input type="checkbox"/> with EPO by MN 51201177 <input type="checkbox"/> with EPO by MX 51201178 <input type="checkbox"/> with EPO by MX 51201179 ■ Compact NS630b to 1600: ■ electrical interlocking with lockout after fault: <ul style="list-style-type: none"> <input type="checkbox"/> permanent replacement source (without IVE) 51201180 <input type="checkbox"/> with EPO by MX (without IVE) 51201181 <input type="checkbox"/> with EPO by MN (without IVE) 51201182 <input type="checkbox"/> permanent replacement source (with IVE) 51201183 <input type="checkbox"/> with EPO by MX (with IVE) 51201184 <input type="checkbox"/> with EPO by MN (with IVE) 51201185 ■ automatic control without lockout after fault: <ul style="list-style-type: none"> <input type="checkbox"/> permanent replacement source (without IVE) 51201186 <input type="checkbox"/> engine generator set (without IVE) 51201187 ■ Masterpact NT and NW: ■ electrical interlocking with lockout after fault: <ul style="list-style-type: none"> <input type="checkbox"/> permanent replacement source (without IVE) 51201139 <input type="checkbox"/> with EPO by MX (without IVE) 51201140 <input type="checkbox"/> with EPO by MN (without IVE) 51201141 <input type="checkbox"/> permanent replacement source (with IVE) 51201142 <input type="checkbox"/> with EPO by MX (with IVE) 51201143 <input type="checkbox"/> with EPO by MN (with IVE) 51201144 ■ automatic control without lockout after fault: <ul style="list-style-type: none"> <input type="checkbox"/> permanent replacement source (without IVE) 51156226 <input type="checkbox"/> engine generator set (without IVE) 51156227 ■ automatic control with lockout after fault: <ul style="list-style-type: none"> <input type="checkbox"/> permanent replacement source (with IVE) 51156904 <input type="checkbox"/> engine generator set (with IVE) 51156905 <input type="checkbox"/> BA/UA controller (with IVE) 51156903
QN	QR									
0	0									
1	0									
0	1									

Masterpact NW only

Types of mechanical interlocking	Possible combinations	Typical electrical diagrams	Diagram no.																				
3 devices: 2 "Normal" sources and 1 "Replacement" source																							
<p>DB101575</p>	<table border="1"> <thead> <tr> <th>QN1</th> <th>QN2</th> <th>QR</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> </tr> </tbody> </table>	QN1	QN2	QR	0	0	0	1	1	0	0	0	1	<ul style="list-style-type: none"> ■ electrical interlocking: <ul style="list-style-type: none"> <input type="checkbox"/> without lockout after fault 51156906 <input type="checkbox"/> with lockout after fault 51156907 									
QN1	QN2	QR																					
0	0	0																					
1	1	0																					
0	0	1																					
3 devices: 2 "Normal" sources and 1 "Replacement" source with source selection																							
<p>DB101576</p>	<table border="1"> <thead> <tr> <th>QN1</th> <th>QN2</th> <th>QR</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> </tr> </tbody> </table>	QN1	QN2	QR	0	0	0	1	0	0	0	0	1	1	1	0	0	1	0	<ul style="list-style-type: none"> ■ automatic control with engine generator set: <ul style="list-style-type: none"> <input type="checkbox"/> without lockout after fault (with MN) 51156908 <input type="checkbox"/> with lockout after fault (with MN) 51156909 			
QN1	QN2	QR																					
0	0	0																					
1	0	0																					
0	0	1																					
1	1	0																					
0	1	0																					
3 devices: 3 sources, only one device																							
<p>DB101577</p>	<table border="1"> <thead> <tr> <th>QS1</th> <th>QS2</th> <th>QS3</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> </tr> </tbody> </table>	QS1	QS2	QS3	0	0	0	1	0	0	0	1	0	0	0	1	<ul style="list-style-type: none"> ■ electrical interlocking: <ul style="list-style-type: none"> <input type="checkbox"/> without lockout after fault 51156910 <input type="checkbox"/> with lockout after fault 51156911 						
QS1	QS2	QS3																					
0	0	0																					
1	0	0																					
0	1	0																					
0	0	1																					
3 devices: 2 sources + 1 coupling																							
<p>DB101578</p>	<table border="1"> <thead> <tr> <th>QS1</th> <th>QC</th> <th>QS2</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> </tr> </tbody> </table> <p>(1) possible by forcing operation</p>	QS1	QC	QS2	0	0	0	1	0	1	1	1	0	0	1	1	1	0	0	0	0	1	<ul style="list-style-type: none"> ■ electrical interlocking: <ul style="list-style-type: none"> <input type="checkbox"/> without lockout after fault 51156912 <input type="checkbox"/> with lockout after fault 51156913 ■ automatic control with lockout after fault 51156914
QS1	QC	QS2																					
0	0	0																					
1	0	1																					
1	1	0																					
0	1	1																					
1	0	0																					
0	0	1																					

"Lockout after fault" option. This option makes it necessary to manually reset the device following fault tripping.

By combining a remote-operated source-changeover system with an integrated BA or UA automatic controller, it is possible to automatically control source transfer according to user-selected sequences.

These controllers can be used on source-changeover systems comprising 2 circuit breakers.

For source-changeover systems comprising 3 circuit breakers, the automatic control diagram must be prepared by the installer as a complement to diagrams provided in the "electrical diagrams" section of this catalogue.



BA controller.



UA controller.

Controller	BA	UA					
Compatible circuit breakers	All Compact NS, Compact NSX and Masterpact circuit breakers						
4-position switch							
Automatic operation	■	■					
Forced operation on "Normal" source	■	■					
Forced operation on "Replacement" source	■	■					
Stop (both "Normal" and "Replacement" sources off)	■	■					
Automatic operation							
Monitoring of the "Normal" source and automatic transfer	■	■					
Generator set startup control		■					
Delayed shutdown (adjustable) of generator set		■					
Load shedding and reconnection of non-priority circuits		■					
Transfer to the "Replacement" source if one of the phases of the "Normal" phase is absent		■					
Test							
By opening the P25M circuit breaker supplying the controller	■						
By pressing the test button on the front of the controller		■					
Indications							
Circuit breaker status indication on the front of the controller: on, off, fault trip	■	■					
Automatic mode indicating contact	■	■					
Other functions							
Selection of type of "Normal" source (single-phase or three-phase) ⁽¹⁾		■					
Voluntary transfer to "Replacement" source (e.g. energy management commands)	■	■					
During peak-tariff periods (energy management commands) forced operation on "Normal" source if "Replacement" source not operational		■					
Additional contact (not part of controller). Transfer to "Replacement" source only if contact is closed. (e.g. used to test the frequency of UR).	■	■					
Setting of maximum startup time for the replacement source		■					
Options							
Communication option							
Power supply							
Control voltages ⁽²⁾	110 V	■	■				
	220 to 240 V 50/60 Hz	■	■				
	380 to 415 V 50/60 Hz and 440 V 60 Hz	■	■				
Operating thresholds							
Undervoltage	0.35 Un ≤ voltage ≤ 0.7 Un	■	■				
Phase failure	0.5 Un ≤ voltage ≤ 0.7 Un		■				
Voltage presence	voltage ≥ 0.85 Un	■	■				
IP degree of protection (EN 60529) and IK degree of protection against external mechanical impacts (EN 50102)							
Front	IP40	■	■				
Side	IP30	■	■				
Connectors	IP20	■	■				
Front	IK07	■	■				
Characteristics of output contacts (dry, volt-free contacts)							
Rated thermal current (A)	8						
Minimum load	10 mA at 12 V						
Output contacts:							
Position of the Auto/Stop switch		■	■				
Load shedding and reconnection order			■				
Generator set start order.			■				
		AC	DC				
Utilisation category (IEC 947-5-1)		AC12	AC13	AC14	AC15	DC12	DC13
Operational current (A)	24 V	8	7	5	5	8	2
	48 V	8	7	5	5	2	-
	110 V	8	6	4	4	0.6	-
	220/240 V	8	6	4	3	-	-
	250 V	-	-	-	-	0.4	-
	380/415 V	5	-	-	-	-	-
	440 V	4	-	-	-	-	-
	660/690 V	-	-	-	-	-	-

(1) For example, 220 V single-phase or 220 V three-phase.

(2) The controller is powered by the ACP control plate. The same voltage must be used for the ACP plate, the IVE unit and the circuit breaker operating mechanisms. If this voltage is the same as the source voltage, then the "Normal" and "Replacement" sources can be used directly for the power supply. If not, an isolation transformer must be used.

Controller installation



ACP control plate.

ACP control plate

The control plate provides in a single unit:

- protection for the BA or UA controller with two highly limiting P25M circuit breakers (infinite breaking capacity) for power drawn from the AC source
- control of circuit-breaker ON and OFF functions via two relay contactors
- connection of the circuit breakers to the BA or UA controller via a built-in terminal block.

Control voltages

- 110 V 50/60 Hz.
- 220 to 240 V 50/60 Hz.
- 380 to 415 V 50/60 Hz and 440 V 60 Hz.

The same voltage must be used for the ACP control plate, the controller and the circuit breaker operating mechanisms.

Installation


Connection between the ACP control plate and the IVE unit may use:

- wiring done by the installer
- prefabricated wiring (optional).


Installation of the BA and UA controllers

The BA and UA controllers may be installed in one of two manners:

- directly mounted on the ACP control plate
- mounted on the front panel of the switchboard
- if the length of the connection between the controller and the control plate (ACP) is less than or equal to 1 m, the connecting cable **ref. 29368** can be ordered as an optional extra. Cables longer than 1 m, but not longer than 2 m will be the responsibility of the installer.

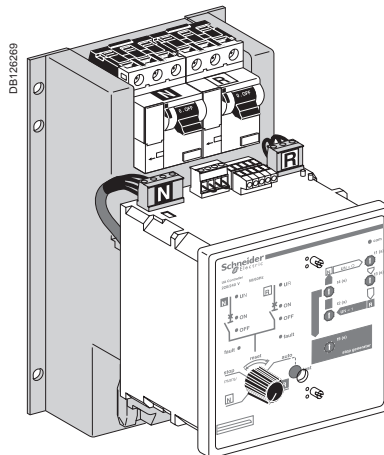

Mounting on the ACP control plate.

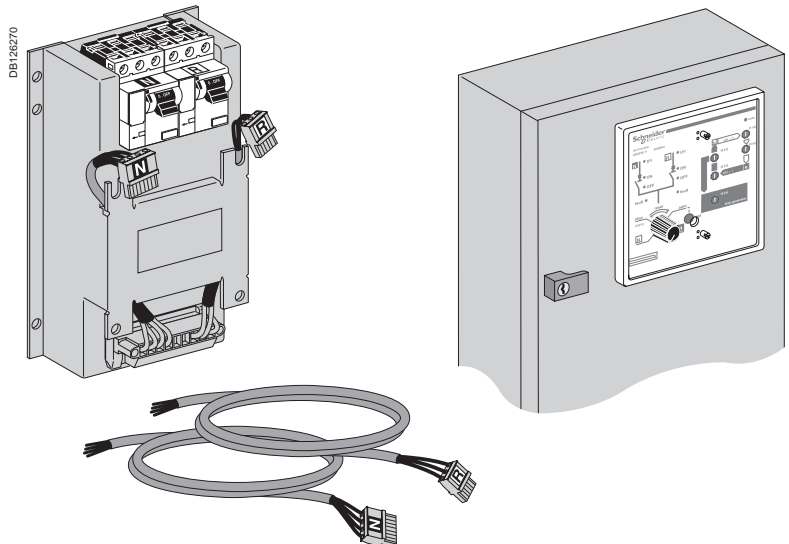

Mounting on the front panel of the switchboard.

The BA controller is used to create simple source-changeover systems that switch from one source to another depending on the presence of voltage U_N on the "Normal" source.

It is generally used to manage two permanent sources and can control Compact NS, Compact NSX and Masterpact NT/NW circuit breakers and switch-disconnectors.



DB403841

Operating modes

A four-position switch may be used to select:

- automatic operation
- forced operation on the "Normal" source
- forced operation on the "Replacement" source
- stop (both "Normal" and "Replacement" sources off).

Setting the time delays

Time delays are set on the front of the controller.

t1. delay between detection that the "Normal" source has failed and the transmission of the order to open the "Normal" source circuit breaker (adjustable from 0.1 to 30 seconds).

t2. delay between detection that the "Normal" source has returned and the transmission of the order to open the "Replacement" source circuit breaker (adjustable from 0.1 to 240 seconds).

Circuit breaker commands and status indications

The status of the circuit breakers is indicated on the front of the controller.


- ON, OFF, fault.

A built-in terminal block may be used to connect the following input/output signals:

- inputs:
 - voluntary order to transfer to source R (e.g. for special tariffs, etc.)
 - additional control contact (not part of the controller). Transfer to the "Replacement" source takes place only if the contact is closed (e.g. used to test the frequency of UR, etc.)
- outputs:
 - indication of operation in automatic or stop mode via changeover contacts.

Test

It is possible to test the operation of the BA controller by turning OFF (opening) the P25M circuit breaker for the "Normal" source and thus simulating a failure of voltage U_N .

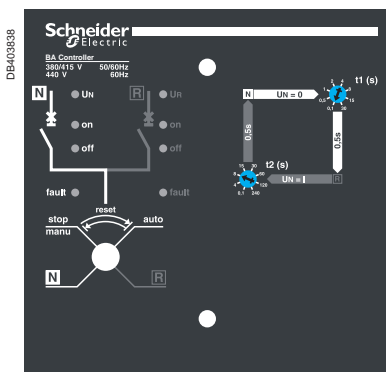


DB403838


Front of the BA controller.

BA controller operating sequences


Switch set to Auto (automatic operation and special-tariff mode)

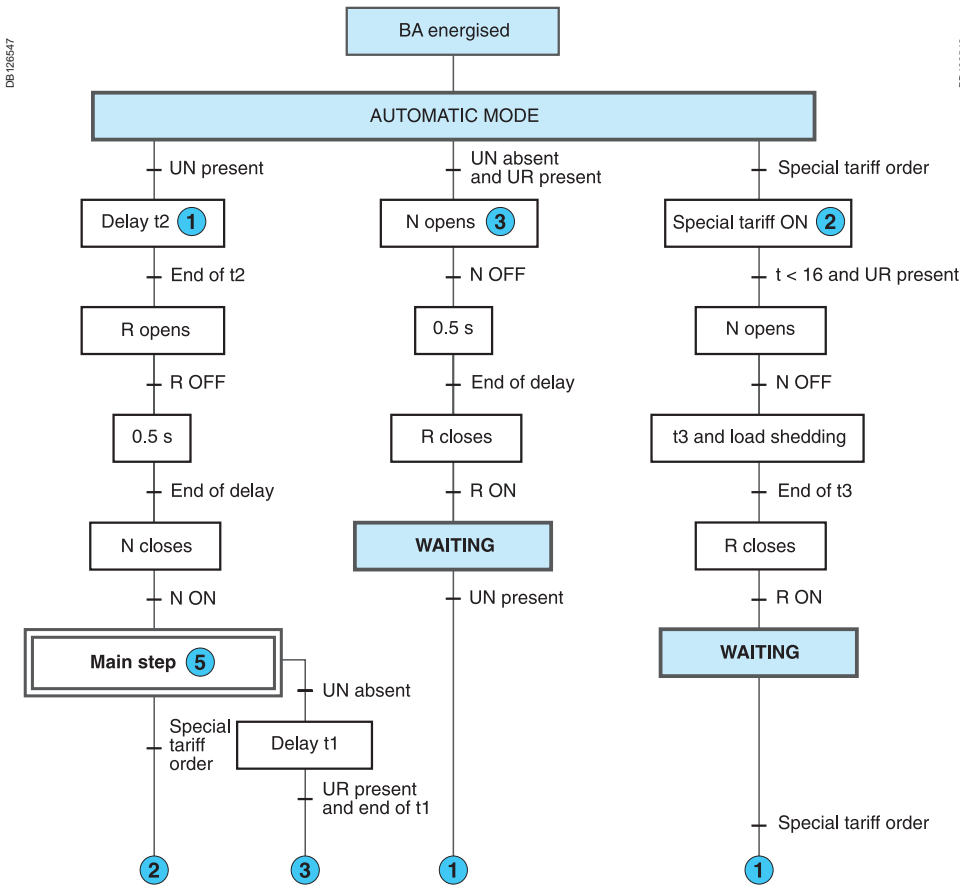


Switch set to the "N" position (forced operation on the "Normal" source)

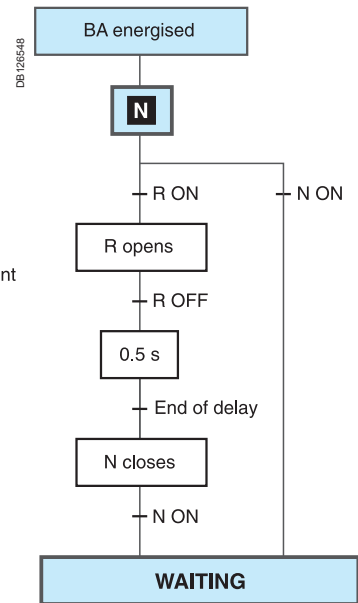

Switch set to the "R" position (forced operation on the "Replacement" source)

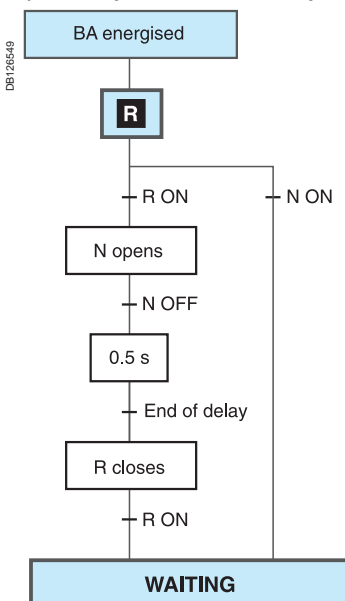

Switch set to the "Stop" position

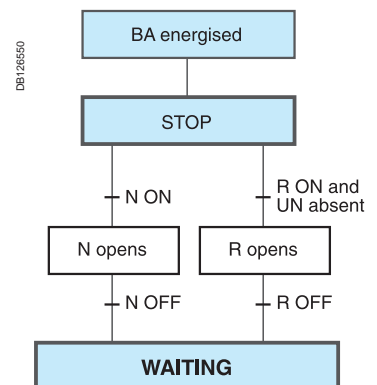

Key

- UN : "Normal" source voltage
- UR : "Replacement" source voltage
- N : "Normal" source circuit breaker
- R : "Replacement" source circuit breaker

① The number sends to the indicated step when the condition is true.

WAITING The system exits this mode when the operating mode is modified or when an external event occurs (e.g. failure or return of UN).

The UA controller is used to create a source-changeover system integrating the following automatic functions:

- transfer from one source to another depending on the presence of voltage UN on the “Normal” source
- startup of an engine generator set
- shedding and reconnection of non-priority circuits
- transfer to the “Replacement” source if one of the phases on the “Normal” source fails.

The UA controller can control Compact NS, Compact NSX and Masterpact NT/NW devices.

Operating modes

A four-position switch may be used to select:

- automatic operation
- forced operation on the “Normal” source
- forced operation on the “Replacement” source
- stop (both “Normal” and “Replacement” sources off, then manual operation).

Setting the time delays

Time delays are set on the front of the controller.

t1. delay between detection that the “Normal” source has failed and the transmission of the order to open the “Normal” source circuit breaker (adjustable from 0.1 to 30 seconds).

t2. delay between detection that the “Normal” source has returned and the transmission of the order to open the “Replacement” source circuit breaker (adjustable from 0.1 to 240 seconds).

t3. delay following opening of QN with load shedding and before closing of QR (adjustable from 0.5 to 30 seconds).

t4. delay following opening of QR with load reconnection and before closing of QN (adjustable from 0.5 to 30 seconds).

t5. delay for confirmation that UN is present before shutting down the engine generator set (adjustable from 60 to 600 seconds).

t6. delay before startup of the engine generator set (120 or 180 seconds).

Commands and indications

Circuit breaker status indications on the front of the controller:

- ON, OFF, fault.

A built-in terminal block may be used to connect the following input/output signals:

- inputs:

- voluntary order to transfer to source R (e.g. for special tariffs, etc.)
- additional control contact (not part of the controller). Transfer to the “Replacement” source takes place only if the contact is closed (e.g. used to test the frequency of UR, etc.)

- outputs:

- control of an engine generator set (ON / OFF)
- shedding of non-priority circuits
- indication of operation in automatic mode via changeover contacts.

Distribution-system settings

Three switches are used to:

- select the type of “Normal” source, whether single-phase or three-phase (e.g. 240 V single-phase or 240 V three-phase)
- select whether to remain (or not) on the “Normal” source if the “Replacement” source is not operational during operation on special tariffs
- select the maximum permissible startup time for the engine generator set during operation on special tariffs (120 or 180 seconds).


Test

A pushbutton on the front of the controller may be used to test transfer from the “Normal” source to the “Replacement” source, then the return to the “Normal” source. The test lasts approximately three minutes.

COM communications option

Using the internal bus protocol, this option may be used to remote the following information:


- circuit breaker status (ON, OFF, fault trip)
- presence of the “Normal” and “Replacement” voltages
- presence of an order for forced operation (e.g. special tariffs)
- settings and configuration information
- status of non-priority circuits (loads shed or not)
- position of the switch (stop, auto, forced operation on the “Normal” source, forced operation on the “Replacement” source).

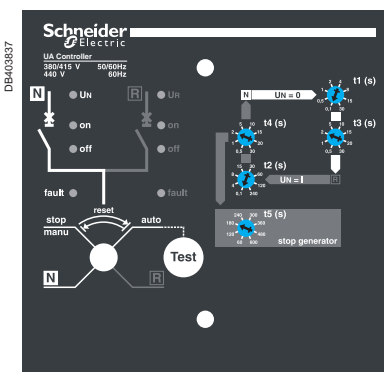


Front of the UA controller.

UA controller Operating sequences Forced operation mode


Switch set to the "R" position (forced operation on the "Replacement" source)

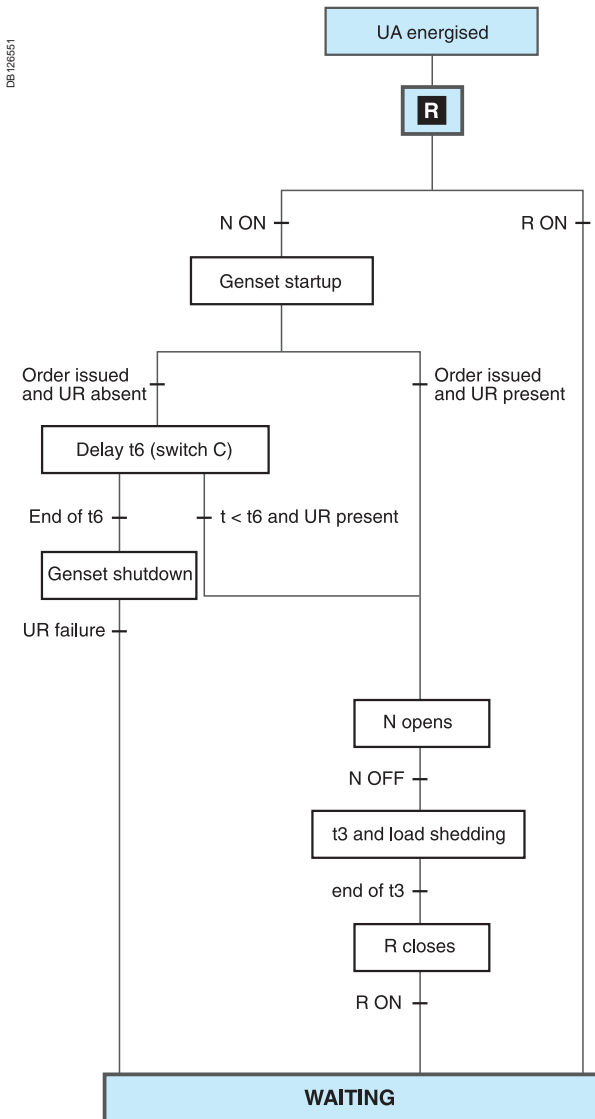

Switch set to the "N" position (forced operation on the "Normal" source)

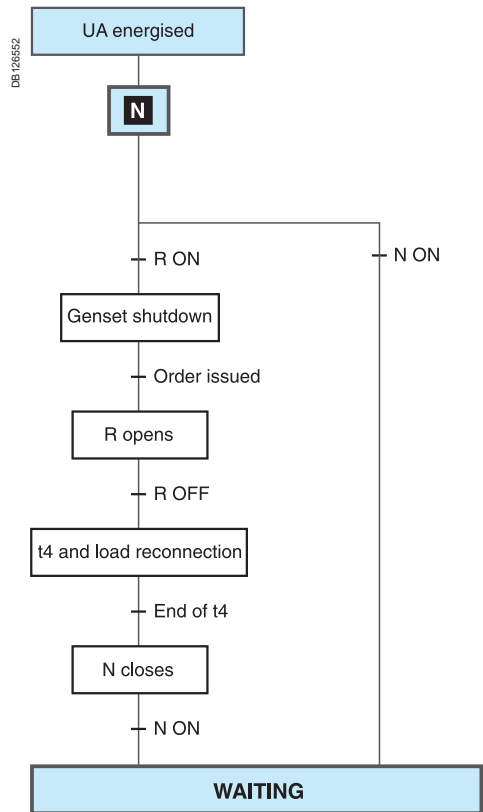

Switch set to the "Stop" position

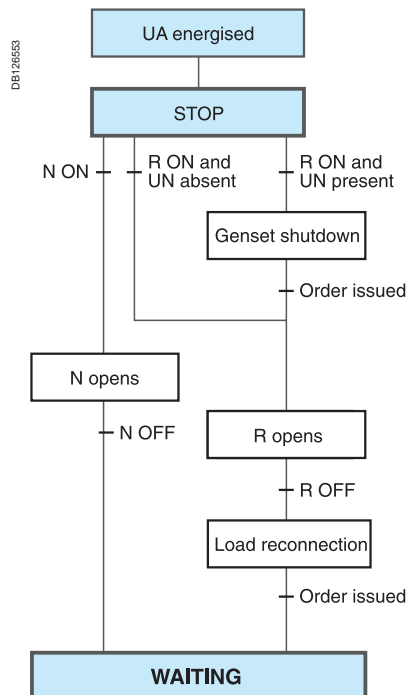

WAITING The system exits this mode when the operating mode is modified or when an external event occurs (e.g. failure or return of UN).

When the UA controller is not energised, the output for generator set startup is activated).


Key

- UN : "Normal" source voltage
- UR : "Replacement" source voltage
- N : "Normal" source circuit breaker
- R : "Replacement" source circuit breaker

UA controller Operating sequences Test mode and automatic operation

Switch set to the "Auto" position (automatic operation and test mode).

DB126555

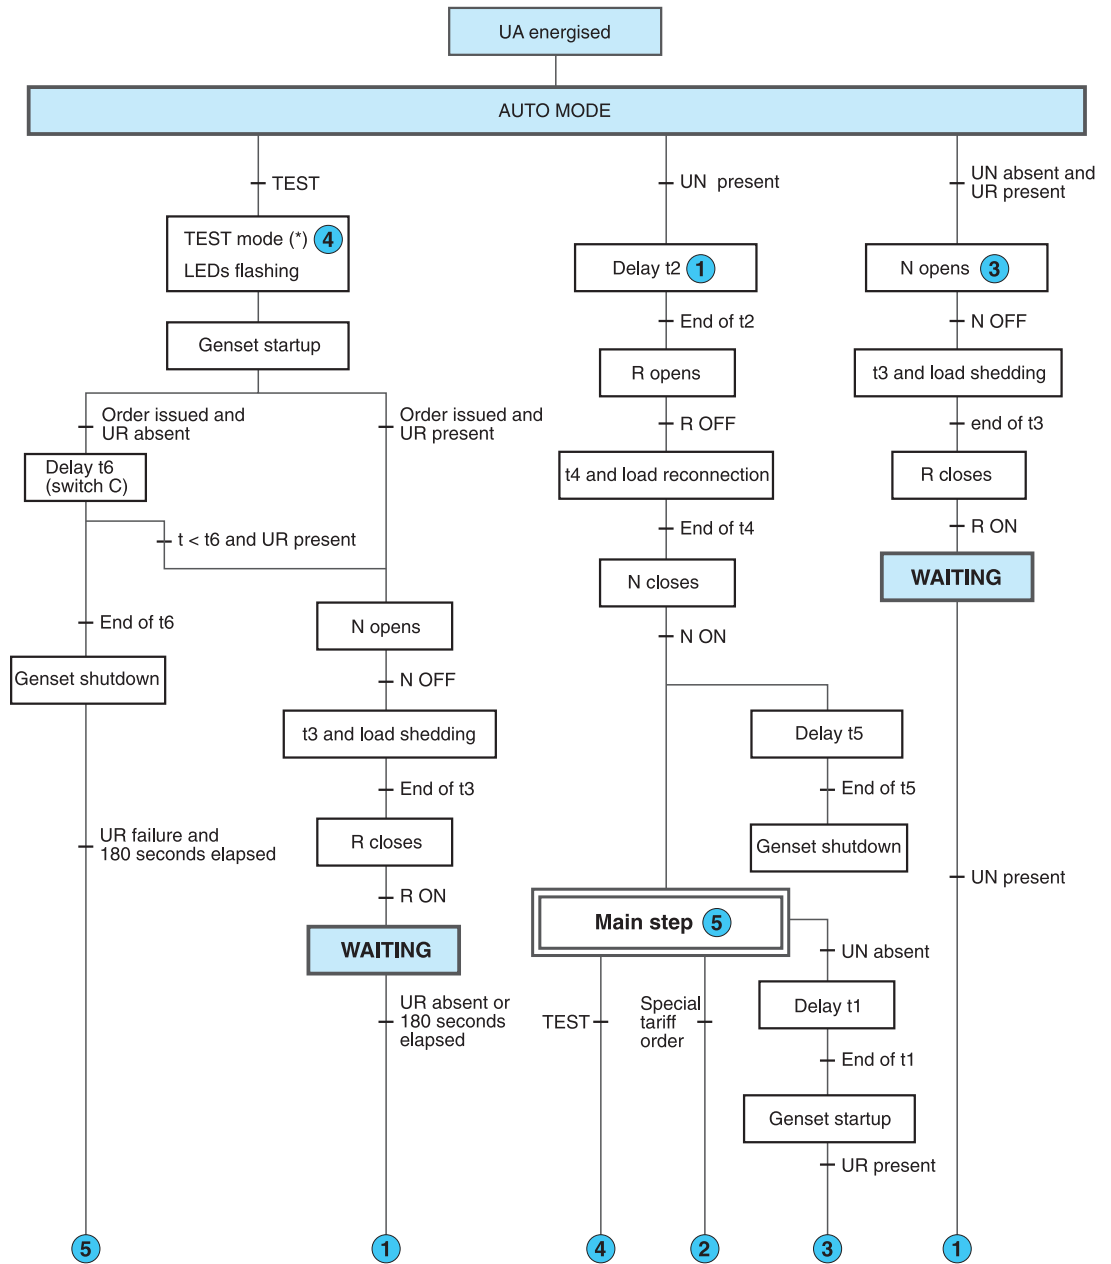

WAITING The system exits this mode when the operating mode is modified or when an external event occurs (e.g. failure or return of UN).


When the UA controller is not energised, the output for generator set startup is activated).

Key

- UN : "Normal" source voltage
- UR : "Replacement" source voltage
- N : "Normal" source circuit breaker
- R : "Replacement" source circuit breaker
- B : Penalties accepted (N ON), i.e. B = 1
- (*) The test lasts 180 seconds.

① The number sends to the indicated step when the condition is true.

IVE unit

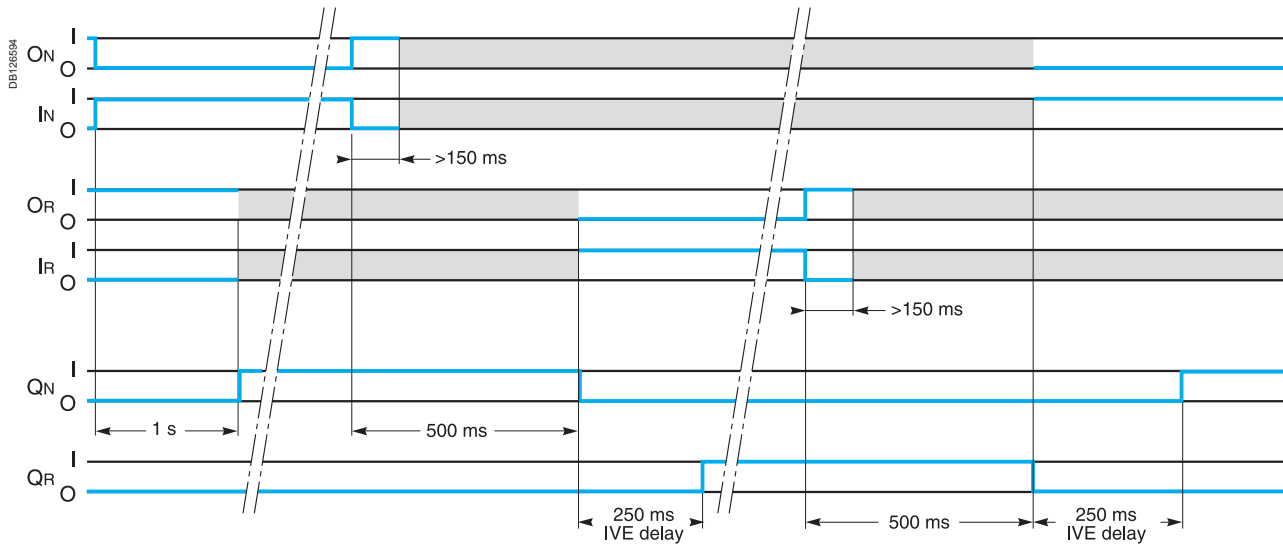

Symbols

- QN** : "Normal" Compact circuit breaker equipped for remote operation (motor mechanism)
- QR** : "Replacement" Compact circuit breaker equipped for remote operation (motor mechanism)
- ON** : Circuit breaker QN opening order
- OR** : Circuit breaker QR opening order
- IN** : Circuit breaker QN closing order
- IR** : Circuit breaker QR closing order
- L1** : Faulty "Normal" indication LED
- L2** : Faulty "Replacement" indication LED

Key


- O: OFF (circuit open)
- I: ON (circuit closed)
- : either ON or OFF.

Note:

Following all trips (overload, short-circuit, earth-leakage fault, voluntary trip), a manual reset on the front of the motor mechanism is required.

BA/UA controller

BA controller

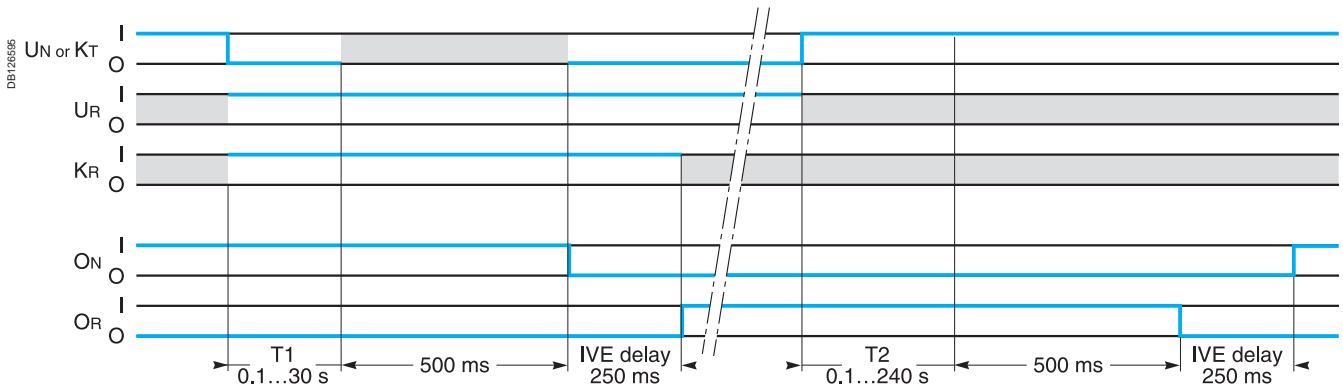


Inputs

- UN : "Normal" source voltage
- UR : "Replacement" source voltage
- KT : order for forced-operation on R
- KR : additional check before transfer

Outputs

- QN : "Normal" source circuit breaker
- QR : "Replacement" source circuit breaker

UA controller

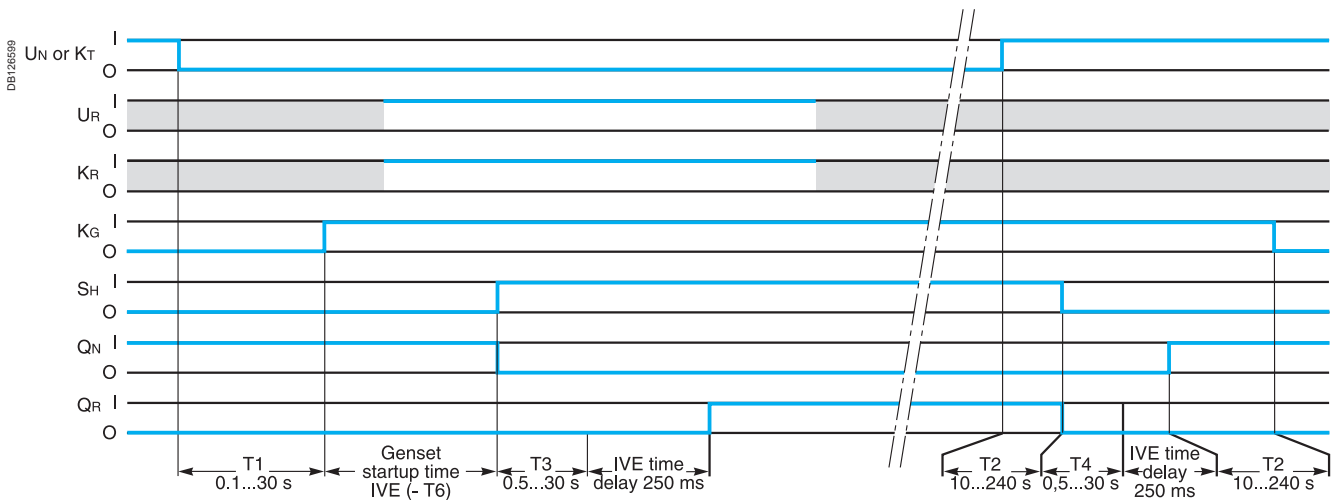

Inputs

- UN : "Normal" source voltage
- UR : "Replacement" source voltage
- KT : order for forced-operation on R
- KR : additional check before transfer

Outputs


- KG : order to the genset
- SH : load-shedding order
- QN : "Normal" source circuit breaker
- QR : "Replacement" source circuit breaker

Key

- O: OFF (circuit open)
- I: ON (circuit closed)
- : either ON or OFF.

Important

If UR is not ON when the transfer order is issued (KT or UN), the sequence is not carried out.
If KR status is not ON when the transfer order is issued (KT or UN), the transfer sequence is carried out later when KR status becomes I.

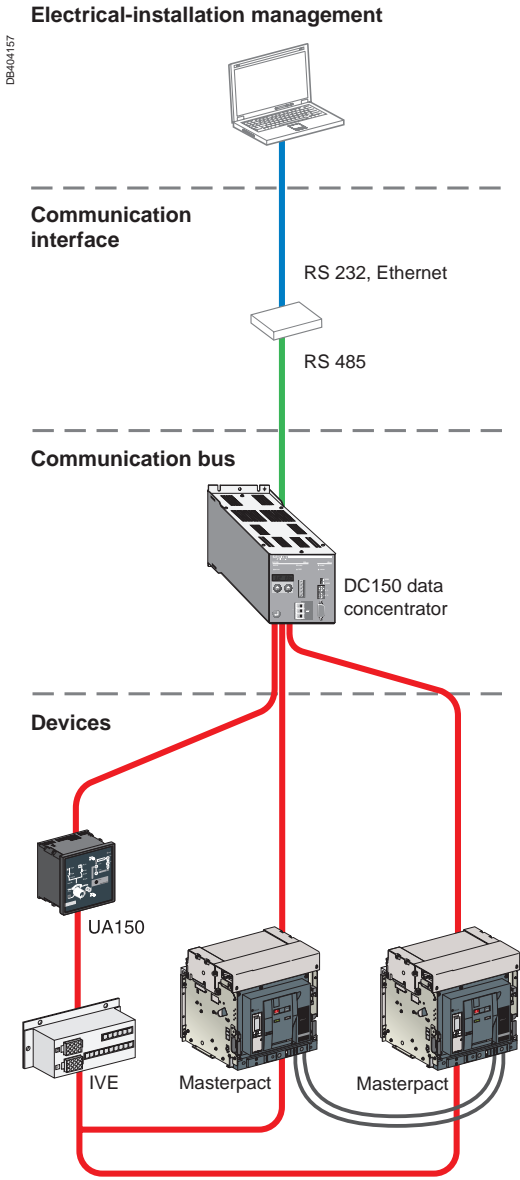

Communications option for Compact NS ≥ 630 A and Masterpact NT/NW

The COM communications option is compatible with all the source-changeover systems for Compact NS630b-1600 and Masterpact NT/NW circuit breakers and switch-disconnectors.

It can be used to remote status information. It may not be used to operate the circuit breakers (only possible locally on the front of the UA150 controller).

Masterpact and Compact NS630b to 1600 circuit breakers and switch-disconnectors are compatible with the Modbus ECO COM option.

Depending on the trip units or control units used, the COM option may also be used to analyse distribution-system parameters required for the operating and maintenance assistance.

Circuit breaker communication

	Switch-disconnector	Circuit breaker
Compact NS630b-1600 status indications		
ON / OFF	■	■
Fault trip		■
Connected / disconnected position	■	■
Masterpact NT/NW status indications		
ON / OFF	■	■
Fault trip		■
Connected / disconnected position	■	■

Operating and maintenance assistance


Operating and maintenance aids	Modbus			
Measurement				
Current	A	E	P	H
Voltages, power...		E	P	H
Frequency			P	H
Power quality: fundamental, harmonics				H
Programming of demand metering		E	P	H
Fault readings				
Type of fault	A	E	P	H
Interrupted current			P	H
Waveform capture				
On faults				H
On demand or programmed				H
Histories and logs				
Trip history		E	P	H
Alarm history			P	H
Event logs			P	H
Indicators				
Counter operation	A	E	P	H
Contact wear			P	H
Maintenance register			P	H

Note:

see the description of the Micrologic control units for further details on protection and alarms, measurements, waveform capture, histories, logs and maintenance indicators.

COM communications option

Controller	UA150
Status indications	
“Normal” source	
ON / OFF	■
Circuit breaker ON	■
Fault trip (SDE)	■
Voltage presence	■
“Replacement” source	
Circuit breaker ON	■
Fault trip (SDE)	■
Voltage presence	■
Status of R voltage contact	■
Controller	
Automatic mode	■
“Normal” mode	■
“Replacement” mode	■
Stop mode	■
Testing	■
“Replacement” engine generator set	
Genset failure	■
Genset OFF	■
Genset ON	■
Shedding of non-priority circuits	■
Reconnection of non-priority circuits	■
Settings	
Time delay t1 for validation of UN absence	■
Time delay t2 for validation of UN return	■
Time delay t3 for wait between opening of N and closing of R	■
Time delay t4 for wait between opening of R and closing of N	■
Time delay t5 for wait between return of UN and order for genset shutdown	■
Time delay t6 for wait before declaring genset failure	■
Penalties accepted to avoid special tariff transfer	■

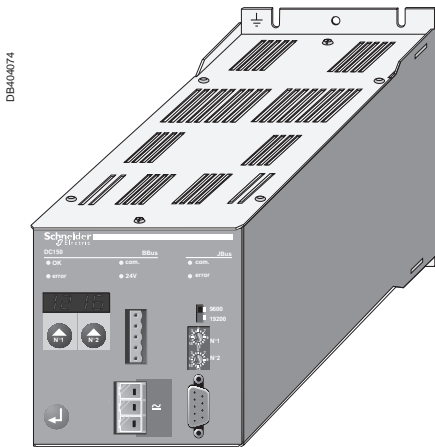

DC150 data concentrator

The DC150 data concentrator is designed to centralise the information provided by the communicating switchgear of the Digipact range and to make this information accessible to a supervisor or PLC under the MODBUS/JBUS protocol.

Main characteristics

- Power supply:
110 V AC to 240 V AC
115 V DC to 125 V DC.
- Weight: 1.5 kg.
- Installation: on panel with the DC150 box which must be earthed on metal part of the installation.
- Over dimensions H x W x D (mm): 138.5 x 100 x 192.8.

schneider-electric.com

This international site allows you to access all the Schneider Electric Solution and Product information via:

- comprehensive descriptions
- range data sheets
- a download area
- product selectors
- ..

You can also access the information dedicated to your business and get in touch with your Schneider Electric country support.

The screenshot displays the Schneider Electric website interface. At the top left is the Schneider Electric logo with the tagline "the global specialist in energy management". To the right are navigation links for "Global", "Home", "Site map", "Contact", and "Français", along with a search bar. Below this is a horizontal menu with categories: "Solutions", "Products and Services", "Support", "Your business", and "Company". The "Solutions" category is expanded to show a grid of industry-specific solutions, each with a representative image and text label: Electric Utilities, Water & Wastewater, Marine, Oil & Gas, Mining, Mineral, Metals, Food & Beverage, Data Centres, Healthcare, Life Sciences, Hotels, Office Buildings, Retail, Energy Efficiency, and Machine Control Solutions. Below the solutions grid is a large banner for "EcoStruxure". Underneath the banner are five main product management categories, each with a list of specific services:

- Power Management:** Power Management Systems, High Density Metering, Energy Tariff Optimization, Power Quality Mitigation, Local LV/MV Protection & Control, Intelligent Power & Motor Control, Renewable Energy Conversion, EVlink charging solutions for electric vehicles.
- Process & Machines Management:** Process & Machines Management Systems, General Machines Control, Packaging Control, Material Handling Control, Hoisting Control.
- IT / Server Room Management:** IT / Server Room Management Systems, Rack Systems, Uninterruptible Power Supply, Cooling Control, Surveillance.
- Building Management:** Lighting Control, Outdoor Lighting Control, HVAC Control, Room Control.
- Security Management:** Security Management Systems, Access Control, Video Security, Fire & Life Safety, Intrusion Detection.

 At the bottom of the page is a footer with navigation links: "Home | Solutions | Products and Services | Support | Your business | Company" and copyright information: "© Schneider Electric | Privacy Policy".


<i>Presentation</i>	2
<i>Functions and characteristics</i>	A-1
Manual source-changeover systems	B-2
Interlocking of direct rotary handles	B-2
Interlocking of extended rotary handles	B-3
Interlocking of toggles	B-5
Complete source-changeover assembly	B-6
Downstream coupling accessory	B-7
Remote-operated source-changeover systems	B-9
Interlocking on a base plate	B-9
Interlocking using connecting rods	B-13
Interlocking using cables	B-15
IVE unit, BA and UA automatic controllers	B-20
<i>Electrical diagrams</i>	C-1
<i>Catalogue numbers and order forms</i>	D-1

Manual source-changeover systems


Interlocking of direct rotary handles

Compact NSX100 to 630

Dimensions

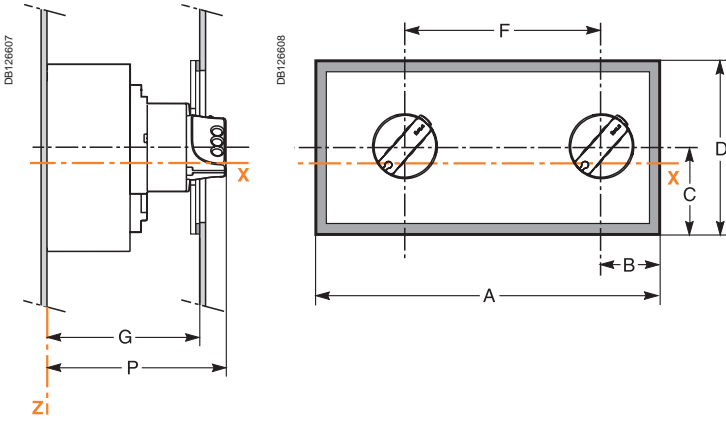

Front-panel cutout

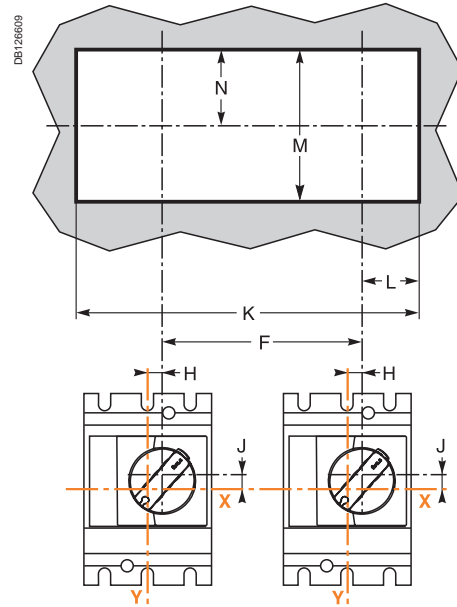


Dimensions (mm)


	A	B	C	D	F	G	H	J	K	L	M	N	P
NSX100/160/250	325	90	87.5	175	156	133	9.25	9	295	75.5	150	75	155
NSX400/630	416	115	100	200	210	157	5	24.6	386	100	175	74.5	179

Interpact INS/INV250 - 100 to 250 / Interpact INS/INV320/400/500/630

Dimensions

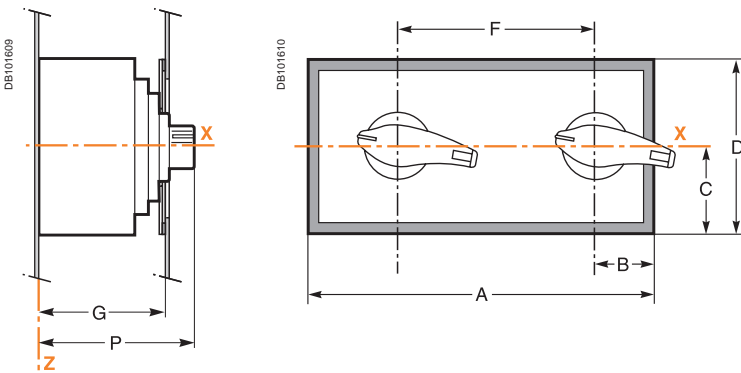

Front-panel cutout

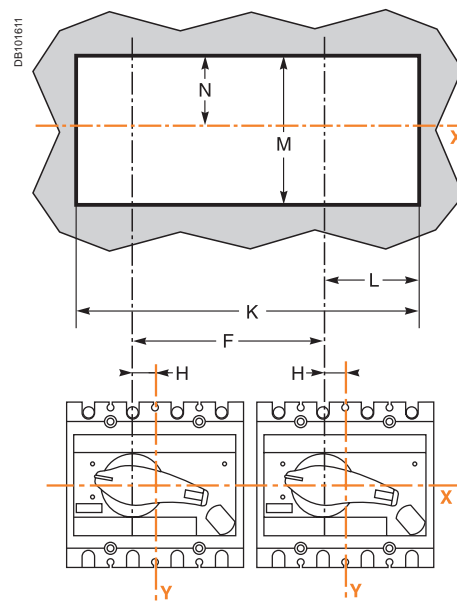

Dimensions (mm)


Type	A	B	C	D	F	G	H	K	L	M	N	P
INS/INV250 - 100/160/200/250	325	90	87.5	175	156	106	17.5	295	75.5	150	75	131
INS/INV320/400/500/630	416	115	100	200	210	130	22.5	386	100	175	74.5	160.4

Note: X and Y are the symmetry planes for a 3-pole device.


Interlocking of extended rotary handles

Compact NSX100 to 630

Dimensions

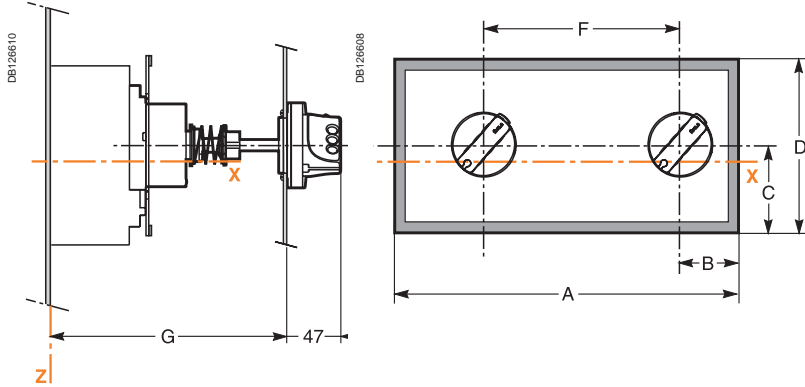

Front-panel cutout

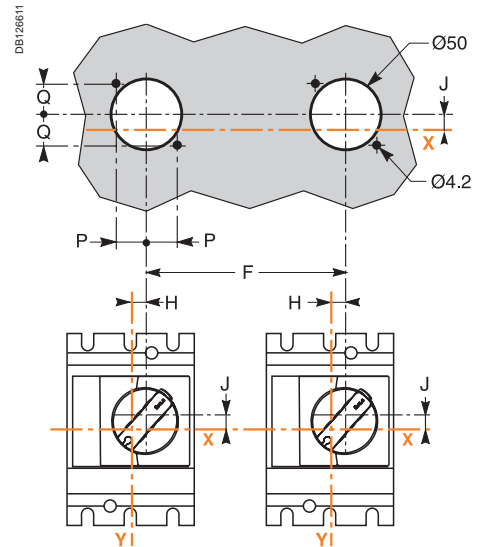


Dimensions (mm)


Type	A	B	C	D	F	G min	G max	H	J	P	Q
NSX100/160/250	325	90	87.5	175	156	171	600	9.25	9	25.5	25.5
NSX400/630	416	115	100	200	210	195	600	5	24.6	30.8	30.8

Interpact INS40/63/80/100/125/160 / Interpact INS/INV250 - 100 to 250 / Interpact INS/INV320/400/500/630

Dimensions

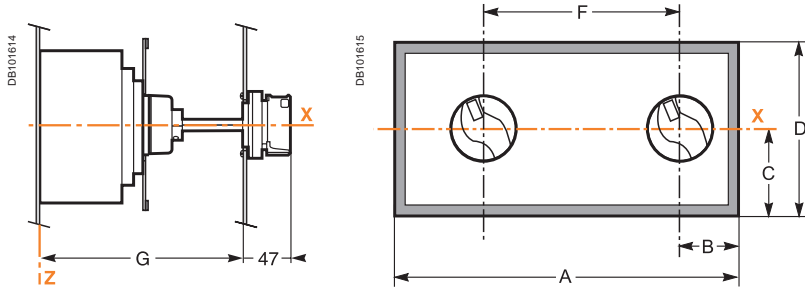

Front-panel cutout

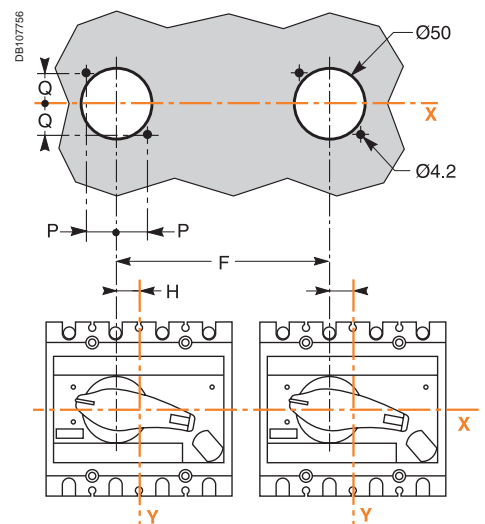

Dimensions (mm)


Type	A	B	C	D	F	G min	G max	H	P	Q
INS40/63/80	325	90	87.5	175	156	155	396	0	25.5	25.5
INS100/125/160	325	90	87.5	175	156	200	441	0	25.5	25.5
INS/INV250 - 100/160/200/250	325	90	87.5	175	156	185	600	17.5	25.5	25.5
INS320/400/500/630	416	115	100	200	210	204	600	22.5	30.8	30.8

Manual source-changeover systems


Interlocking of extended rotary handles

Compact NS630b to 1600

Dimensions

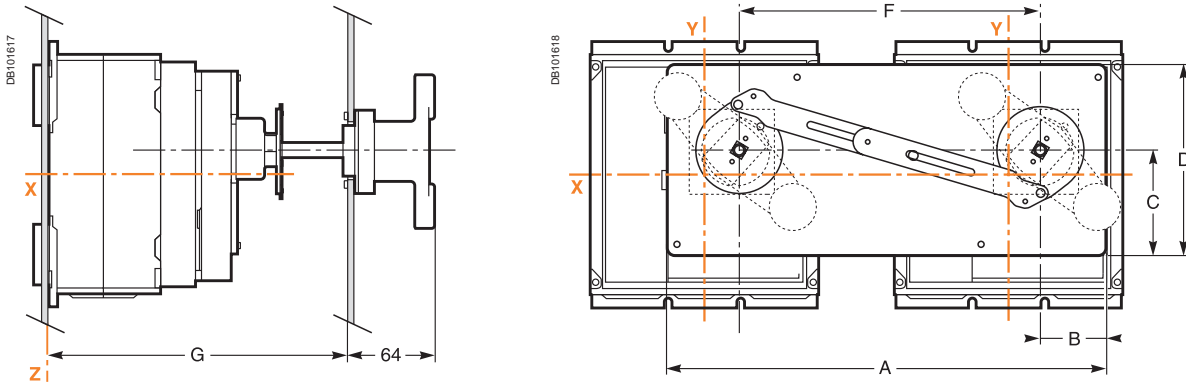

Front-panel cutout

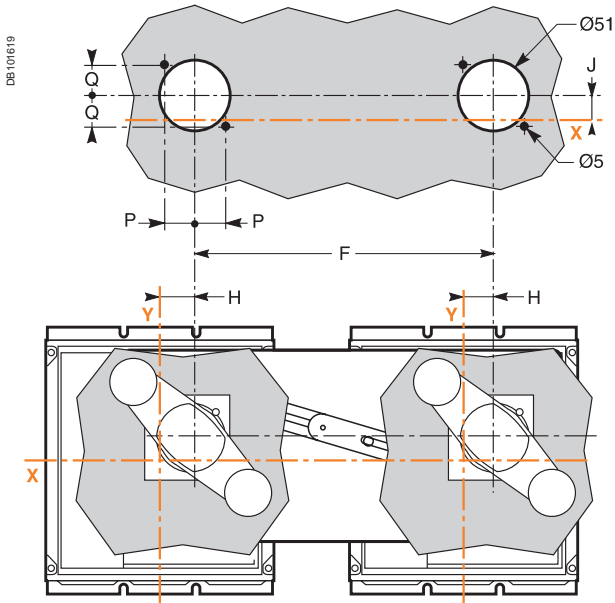


Dimensions (mm)

Type	A	B	C	D	F	G min	G max	H	J	P	Q	R
NS630b/800/1000/1200/1600	411	63.5	98	175	280	218	605	25	24	25.5	25.5	64


Interlocking of toggles

Compact NSX100 to 630


Dimensions

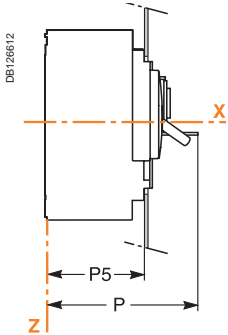

3 poles

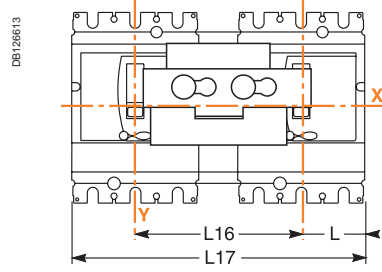


4 poles

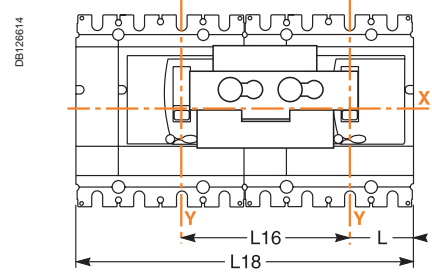


Front-panel cutout

3 poles on left

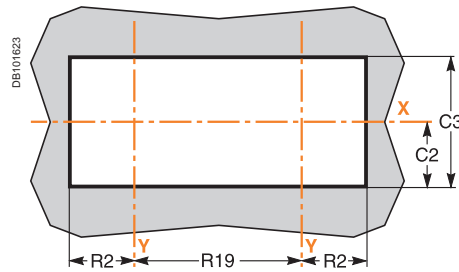

4 poles on left

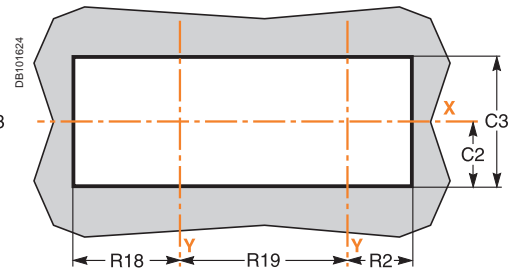

Dimensions (mm)


Type	C2	C3	L	L16	L17	L18	R2	R18	R19	P5	P
NSX100/160/250	54	108	52.5	140	245	280	54	89	140	83	120
NSX400/630	92.5	182	70	185	325	370	71.5	116.5	185	107	150

Manual source-changeover systems


Complete source-changeover assembly

Assembly for INS250 - 100 to 250 / Assembly for INS320/400/500/630

Dimensions

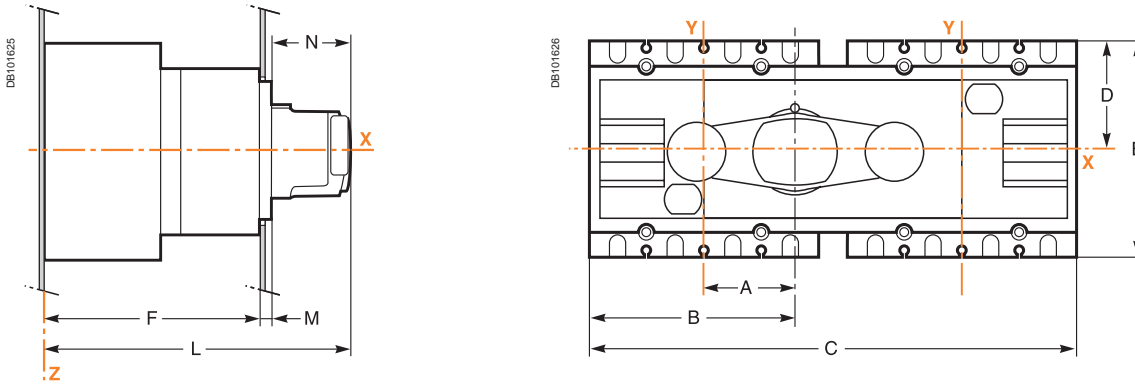


Front-panel cutout

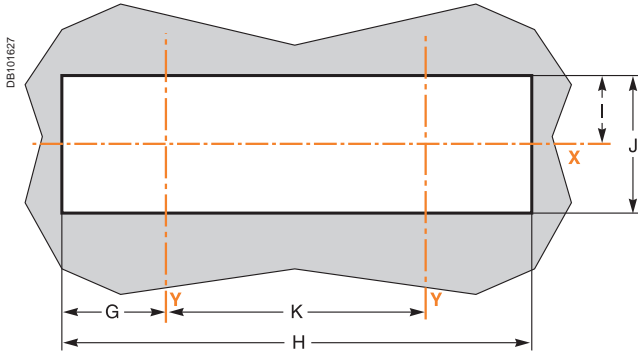

Dimensions (mm)

Type	A	B	C	D	E	F	G	H	I	J	K	L	M	N
INS250 - 100/160/200/250	60.4	130.4	296	68	136	131	61.8	279.3	42	84	156	186.5	5.5	50
INS320/400/500/630	82.5	175	395	102.5	205	155	87	383.7	64	128	210	213	8	50

Dimensions of the complete source-changeover assembly with an extended handle

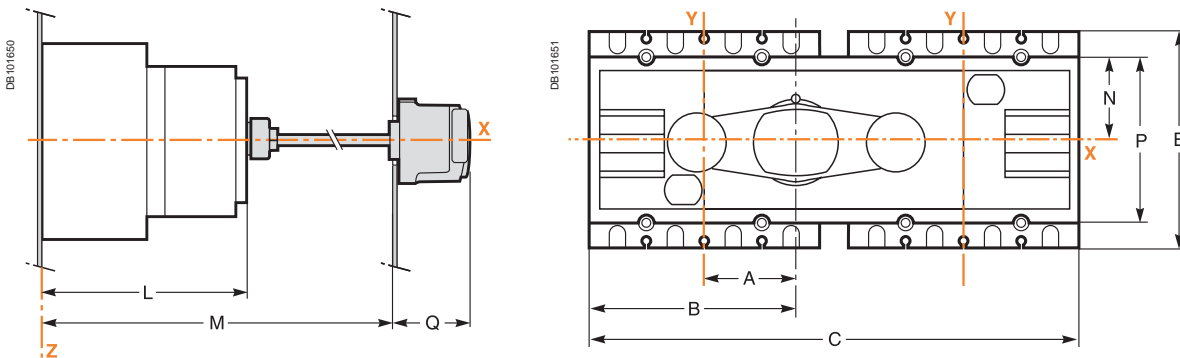


Dimensions (mm)

Type	A	B	C	E	K	L	M	N
INS250 - 100/160/200/250	60.4	130.4	295	136	156	138.5	631	50
INS320/400/500/630	82.5	175	395	205	210	162.5	658	75

Dimensions (mm)

Type	P	Mmax	Mmin	Q
INS250 - 100/160/200/250	100	567.5	195	64
INS320/400/500/630	150	593	220.5	64

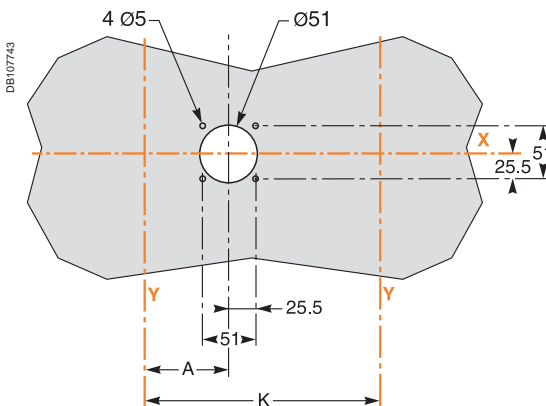


Note: Lines X and Y indicate the axes of symmetry of the switch-disconnector. Reference plane Z corresponds to the back of the switch-disconnector.


Downstream coupling accessory

Compact NSX100 to NSX630 (only for Compact NSX fixed devices)


Dimensions

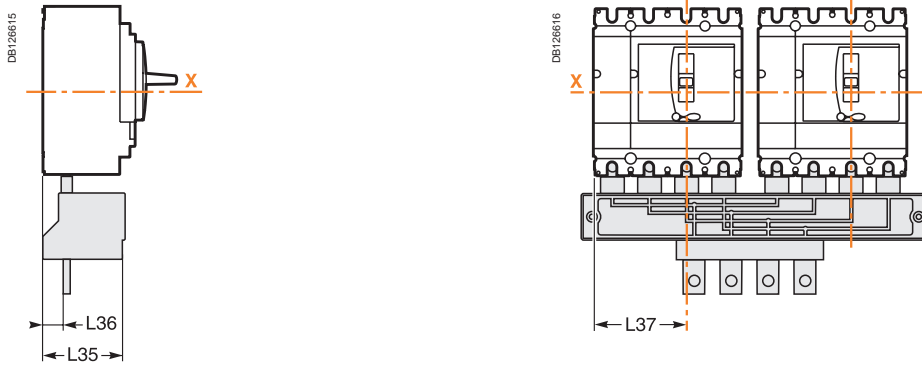

Dimensions

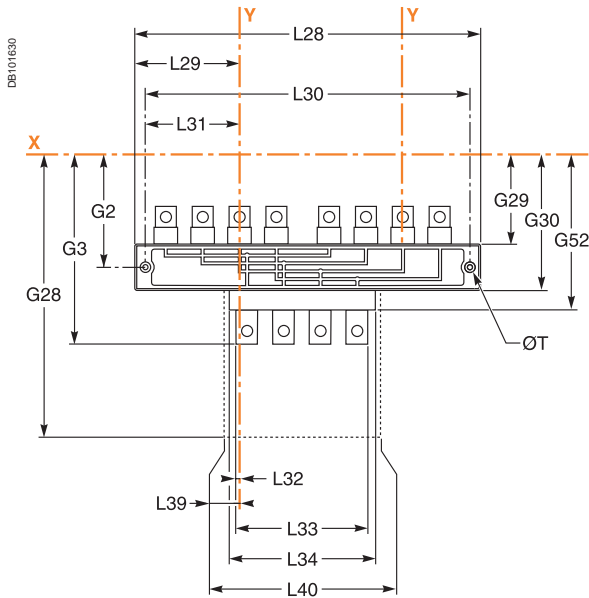

Connection

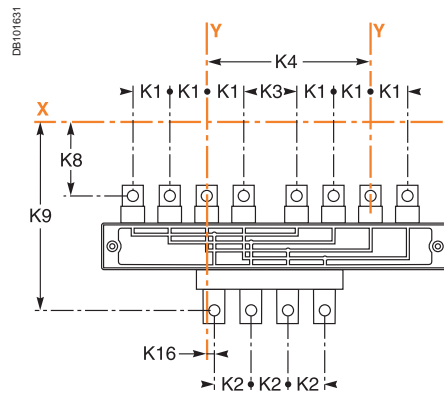

Dimensions (mm)

Type	G2	G3	G28	G29	G30	G52	K1	K2	K3	K4	K8	K9	K16
NSX100/160/250	118	181.5	238	96	140	156	35	35	51	156	70	170	8
NSX400/630	165.9	265.7	339.5	143.5	188.5	227.5	45	52.5	75	210	113.5	250.7	3.75

Dimensions (mm)

Type	L28	L29	L30	L31	L32	L33	L34	L35	L36	L37	L39	L40	ØT
NSX100/160/250	320	99.5	300	89.5	1	123	139.5	74.5	19.5	87.5	9.5	140	6
NSX400/630	420	127.5	400	117.5	11.2	187.5	-	96.5	26	115	22.5	210	6



Note: coupling accessory: only for changeover systems using fixed versions of Compact NSX circuit breakers.

Manual source-changeover systems


Downstream coupling accessory

Interpact INS250 - 100 to 250 / Interpact INS320/400/500/630


Dimensions

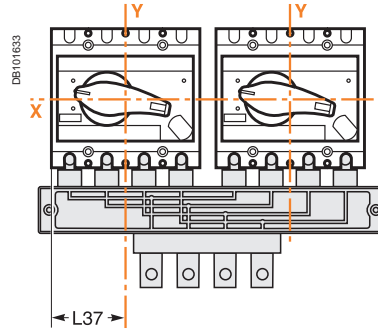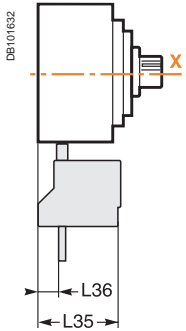

Dimensions

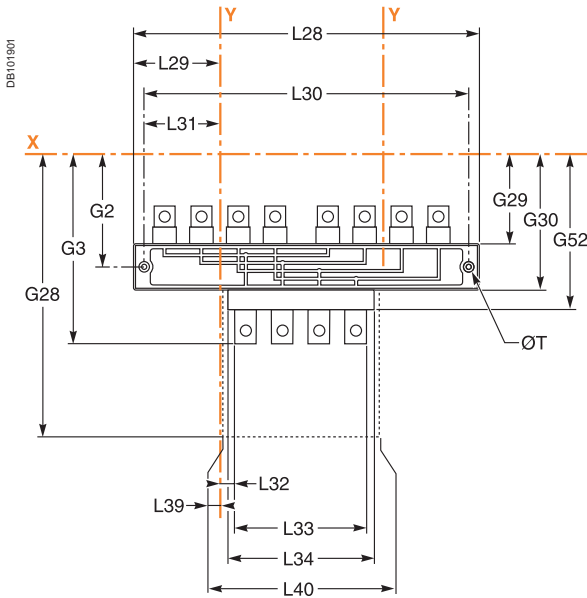

Connection

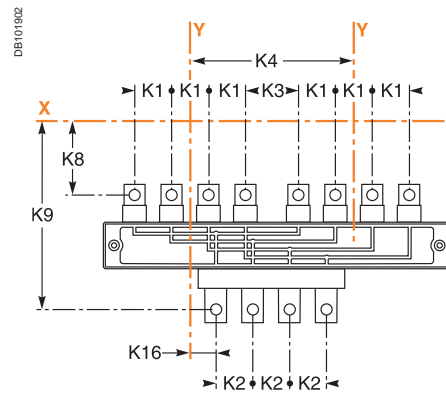

Dimensions (mm)

Type	G2	G3	G28	G29	G30	G52	K1	K2	K3	K4	K8	K9	K16
INS250-100/160/200/250	105.5	169	225.5	83.5	127.5	143.5	35	35	51	156	57.5	157.5	25.5
INS320/400/500/630	141	240.7	315	119	163.5	202.5	45	52.5	75	210	88.5	225.7	26.25

Dimensions (mm)


Type	L28	L29	L30	L31	L32	L33	L34	L35	L36	L37	L39	L40	ØT
INS250-100/160/200/250	320	82	300	72	16.5	123	139.5	74.5	21.5	70	8.5	140	6
INS320/400/500/630	420	105	400	95	11.2	187.5	-	98.5	26	92.5	0	210	6

Remote-operated source-changeover systems


Interlocking on a base plate

Compact NSX100 to 250


Dimensions, 3 or 4 poles

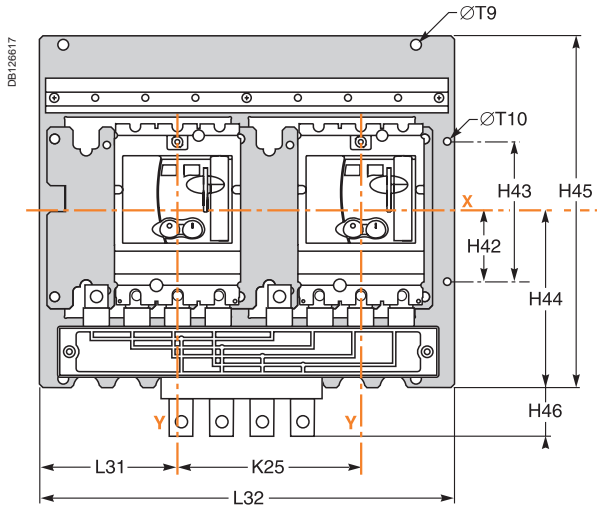

Fixed device

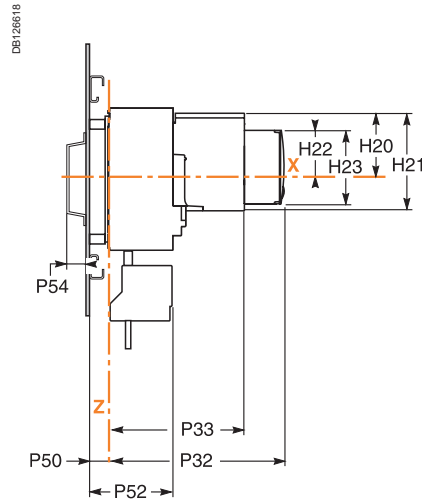


Withdrawable device

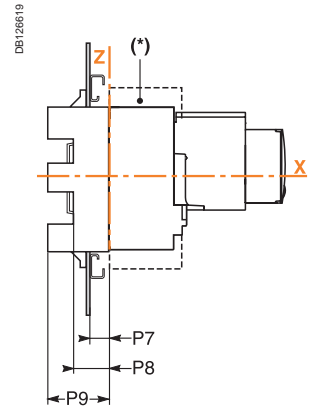


(*) Short terminal shields are mandatory.

Vertical mounting

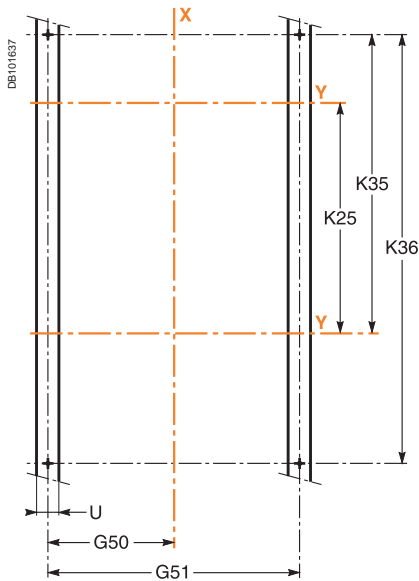

Horizontal mounting

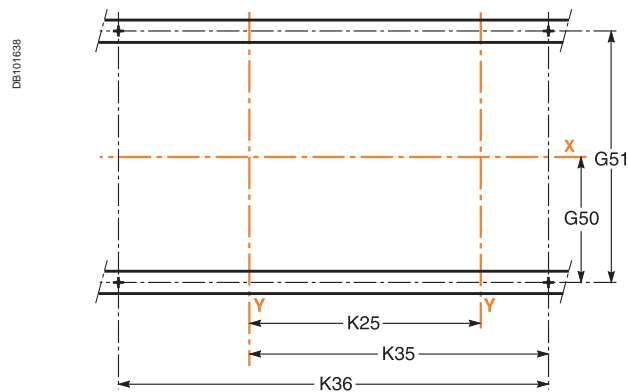

Dimensions (mm)

Type	G50	G51	H20	H21	H22	H23	H42	H43	H44	H45	H46	K25	K35	K36
NSX100/160/250	137.5	285	62.5	97	45.5	73	60	120	144.5	300	37	156	210.5	300
NSX400/630	180	360	100	152	83	123	60	120	189	378	77	210	282.5	400

Dimensions (mm)

Type	L31	L32	P7	P8	P9	P32	P33	P50	P52	P54	ØT9	ØT10	U
NSX100/160/250	110.5	354	25	45	75	182	143	25	99.5	21	9	6	≤ 32
NSX400/630	150.5	466	25	45	100	256	215	25	123	21	9	6	≤ 32


Note: coupling accessory: only for changeover systems using fixed versions of Compact NSX circuit breakers.

Remote-operated source-changeover systems


Interlocking on a base plate

Compact NSX400 to 630


Dimensions, 3 or 4 poles

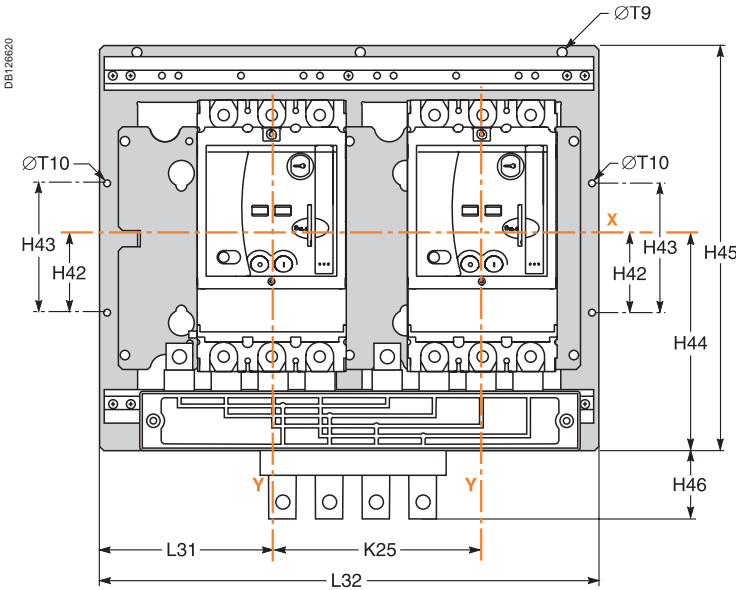

Fixed device

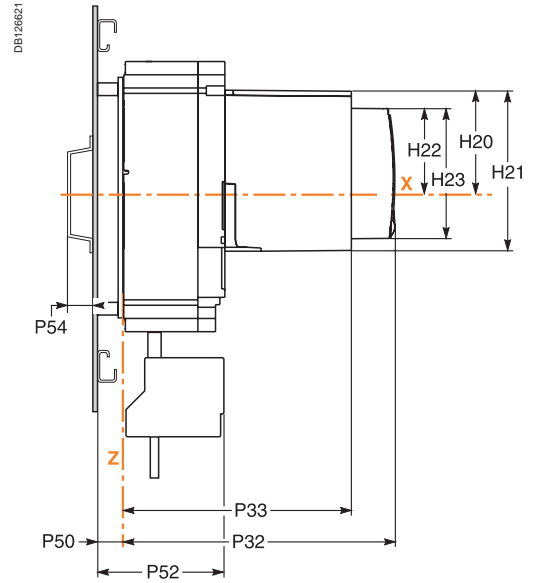


Withdrawable device

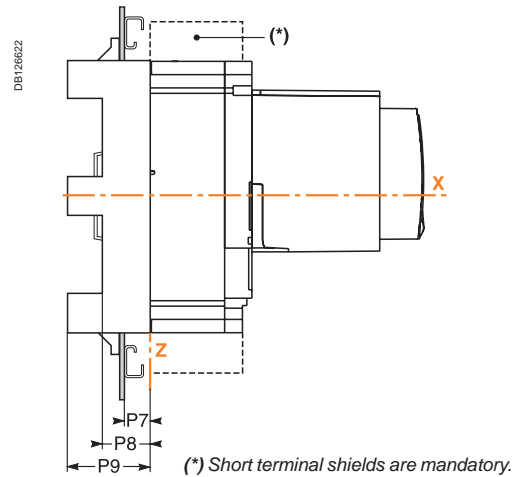


Note: coupling accessory: only for changeover systems using fixed versions of Compact NSX circuit breakers.

Dimensions

Vertical mounting

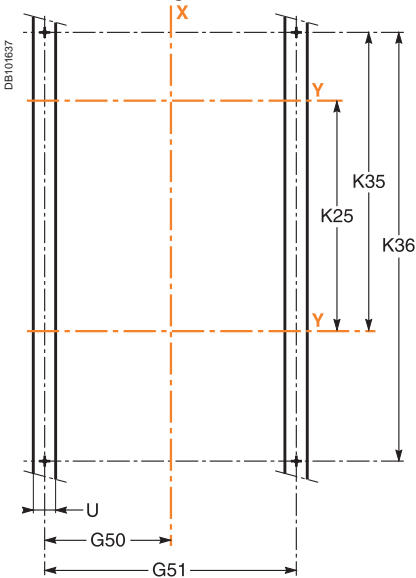

Horizontal mounting

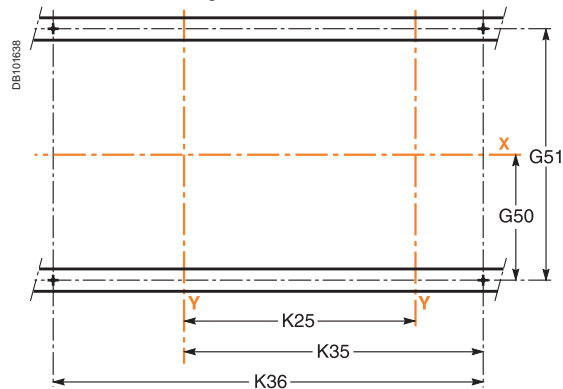


Note: dimensions see p. B-9.


Interlocking on a base plate

“Normal” and “Replacement” source devices: NSX100 to NSX250

Dimensions

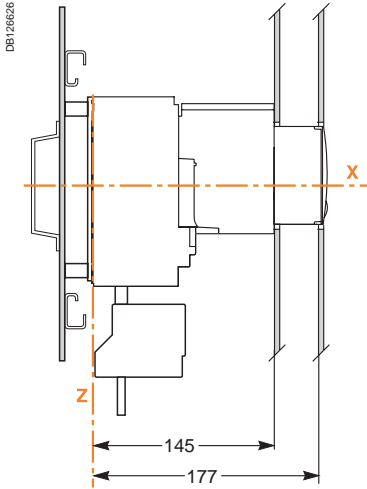


Front-panel cutout

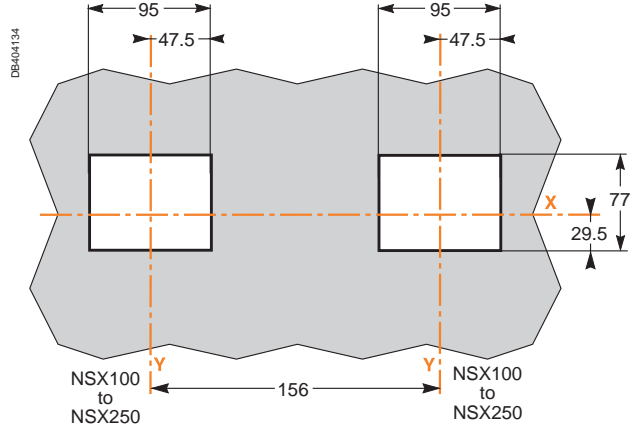


“Normal” and “Replacement” source devices: NSX400 to NSX630

Dimensions

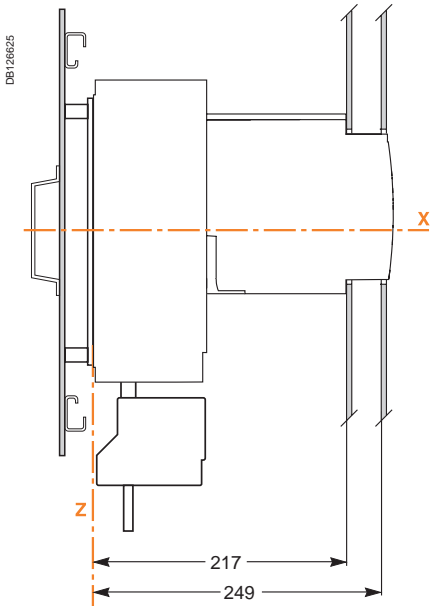

Front-panel cutout

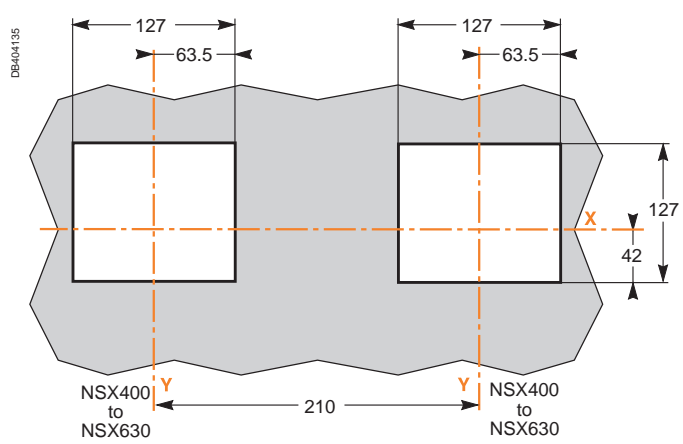

Note for Compact NSX:


For dimensions with the accessories (IP40 escutcheons and Vigi escutcheon protection collars), see Catalogue Compact.

Remote-operated source-changeover systems


Interlocking on a base plate

NSX400 to NSX630 as the "Normal" device, NSX100 to NSX250 as the "Replacement" device

Dimensions

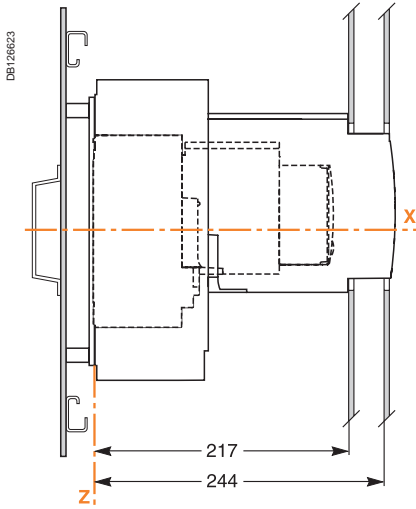


Front-panel cutout

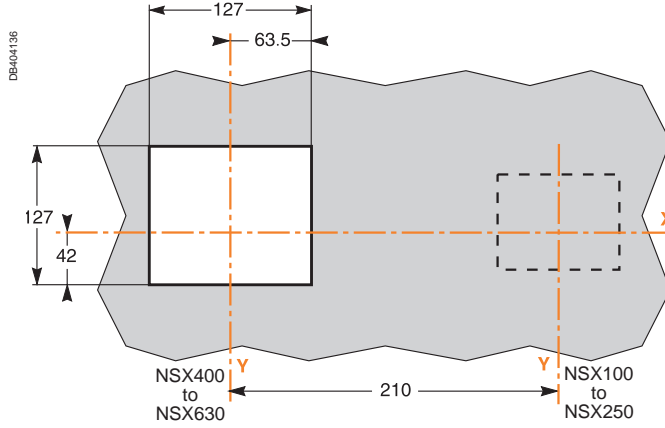


Interlocking using connecting rods

Two Compact NS630b to NS1600 devices one above the other

Fixed devices

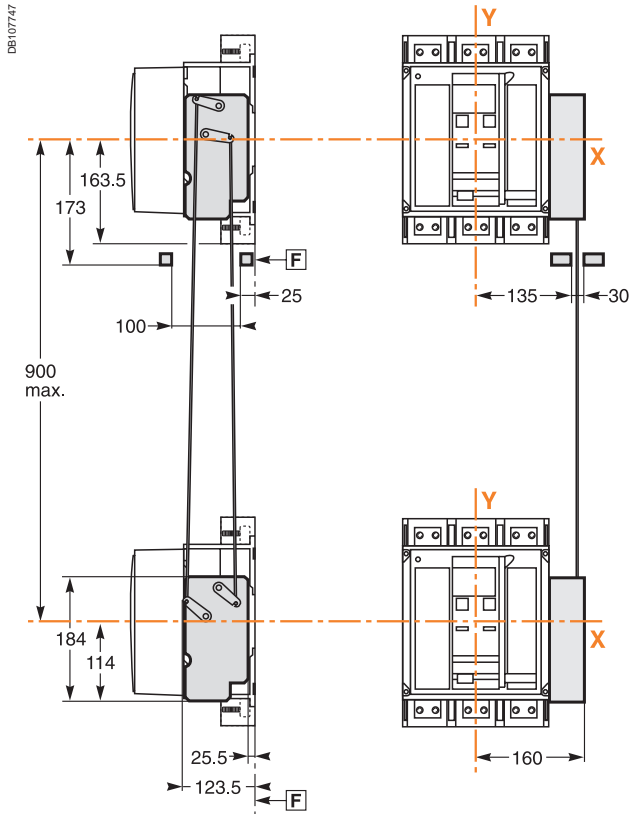


Withdrawable devices

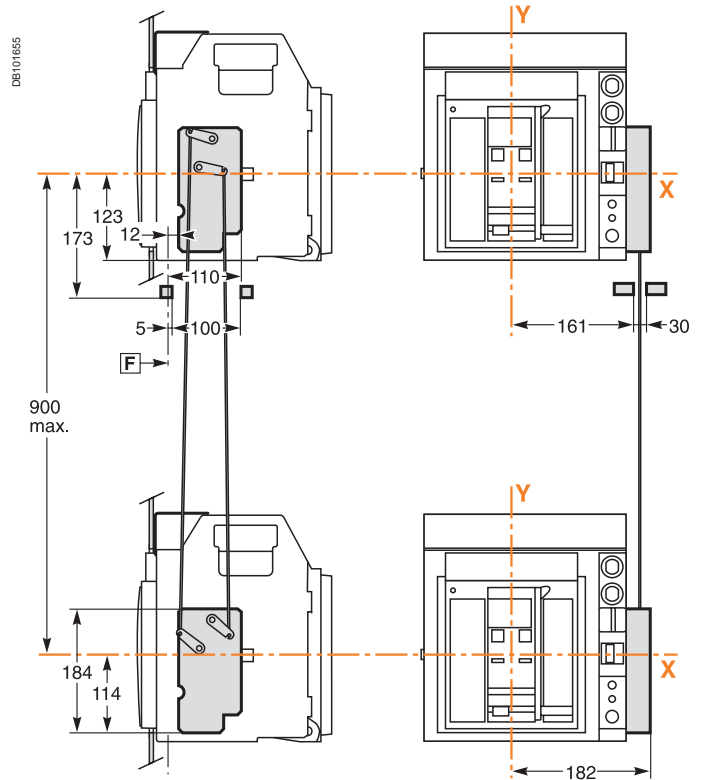


Two Masterpact NT devices one above the other

Fixed devices

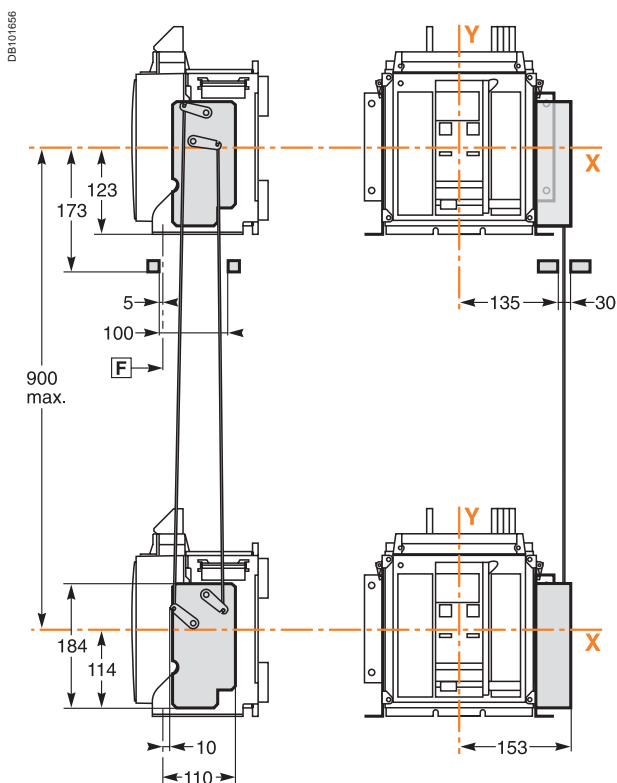

Withdrawable devices

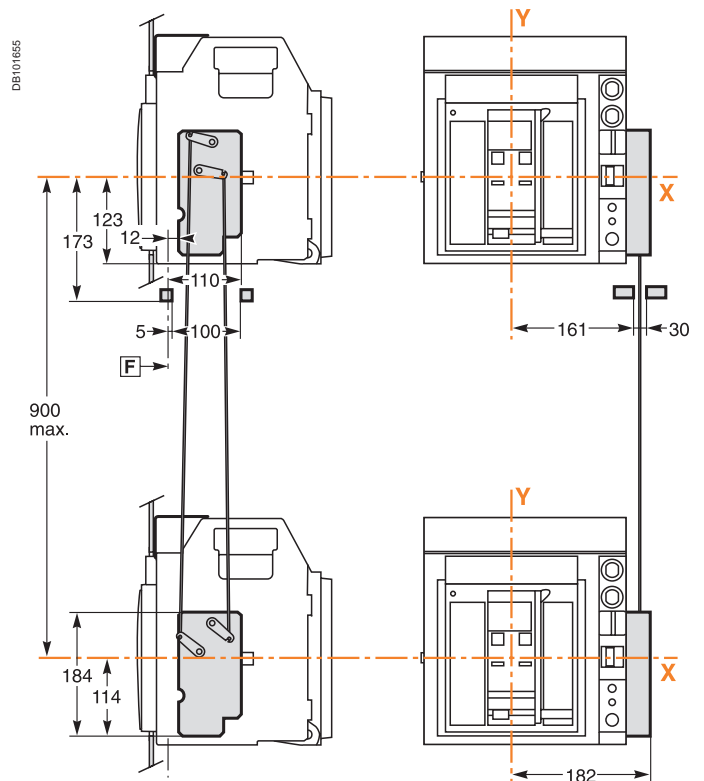


Remote-operated source-changeover systems


Interlocking using connecting rods

Two Masterpact NW devices one above the other

Fixed devices

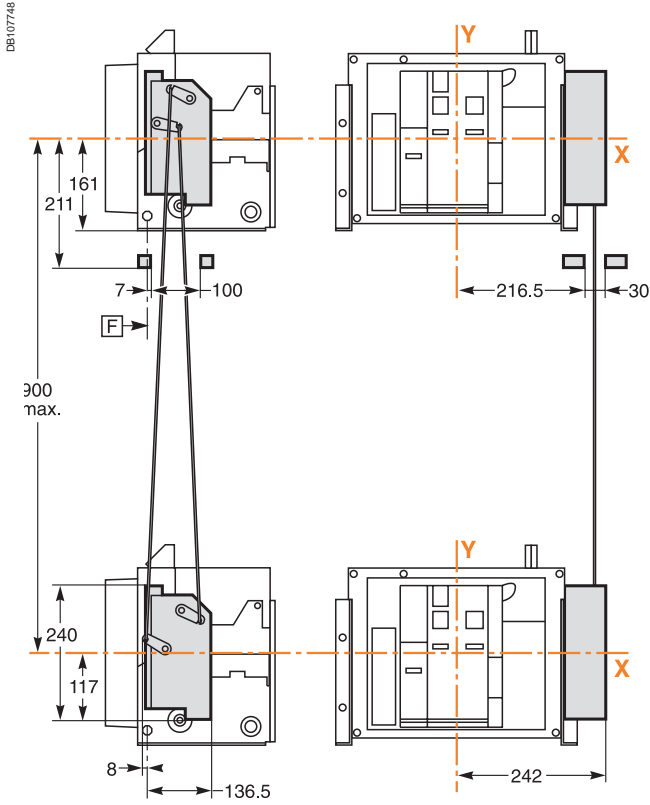


Withdrawable devices

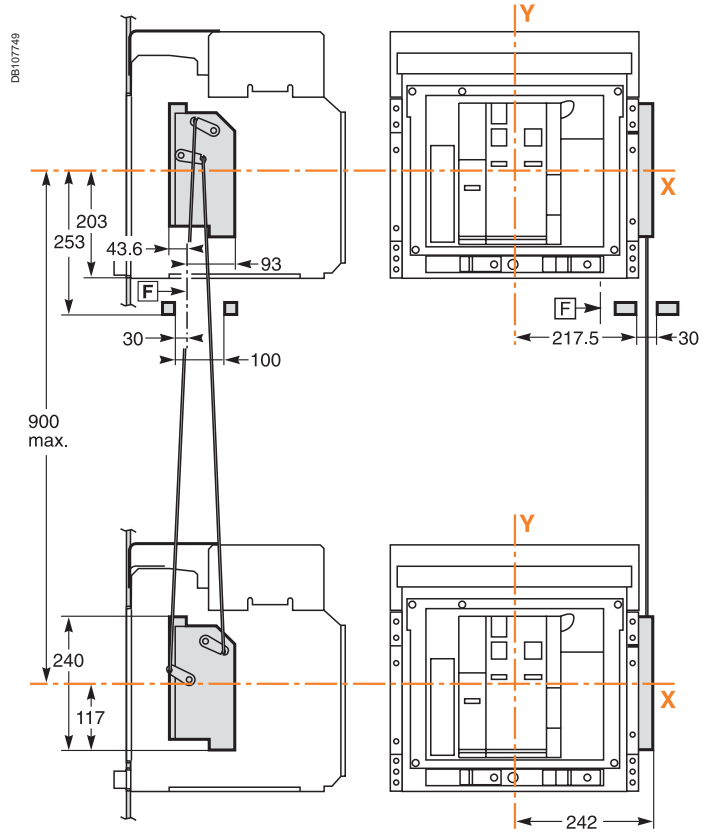


Interlocking using cables

Two Compact NS630b to NS1600 devices side-by-side

Fixed devices

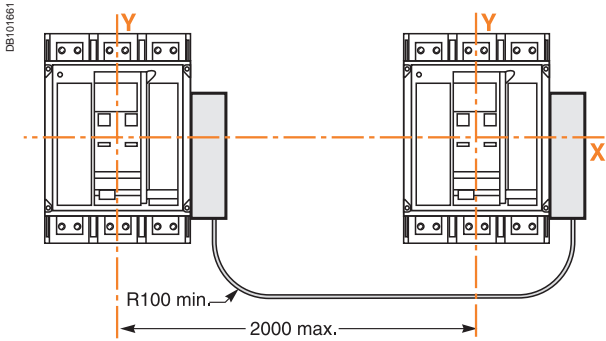


Withdrawable devices

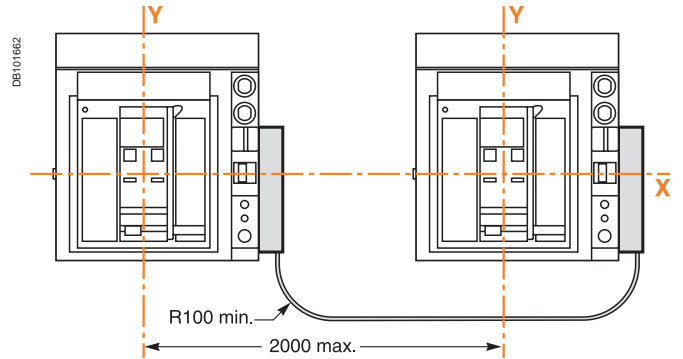


Two Masterpact NT devices side-by-side

Fixed devices

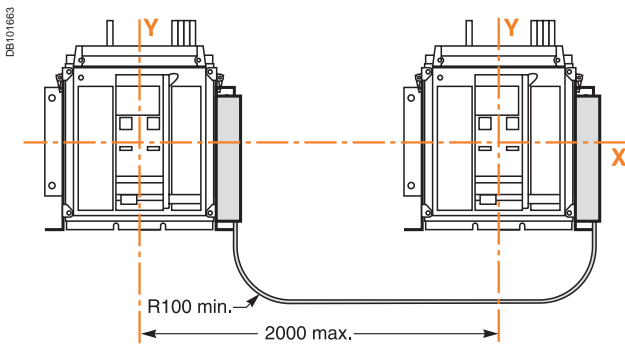


Drawout devices

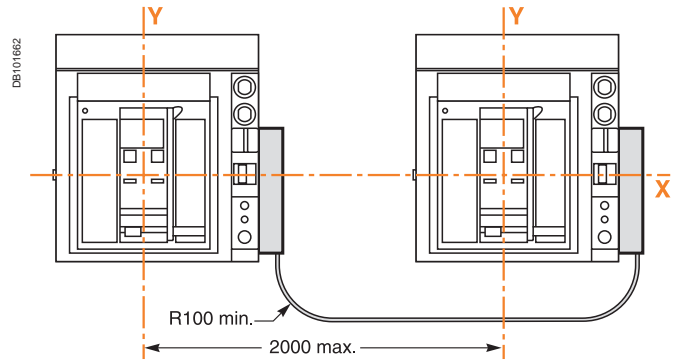


Combination of two Masterpact NT and NW devices side-by-side

Fixed devices

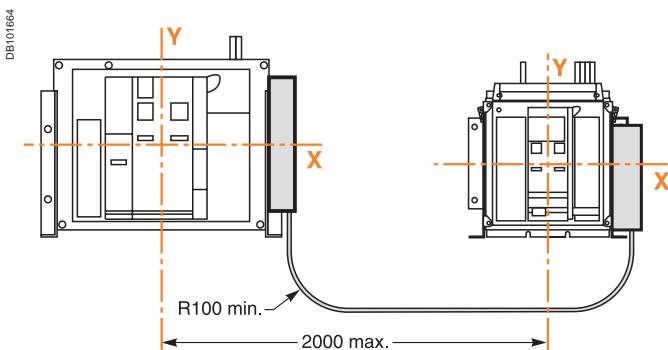

Drawout devices

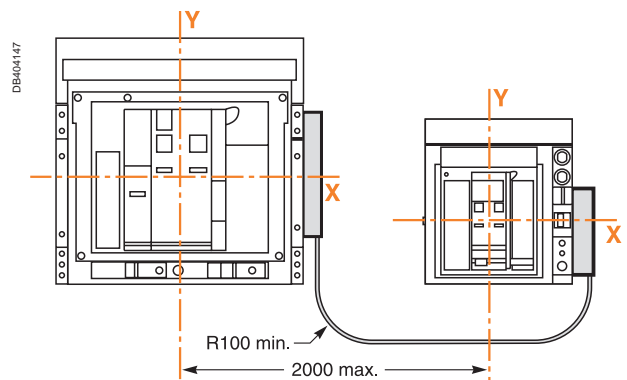


Remote-operated source-changeover systems


Interlocking using cables

Two Masterpact NW devices side-by-side

Fixed devices

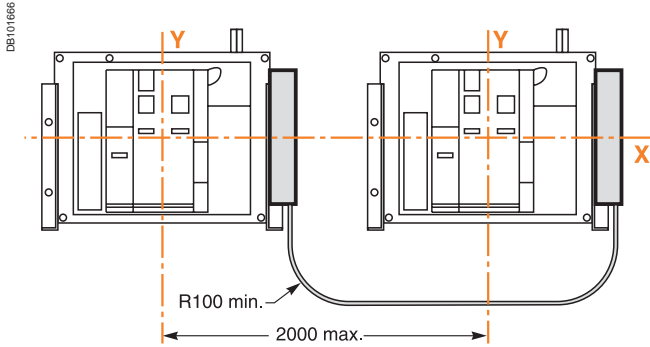


Drawout devices

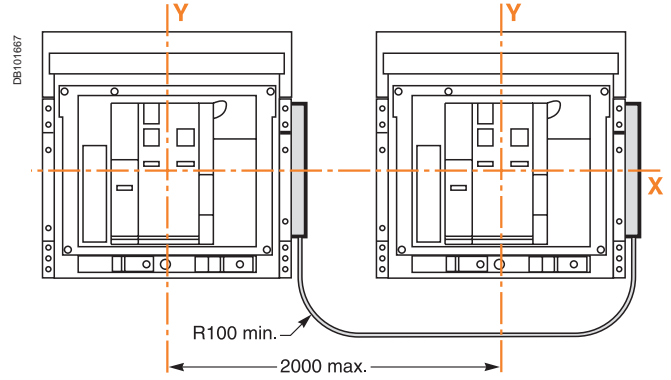


Three Masterpact NW devices side-by-side

Fixed devices

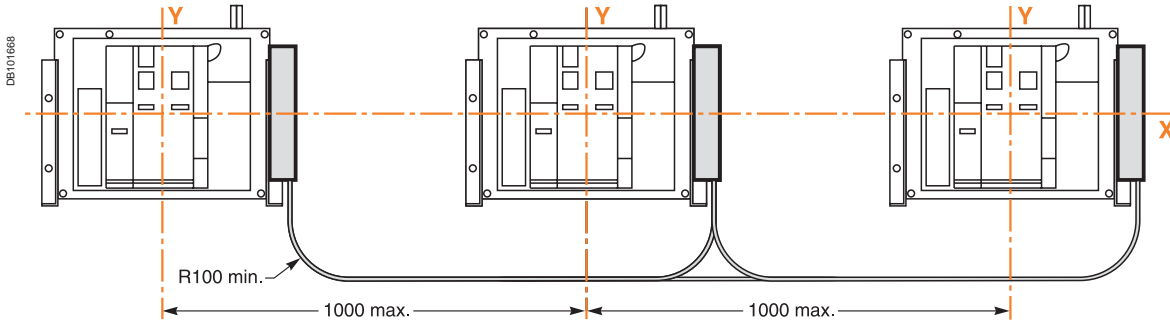


Drawout devices

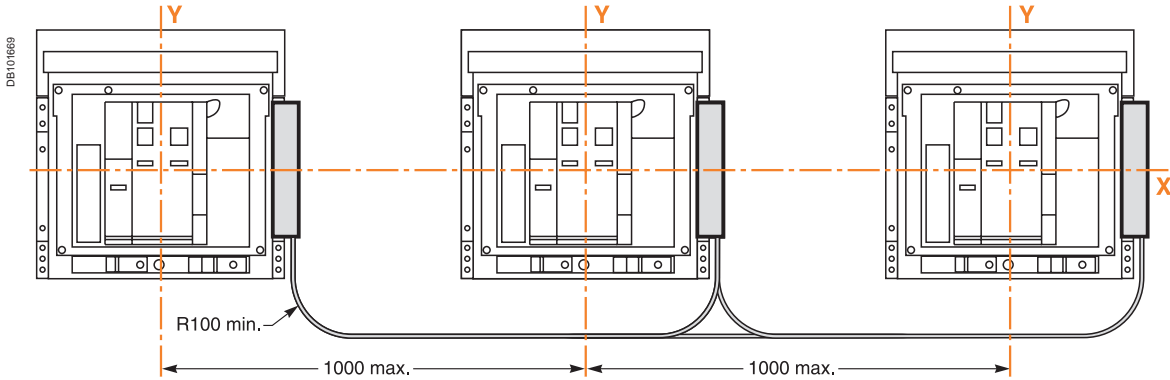


Interlocking using cables

Two Compact NS630b to NS1600 devices one above the other

Fixed devices

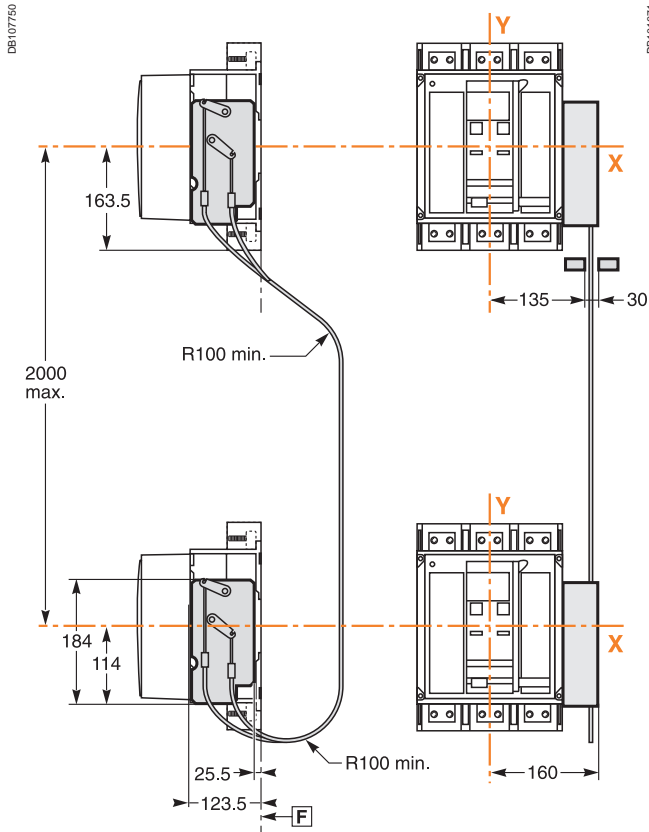


Withdrawable devices

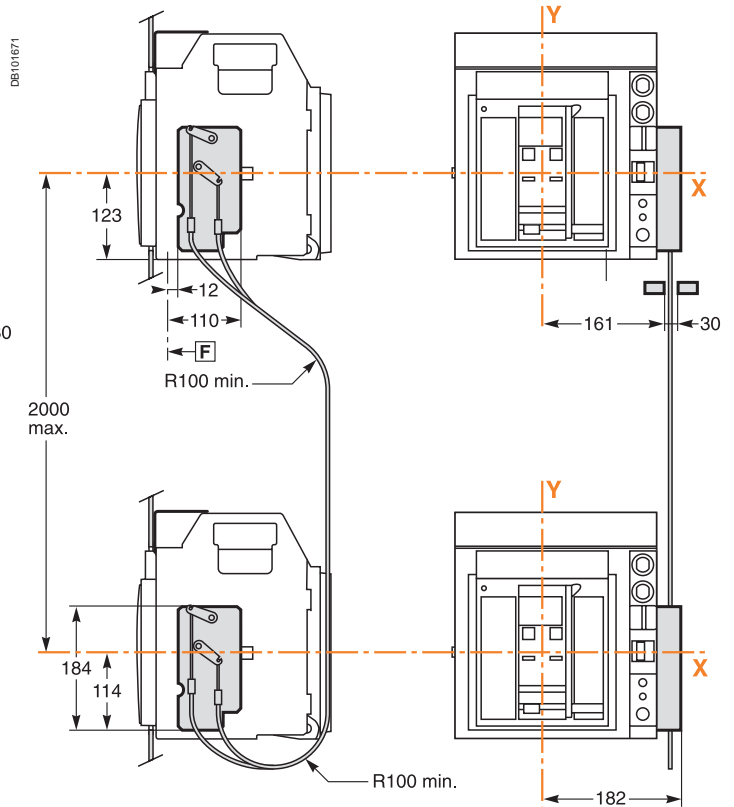


Two Masterpact NT devices one above the other

Fixed devices

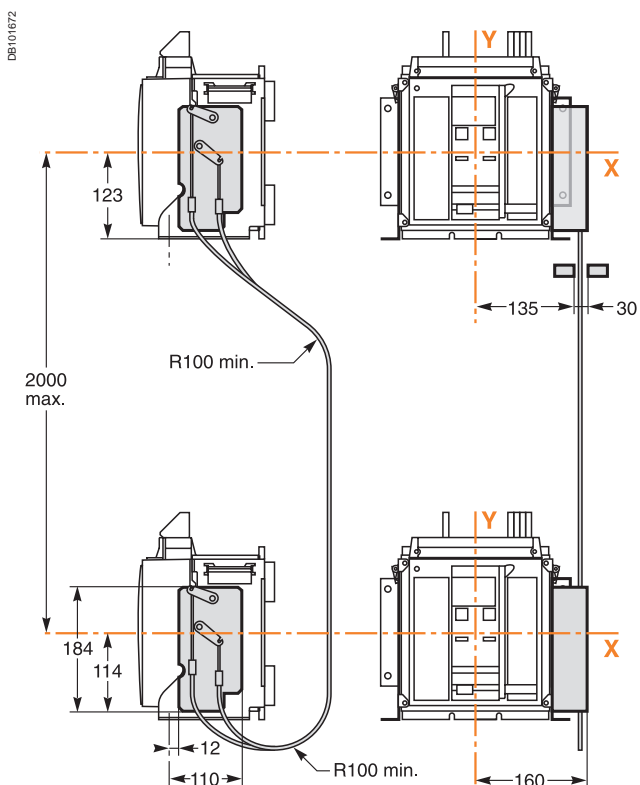

Drawout devices

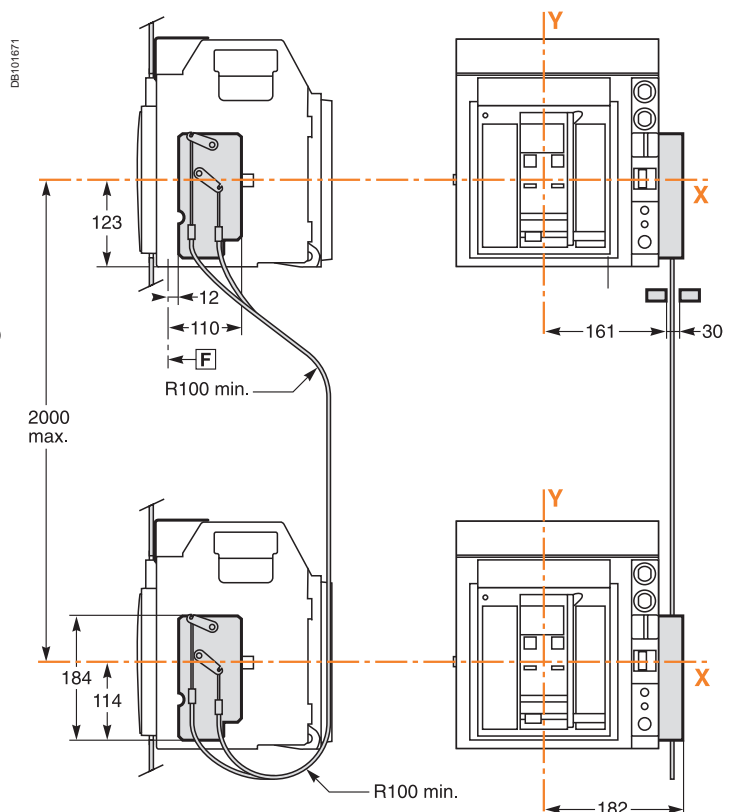


Remote-operated source-changeover systems


Interlocking using cables

Two Masterpact NW devices one above the other

Fixed devices

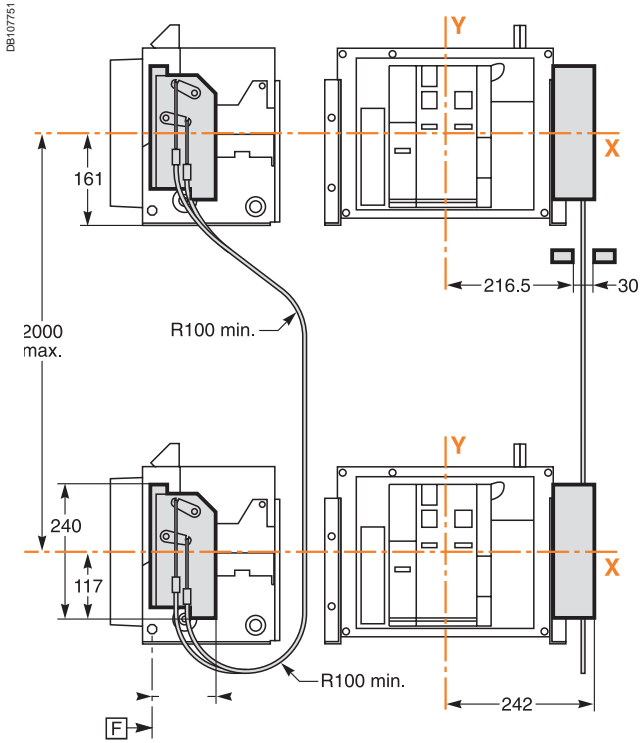


Drawout devices

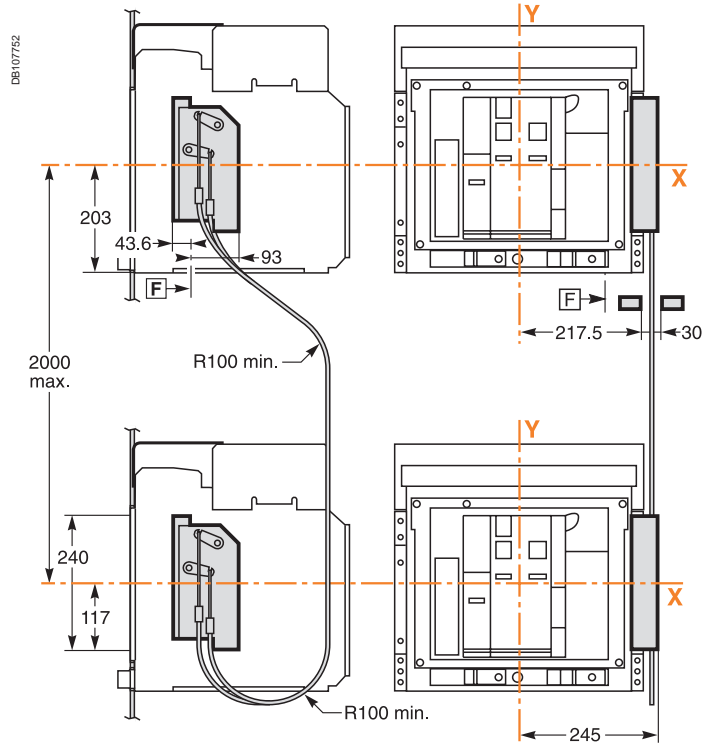


Two Masterpact NT and NW devices one above the other

Fixed devices

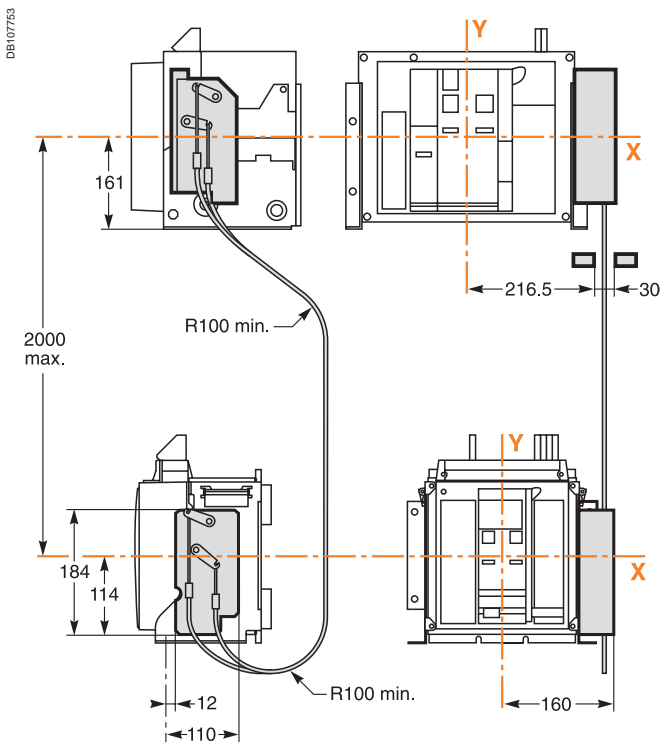


Drawout devices

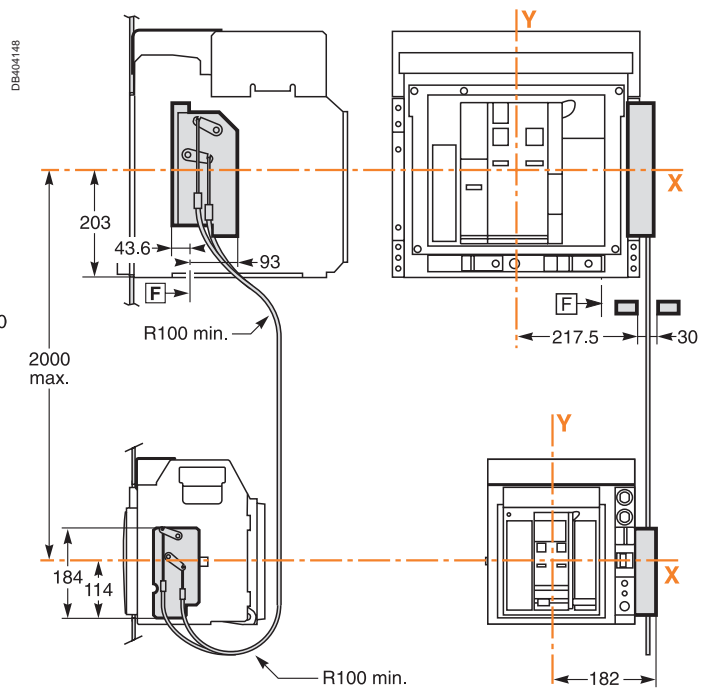


Interlocking using cables

Three Masterpact NW devices one above the other

Fixed devices

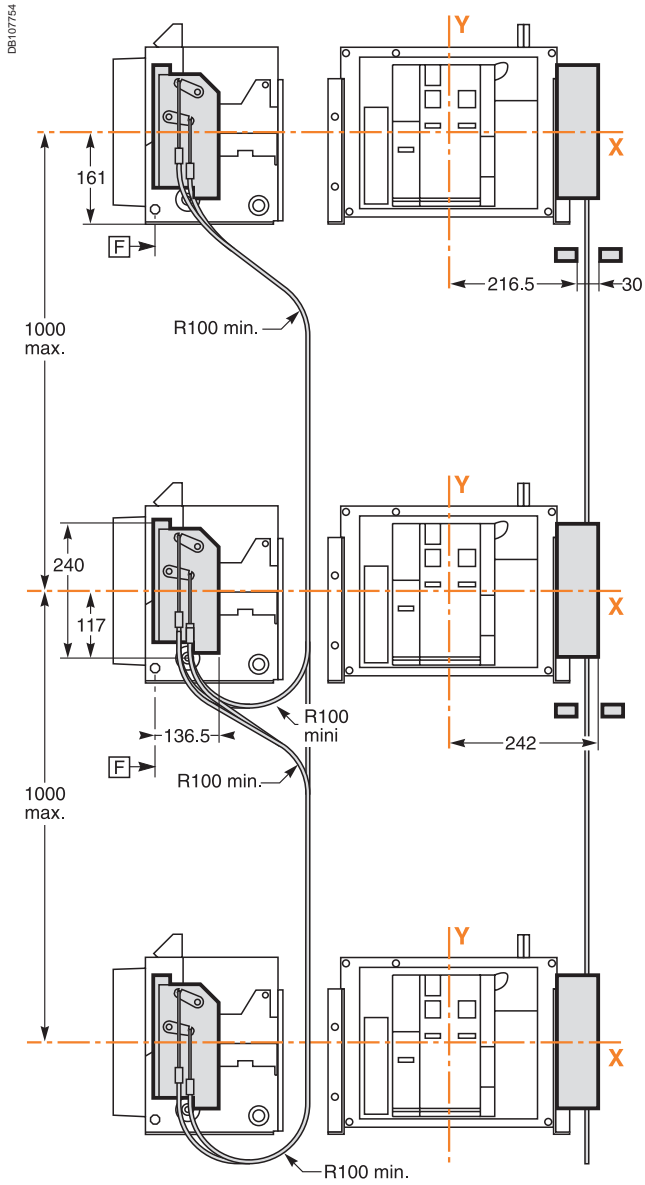


Drawout devices

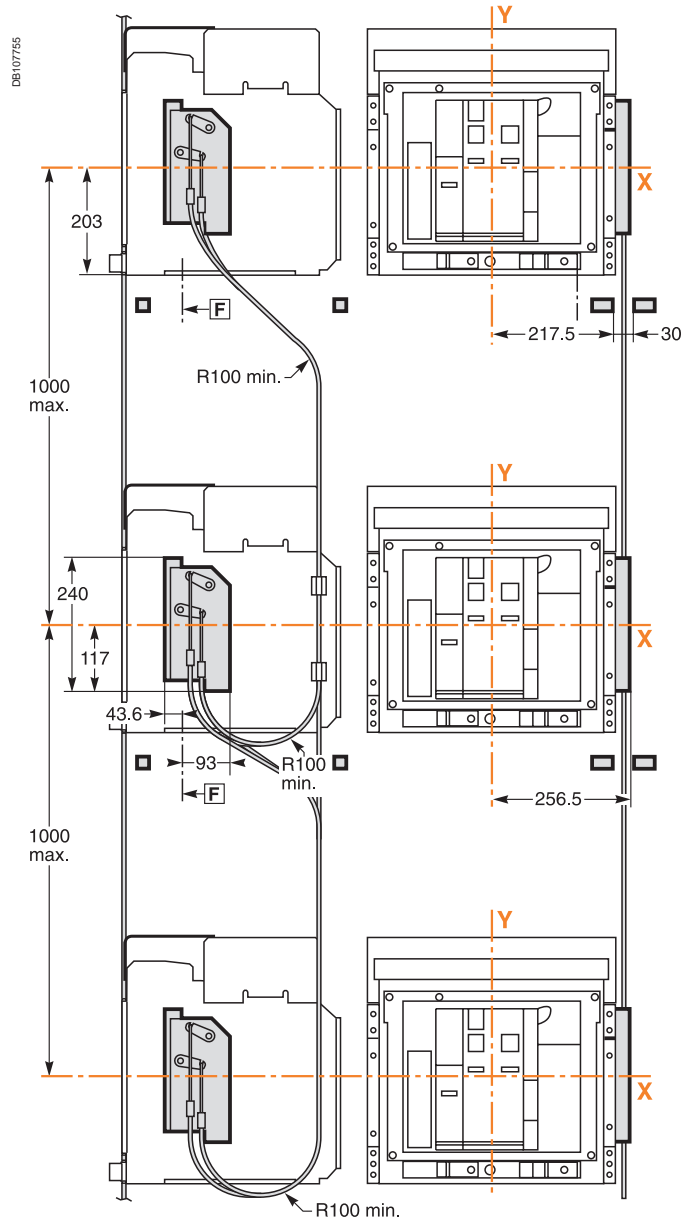


Remote-operated source-changeover systems

IVE unit, BA and UA automatic controllers


IVE unit

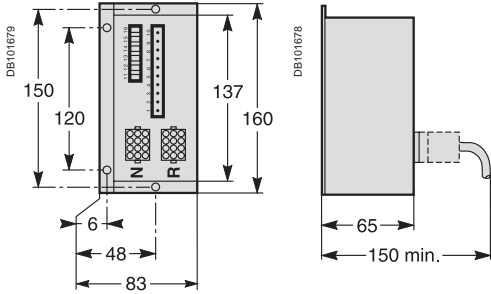

ACP control plate and BA/UA controllers

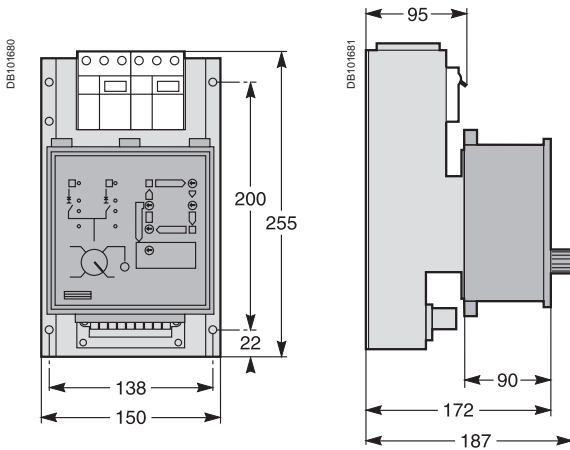

Door cutout for BA/UA controllers

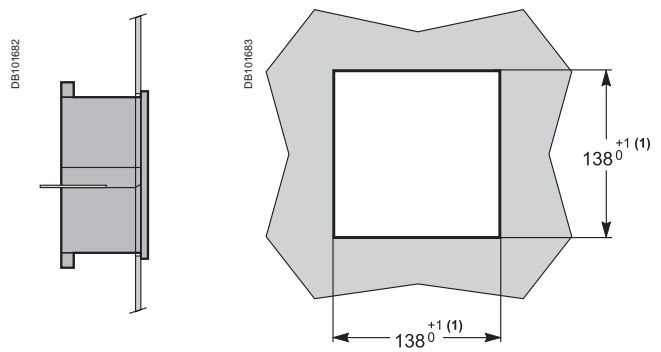

(1) Cutout according DIN 43700 standard.


<i>Presentation</i>	2
<i>Functions and characteristics</i>	A-1
<i>Dimensions</i>	B-1
Remote-operated source-changeover systems	C-2
2 Compact NSX100/630, NSX630b/1600 or Masterpact NT/NW devices	C-2
2 Compact NSX100/630 devices	C-3
2 Compact NS630b/1600 devices	C-6
2 Masterpact NT or NW devices	C-14
3 Masterpact NW devices	C-24
Source-changeover systems with automatic controllers	C-33
2 Compact NSX100/630, NSX630b/1600 or Masterpact NT/NW devices	C-33
Controller settings	C-35
2 Masterpact NT or NW devices	C-36
<i>Catalogue numbers and order forms</i>	D-1

Remote-operated source-changeover systems

2 Compact NSX100/630, NS630b/1600 or Masterpact NT/NW devices

Electrical interlocking by the IVE unit

Recommended electrical control system

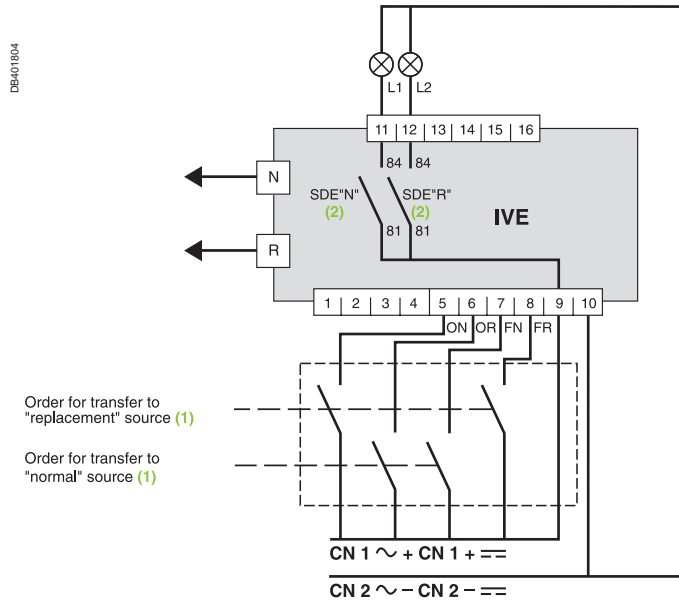

(1) See section "IMPORTANT" here after.

(2) Operating diagram: the SDE "fault-trip" signals are transmitted to the IVE unit. The SDE auxiliary contacts are mounted in the circuit breakers.

IMPORTANT

The relays controlling the "normal" and "replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

Legends

- ON "Normal" source opening order
- OR "Replacement" source opening order
- FN "Normal" source closing order
- FR "Replacement" source closing order
- L1 "Normal" source "fault-trip" signal
- L2 "Replacement" source "fault-trip" signal
- N "Normal" source auxiliary wiring connector
- R "Replacement" source auxiliary wiring connector

Note:


diagram shown with circuits de-energised, circuit breakers open and relays in normal position.

2 Compact NSX100/630 devices


Diagram no. 51201177

Source-changeover system without automatic-control system


Without auxiliaries for emergency off

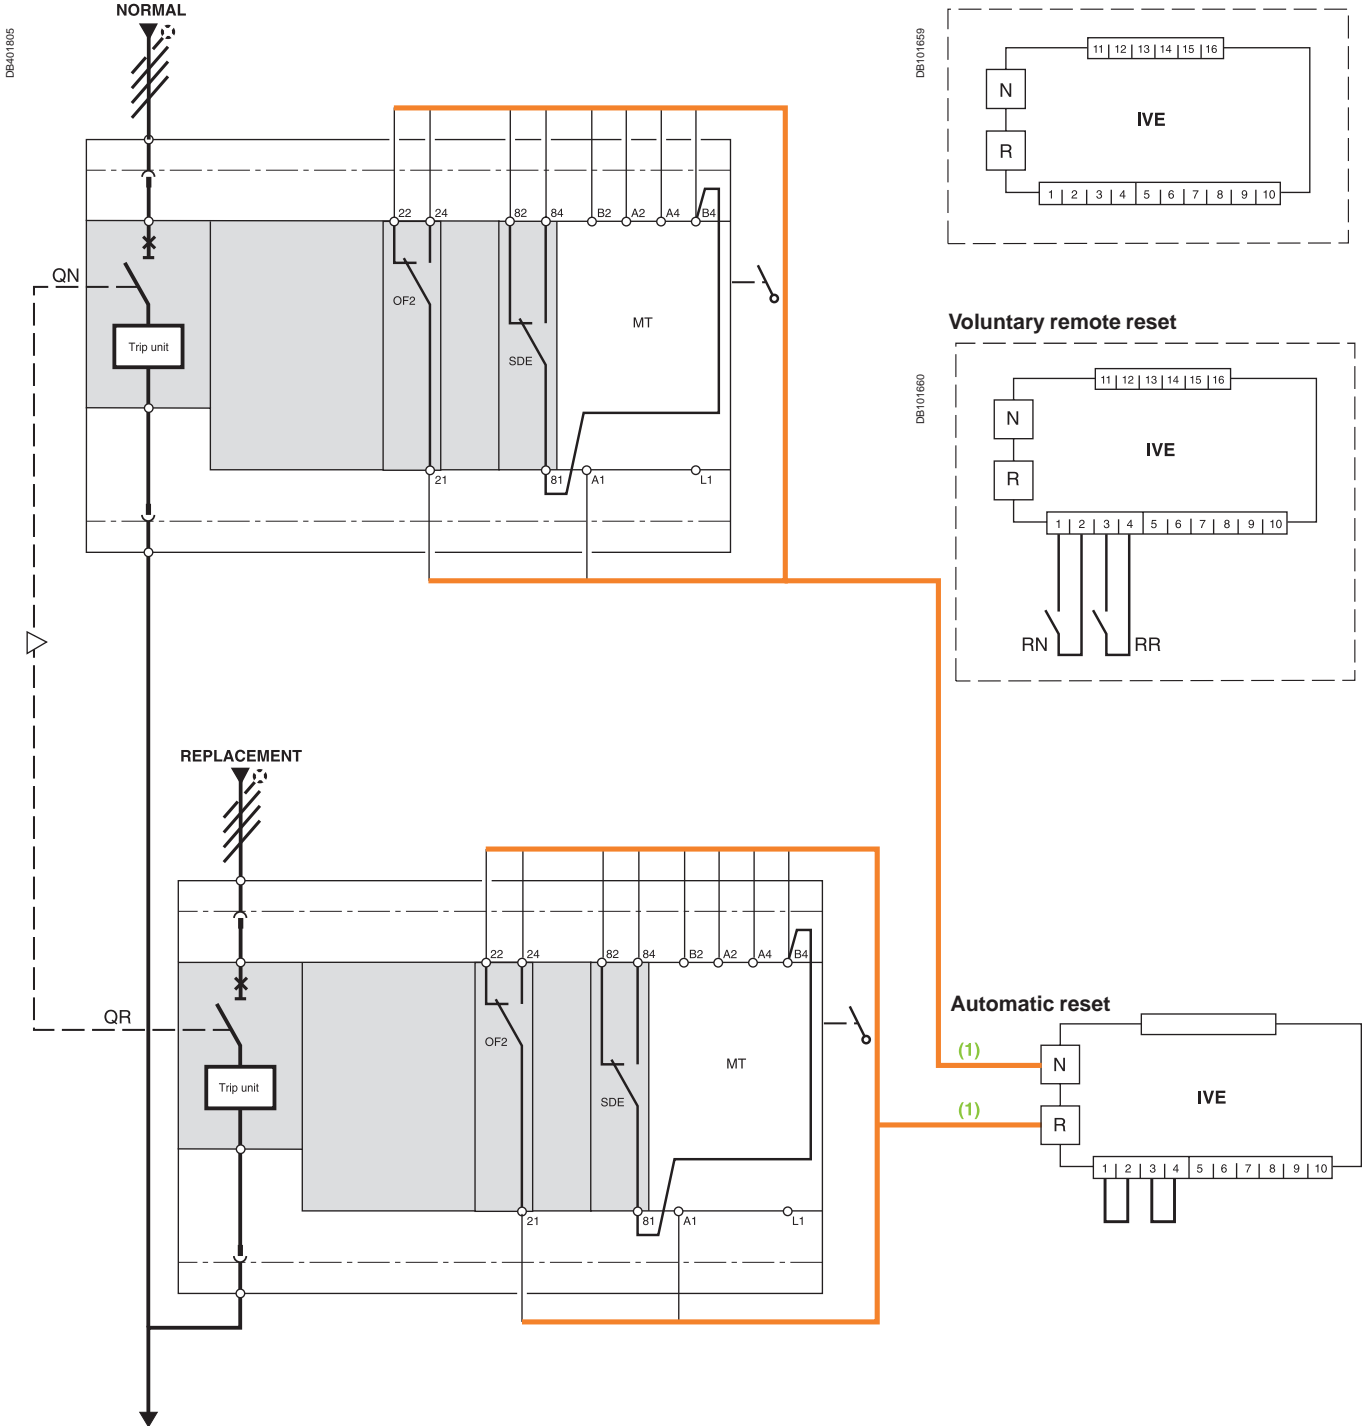


Local reset

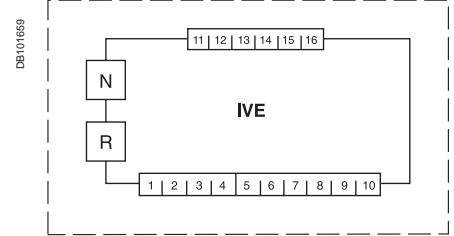

Voluntary remote reset

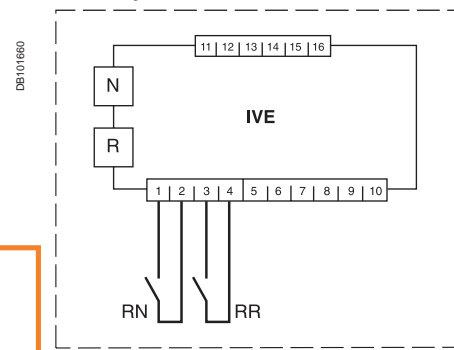

Automatic reset

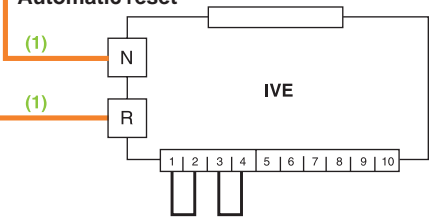

(1) Prefabricated wiring: cannot be modified.

Legends

- QN** "Normal" source Compact NSX equipped with motor mechanism
- QR** "Replacement" source Compact NSX equipped with motor mechanism
- SDE** "fault-trip" indication contact
- IVE** electrical interlocking and terminal block unit
- MT** motor mechanism
- OF2** breaker ON/OFF indication contact
- RN** reset order for breaker QN
- RR** reset order for breaker QR

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note: diagram shown with circuits de-energised, circuit breakers open and relays in normal position.


Remote-operated source-changeover systems

2 Compact NSX100/630 devices

Diagram no. 51201178

Source-changeover system without automatic-control system

With emergency off by MN release and automatic reset

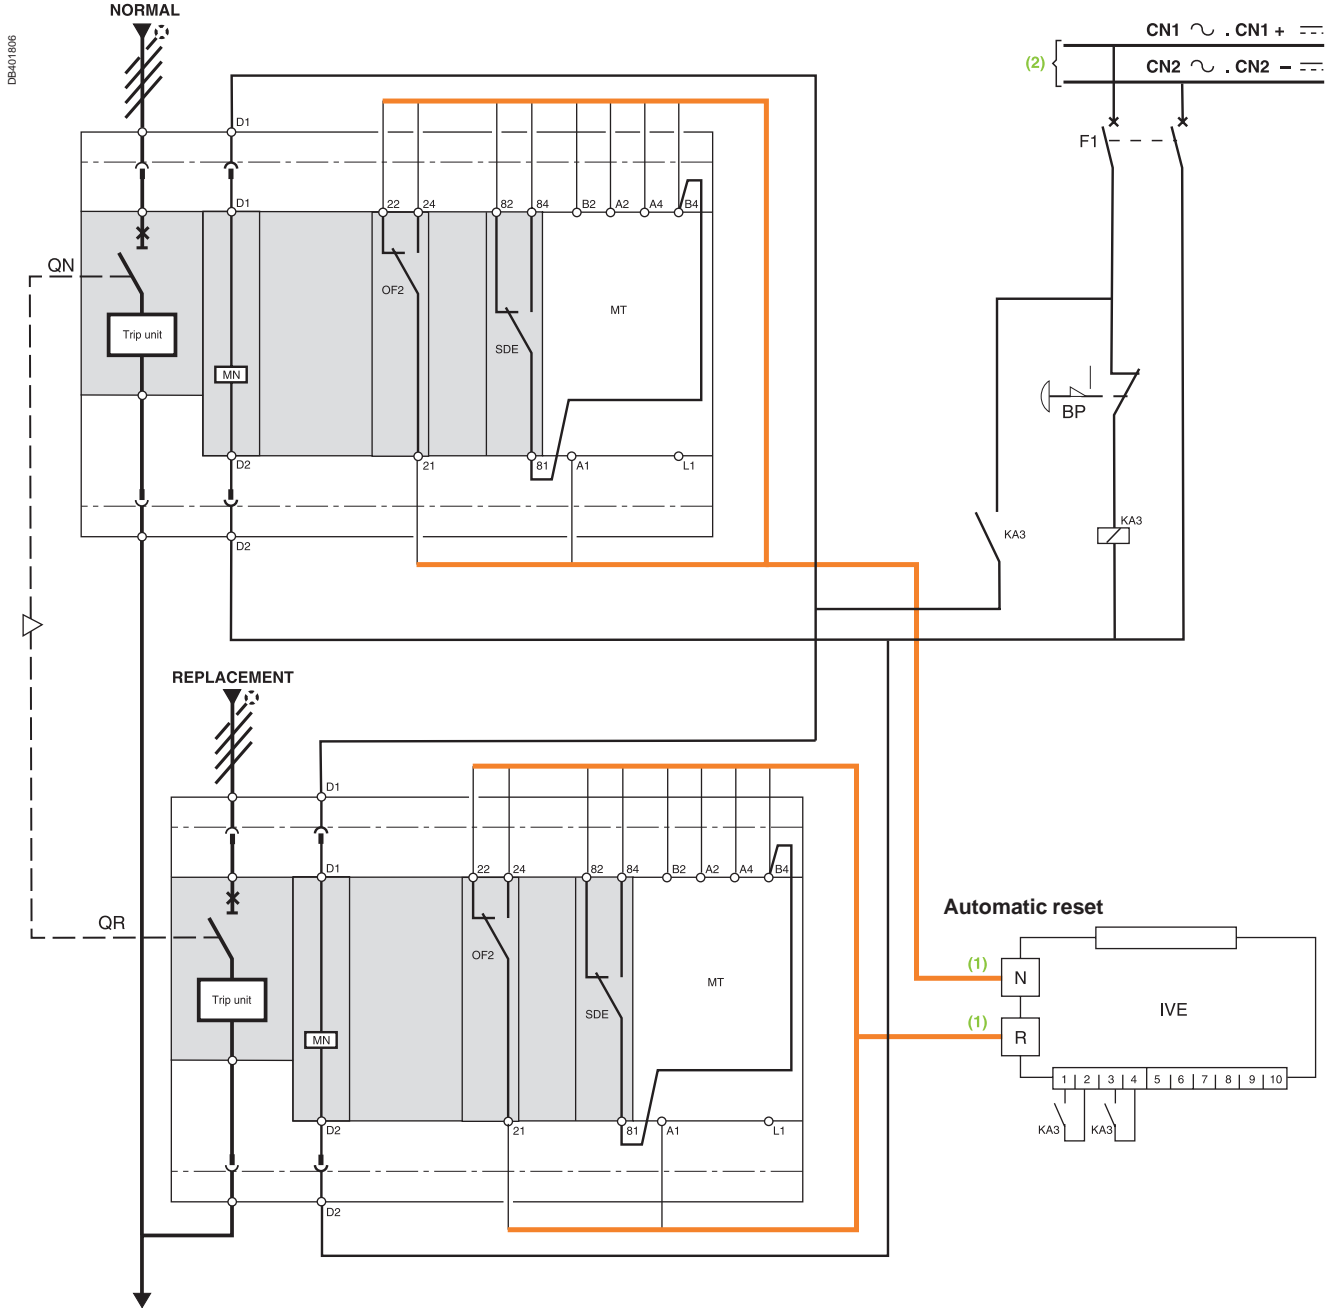

(1) Prefabricated wiring supplied.
 (2) Independent auxiliary source.

Legends

- QN** "Normal" source Compact NSX equipped with motormechanism
- QR** "Replacement" source Compact NSX equipped with motor mechanism
- MN** undervoltage release
- OF2** breaker ON/OFF indication contact
- SDE** "fault-trip" indication contact
- MT** motor mechanism
- IVE** electrical interlocking and terminal block unit
- BP** emergency off button with latching
- KA3** auxiliary relay
- F1** auxiliary power supply circuit breaker

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:


after a fault trip, the breaker must be reset manually by pressing its reset button.
 Diagram shown with circuits de-energised, circuit breakers open and relays in normal position.

2 Compact NSX100/630 devices

Diagram no. 51201179

Source-changeover system without automatic-control system

With emergency off by MX release and automatic reset

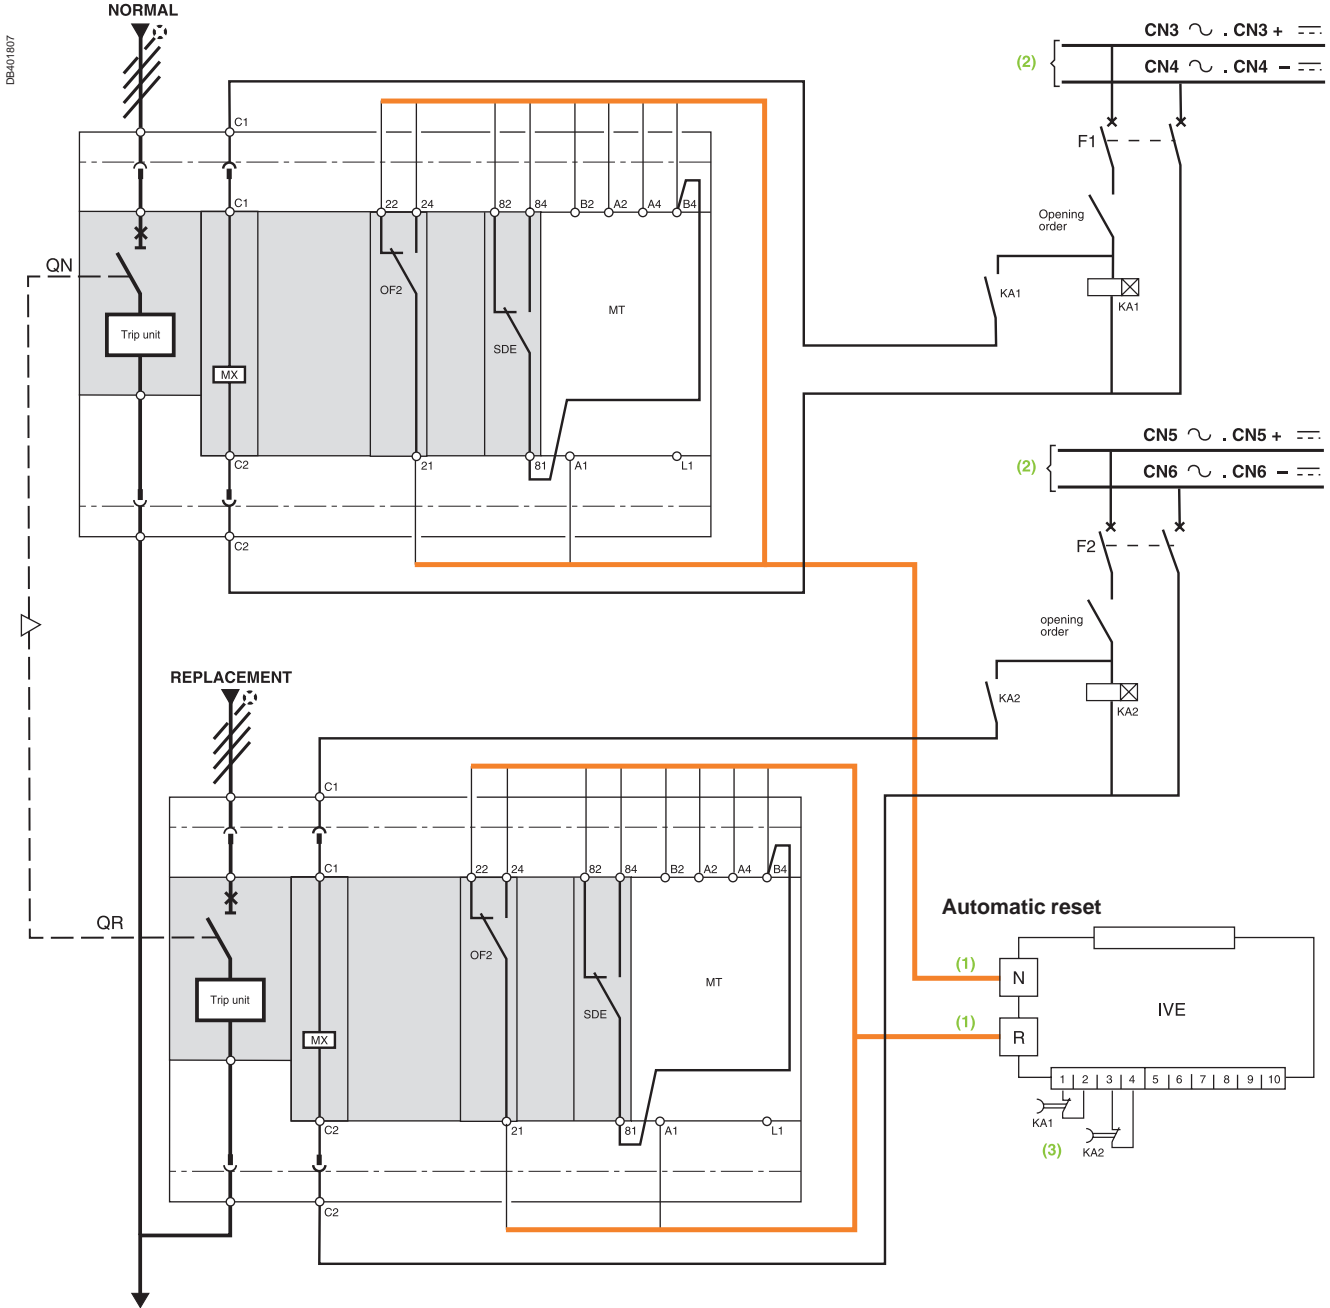

- (1) Prefabricated wiring supplied
- (2) This source can be:
 - the source present in the case of voltage monitoring
 - an independent source.
 In this case, the MX release must be protected.
- (3) The reset orders must be delayed by 0.3 seconds.

Legends

- QN** "Normal" source Compact NSX equipped with motor mechanism
- QR** "Replacement" source Compact NSX equipped with motor mechanism
- SDE** "fault-trip" indication contact
- OF2** breaker ON/OFF indication contact
- MX** shunt release
- MT** motor mechanism
- IVE** electrical interlocking and terminal block unit
- KA1** time-delayed auxiliary relays
- KA2** time-delayed auxiliary relays
- F1** auxiliary power supply circuit breaker
- F2** auxiliary power supply circuit breaker

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1


Note:
after a fault trip, the breaker must be reset manually by pressing its reset button.
Diagram shown with circuits de-energised, circuit breakers open and relays in normal position.

Remote-operated source-changeover systems

2 Compact NS630b/1600 devices

Diagram no. 51201180

Electrical interlocking

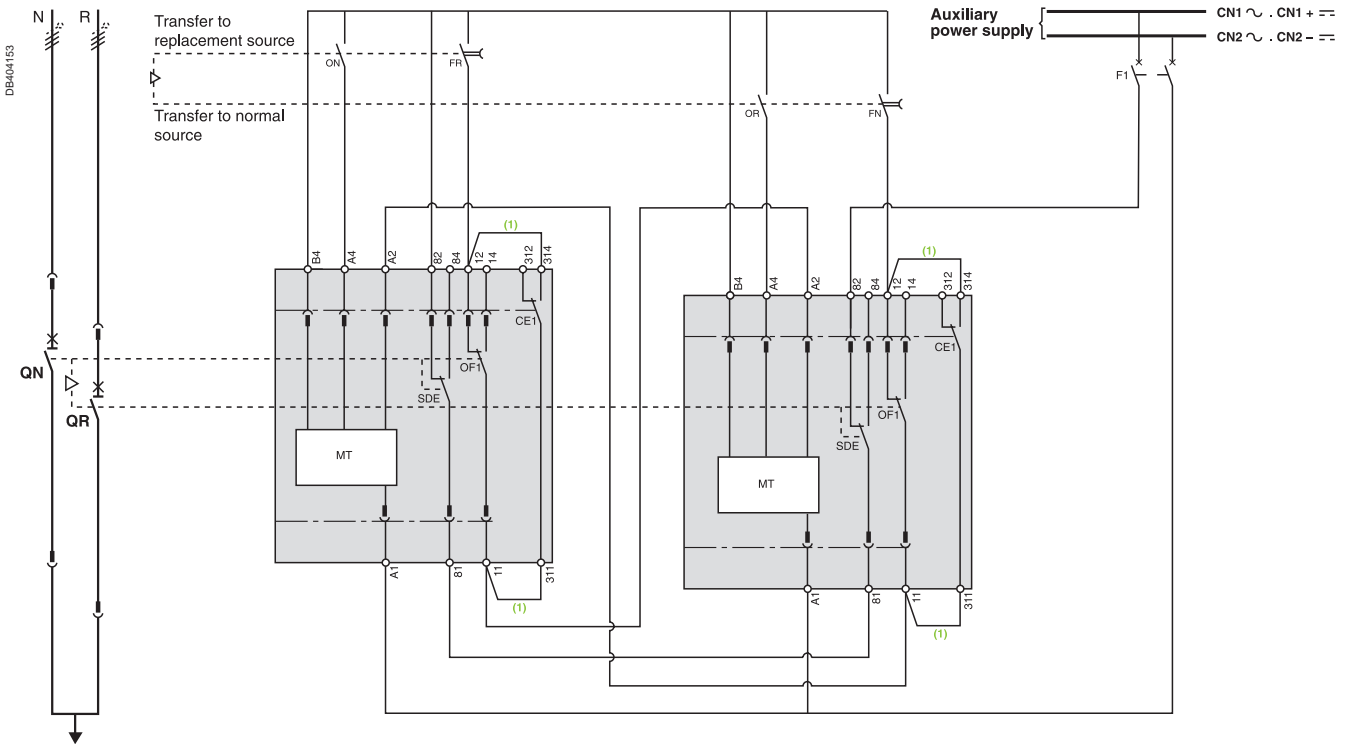

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

(1) Not to be wired on fixed version.

Legends

- QN** "Normal" source Compact NS630b to 1600
- QR** "Replacement" source Compact NS630b to 1600
- OF...** breaker ON/OFF indication contact
- SDE** "fault-trip" indication contact
- CE1** "connected-position" indication contact (carriage switch)
- F1** auxiliary power supply circuit breaker
- ON** "Normal" source opening order
- OR** "Replacement" source opening order
- FN** "Normal" source closing order (0.25 second delay)
- FR** "Replacement" source closing order (0.25 second delay)
- MT** Motor Mechanism

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1


Note:

after a fault trip, the breaker must be reset manually by pressing its reset button.
 Diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MT...).

2 Compact NS630b/1600 devices

Diagram no. 51201181

Electrical interlocking with emergency off by shunt release

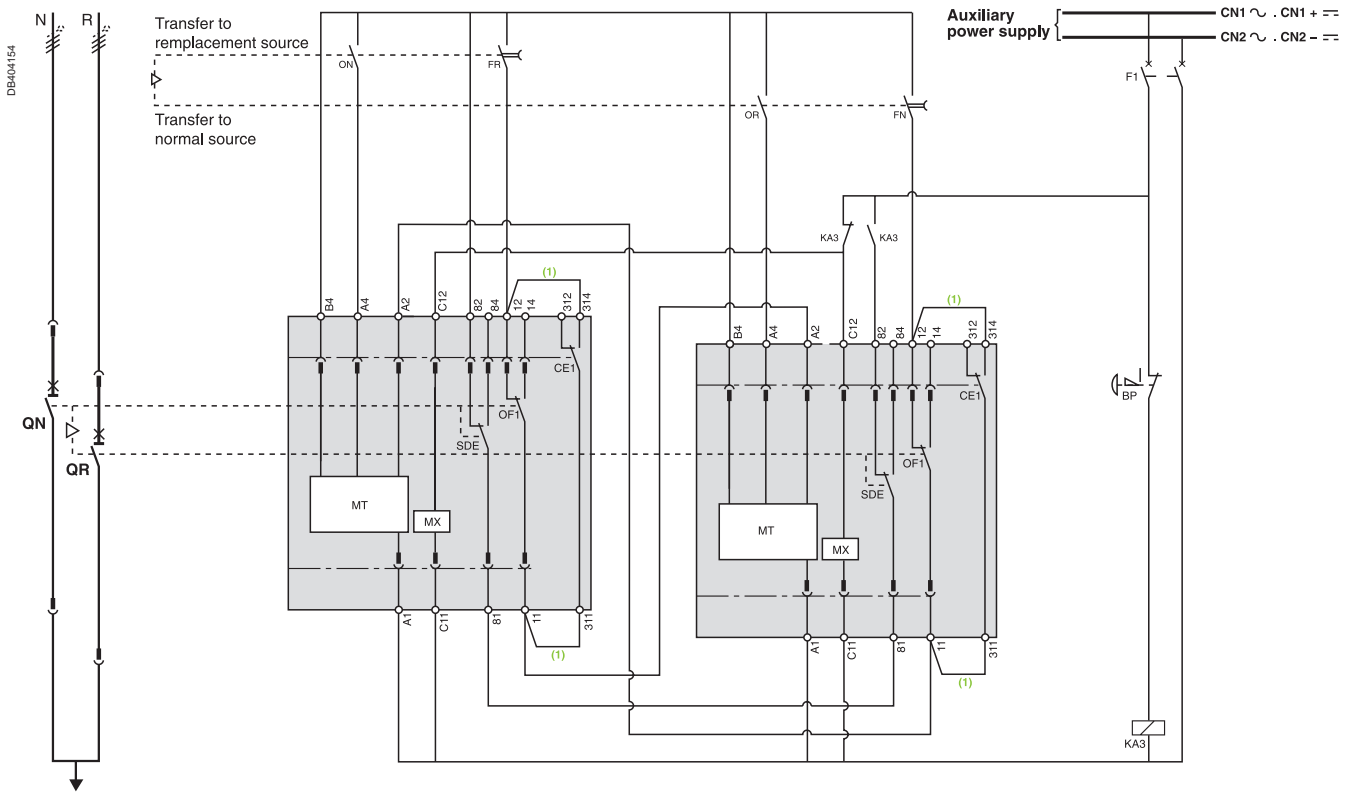

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals **81 and 84**.

(1) Not to be wired on fixed version.

Legends

- QN** "Normal" source Compact NS630b to 1600
- QR** "Replacement" source Compact NS630b to 1600
- OF...** breaker ON/OFF indication contact
- SDE** "fault-trip" indication contact
- CE1** "connected-position" indication contact (carriage switch)
- F1** auxiliary power supply circuit breaker
- MX** shunt release
- BP** emergency off button with latching
- KA3** auxiliary relay
- ON** "Normal" source opening order
- OR** "Replacement" source opening order
- FN** "Normal" source closing order (0.25 second delay)
- FR** "Replacement" source closing order (0.25 second delay)
- MT** Motor Mechanism

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:


after a fault trip, the breaker must be reset manually by pressing its reset button.
Diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MT, MX...).

Remote-operated source-changeover systems

2 Compact NS630b/1600 devices

Diagram no. 51201182

Electrical interlocking with emergency off by undervoltage

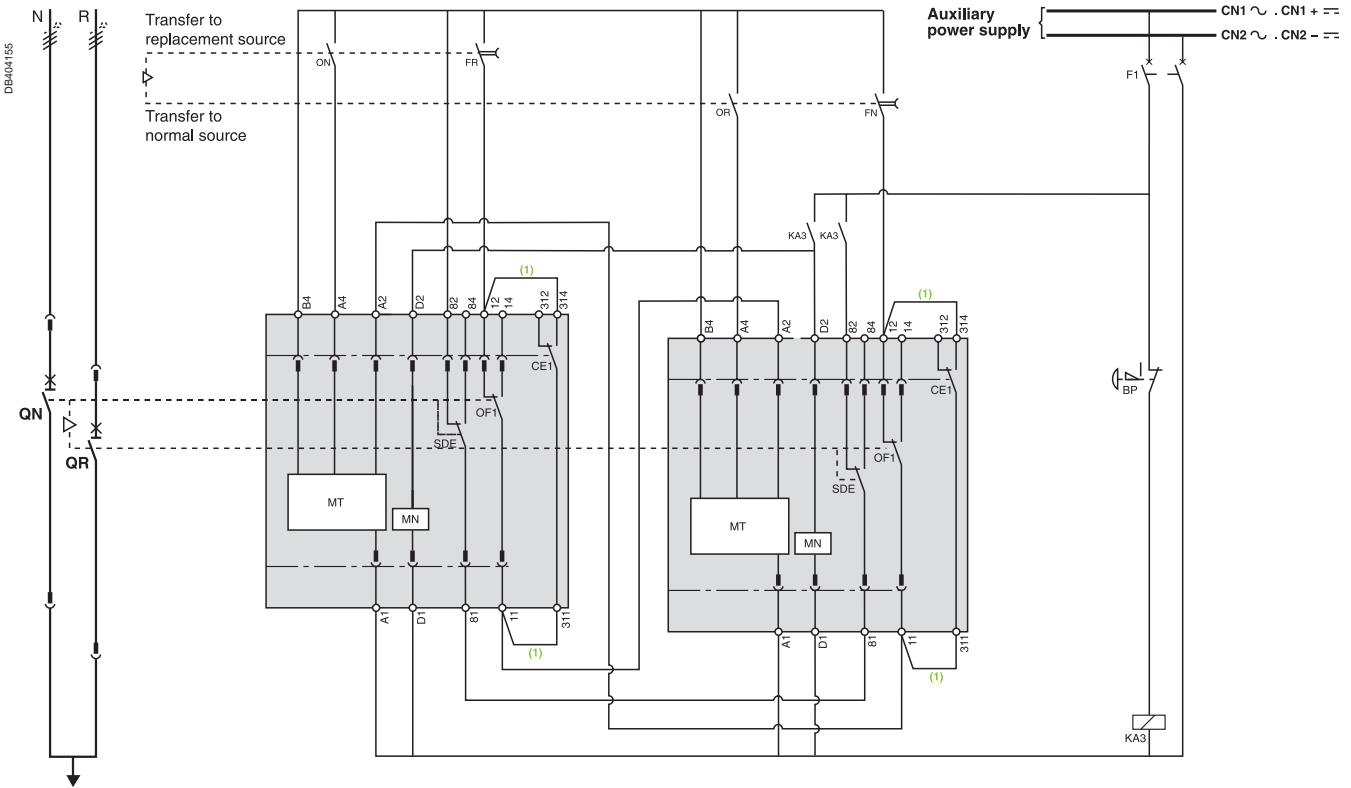

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

(1) Not to be wired on fixed version.

Legends

- QN** "Normal" source Compact NS630b to 1600
- QR** "Replacement" source Compact NS630b to 1600
- OF...** breaker ON/OFF indication contact
- SDE** "fault-trip" indication contact
- CE1** "connected-position" indication contact (carriage switch)
- F1** auxiliary power supply circuit breaker
- MN** undervoltage release
- BP** emergency off button with latching
- KA3** auxiliary relay
- ON** "Normal" source opening order
- OR** "Replacement" source opening order
- FN** "Normal" source closing order (0.25 second delay)
- FR** "Replacement" source closing order (0.25 second delay)
- MT** Motor Mechanism

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system


Normal	Replacement
0	0
1	0
0	1

Note:
 after a fault trip, the breaker must be reset manually by pressing its reset button.
 Diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...)
 = supply voltage of electrical auxiliaries (electrical operation, MN, MT...).

2 Compact NS630b/1600 devices

Diagram no. 51201183

Electrical interlocking by IVE unit

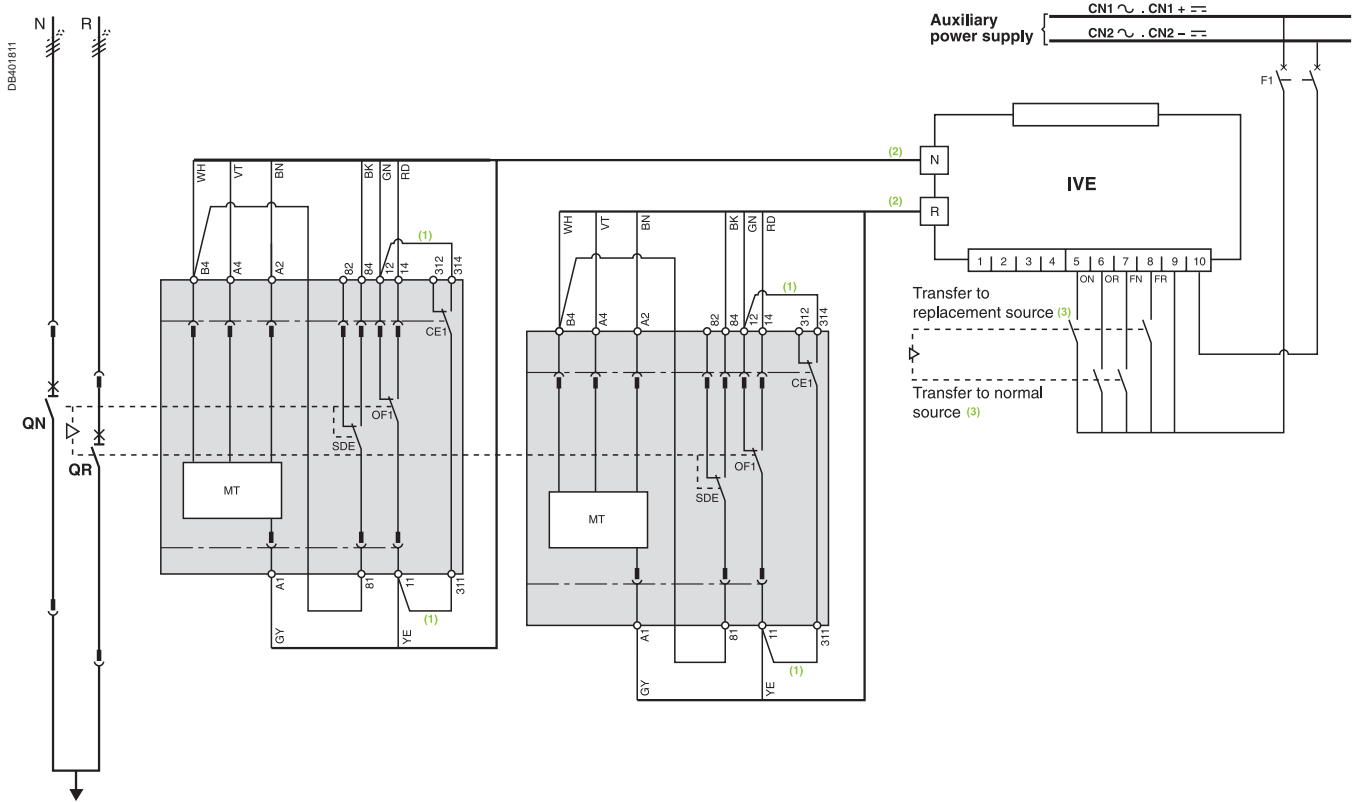

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect wire BK to terminal 82.

IMPORTANT

The relays controlling the “normal” and “replacement” circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

- (1) Not to be wired on fixed version.
- (2) Prefabricated wiring supplied.
- (3) See section “IMPORTANT” here after.

- Legends**
- QN “Normal” source Compact NS630b to 1600
 - QR “Replacement” source Compact NS630b to 1600
 - OF... breaker ON/OFF indication contact
 - SDE “fault-trip” indication contact
 - CE1 “connected-position” indication contact (carriage switch)
 - F1 auxiliary power supply circuit breaker
 - IVE electrical interlocking and terminal block unit
 - ON “Normal” source opening order
 - OR “Replacement” source opening order
 - FN “Normal” source closing order (0.25 second delay)
 - FR “Replacement” source closing order (0.25 second delay)
 - MT Motor Mechanism

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1


Note:
after a fault trip, the breaker must be reset manually by pressing its reset button.
Diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...)
= supply voltage of electrical auxiliaries (electrical operation, MT...).

Remote-operated source-changeover systems

2 Compact NS630b/1600 devices

Diagram no. 51201184

Electrical interlocking by IVE unit with emergency off by shunt release

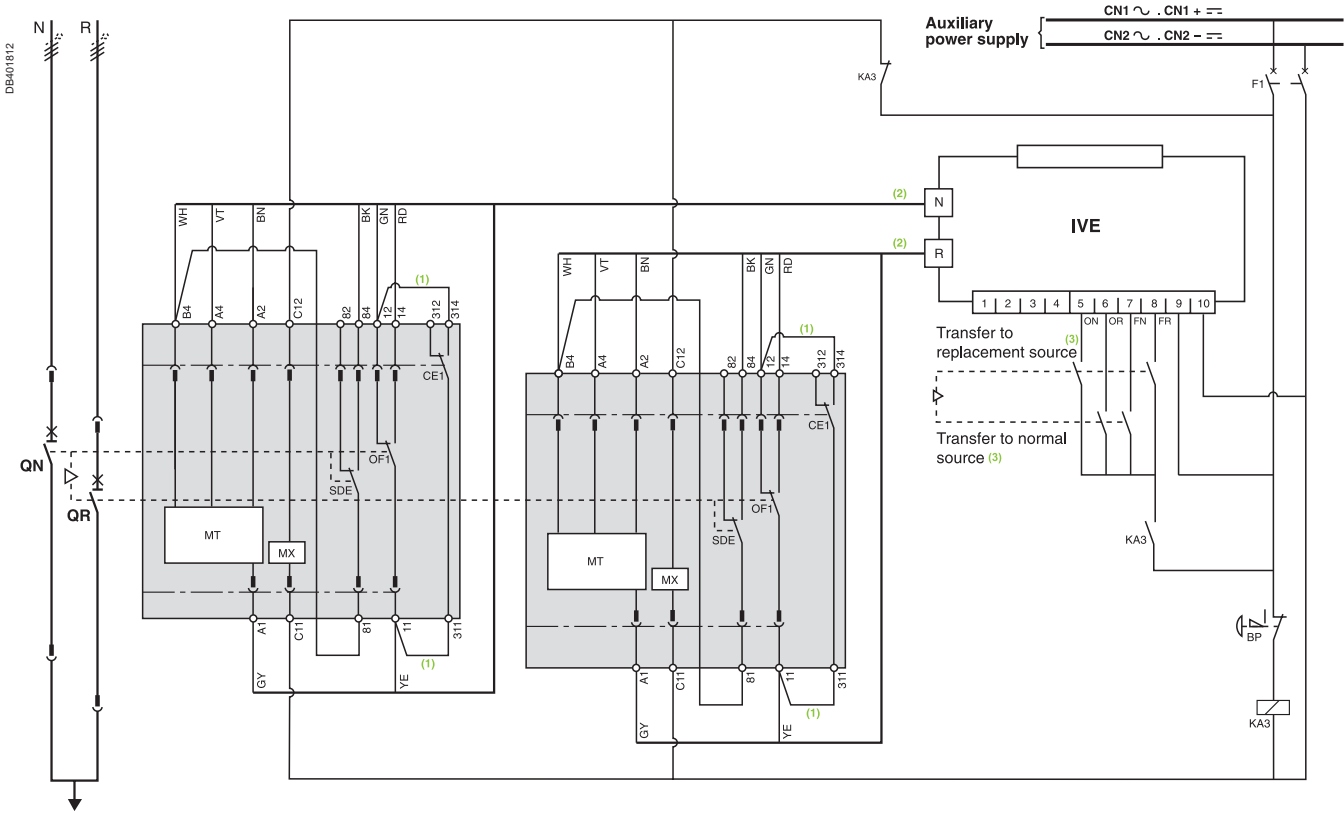

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

- (1) Not to be wired on fixed version.
- (2) Prefabricated wiring supplied.
- (3) See section "IMPORTANT" here after.

IMPORTANT

The relays controlling the "normal" and "replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

Legends

- QN "Normal" source Compact NS630b to 1600
- QR "Replacement" source Compact NS630b to 1600
- OF... breaker ON/OFF indication contact
- SDE "fault-trip" indication contact
- CE1 "connected-position" indication contact (carriage switch)
- F1 auxiliary power supply circuit breaker
- IVE electrical interlocking and terminal block unit
- MX shunt release
- BP emergency off button with latching
- KA3 auxiliary relay
- ON "Normal" source opening order
- OR "Replacement" source opening order
- FN "Normal" source closing order (0.25 second delay)
- FR "Replacement" source closing order (0.25 second delay)
- MT Motor Mechanism

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:

after a fault trip, the breaker must be reset manually by pressing its reset button.


Diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...)
= supply voltage of electrical auxiliaries (electrical operation, MX, MT...).

2 Compact NS630b/1600 devices

Diagram no. 51201185

Electrical interlocking by IVE unit with emergency off by undervoltage release

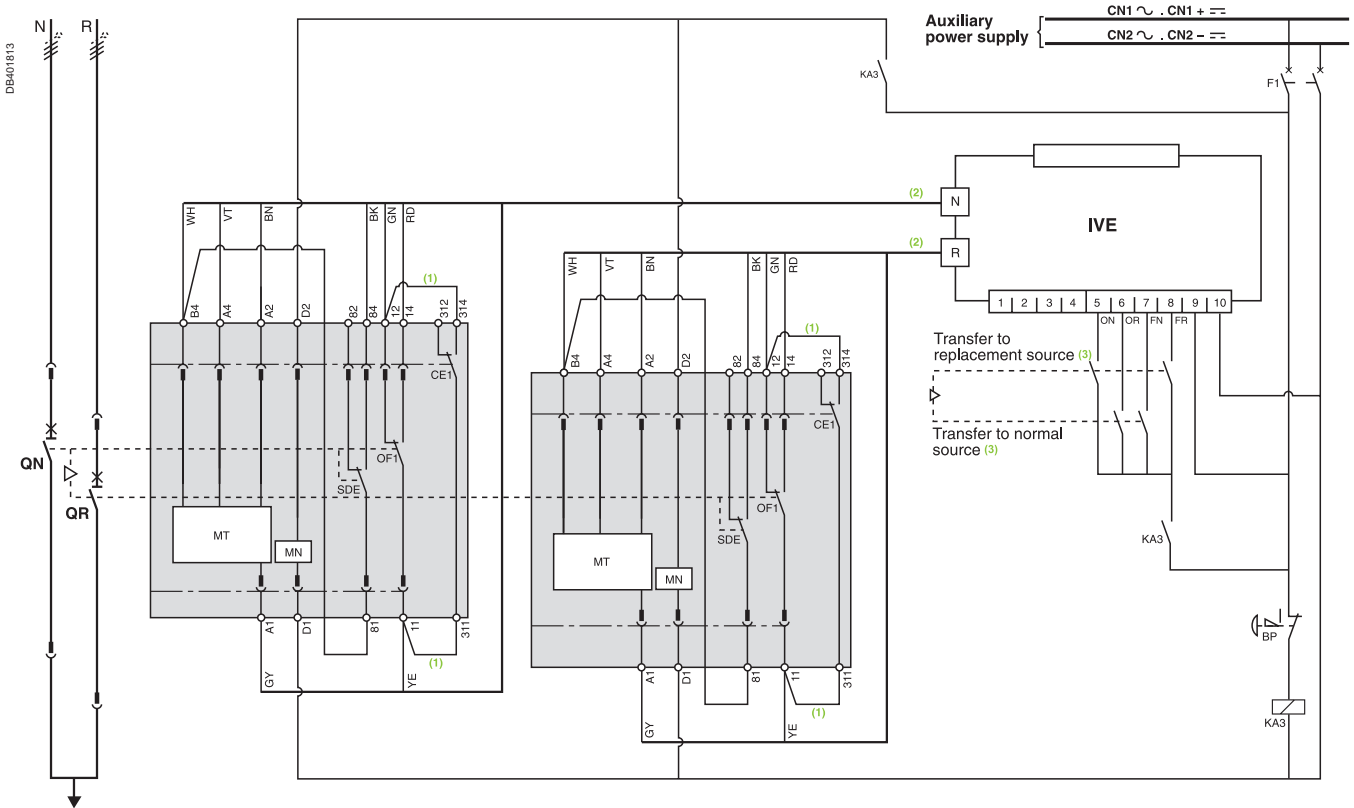

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect wire BK to terminal 82.

- (1) Not to be wired on fixed version.
- (2) Prefabricated wiring supplied.
- (3) See section "IMPORTANT" here after.

IMPORTANT

The relays controlling the "normal" and "replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

Legends

- QN** "Normal" source Compact NS630b to 1600
- QR** "Replacement" source Compact NS630b to 1600
- OF...** breaker ON/OFF indication contact
- SDE** "fault-trip" indication contact
- CE1** "connected-position" indication contact (carriage switch)
- F1** auxiliary power supply circuit breaker
- IVE** electrical interlocking and terminal block unit
- MN** undervoltage release
- BP** emergency off button with latching
- KA3** auxiliary relay
- ON** "Normal" source opening order
- OR** "Replacement" source opening order
- FN** "Normal" source closing order (0.25 second delay)
- FR** "Replacement" source closing order (0.25 second delay)
- MT** Motor Mechanism

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:

after a fault trip, the breaker must be reset manually by pressing its reset button.

Diagram shown with circuit breakers in connected position, open, charged, and ready to close.


Auxiliary power supply = supply voltage of auxiliary relays (KA...)
= supply voltage of electrical auxiliaries (electrical operation, MN, MT...).

Remote-operated source-changeover systems

2 Compact NS630b/1600 devices

Diagram no. 51201186

Automatic-control system without IVE unit for permanent replacement source

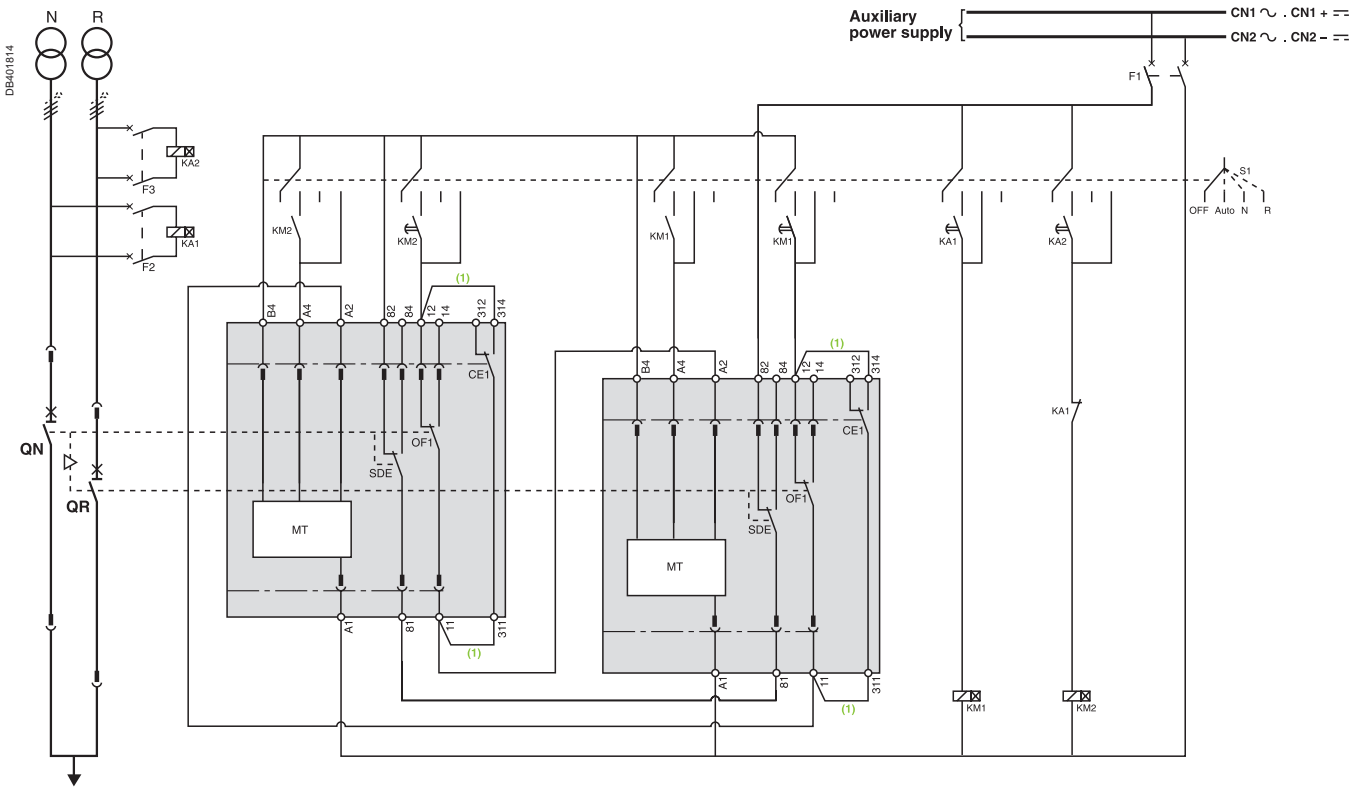

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

(1) Not to be wired on fixed version.

Legends

- QN** "Normal" source Compact NS630b to 1600
- QR** "Replacement" source Compact NS630b to 1600
- OF...** breaker ON/OFF indication contact
- SDE** "fault-trip" indication contact
- CE1** "connected-position" indication contact (carriage switch)
- F1** auxiliary power supply circuit breaker
- F2/F3** circuit breaker (high breaking capacity)
- S1** control switches
- KA1** auxiliary relays - UN presence detection
- KA2** auxiliary relays - UR presence detection
- KM1** contactors with 0.25 second delay (for transfer to "Replacement" source)
- KM2** contactors with 0.25 second delay (for transfer to "Normal" source)
- MT** Motor Mechanism

States permitted by mechanical interlocking system


Normal	Replacement
0	0
1	0
0	1

Note:
 after a fault trip, the breaker must be reset manually by pressing its reset button.
 Diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MT...).

2 Compact NS630b/1600 devices

Diagram no. 51201187

Automatic-control system for replacement source generator set

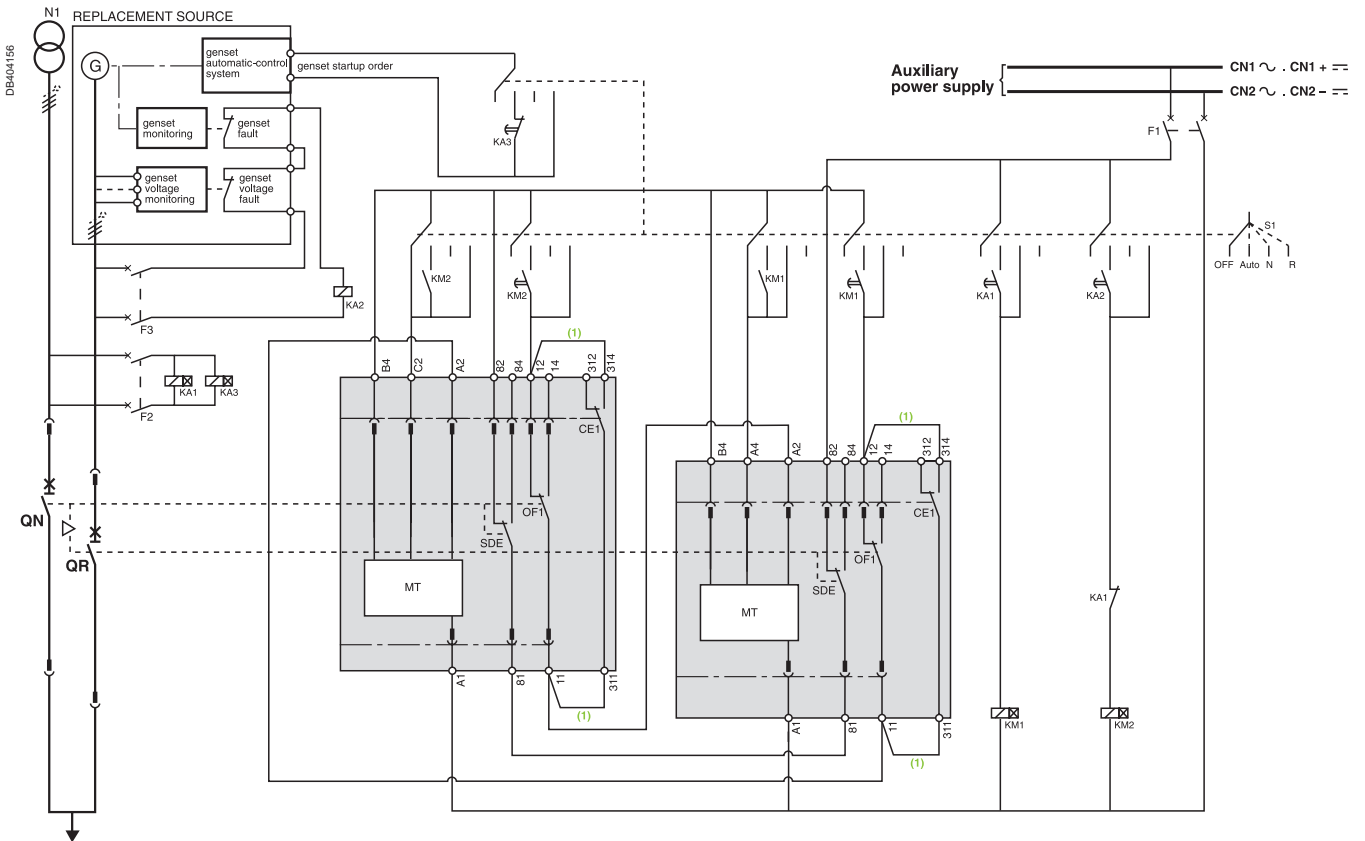

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals **81 and 84**.

(1) Not to be wired on fixed version.

Legends

- QN** "Normal" source Compact NS630b to 1600
- QR** "Replacement" source Compact NS630b to 1600
- OF...** breaker ON/OFF indication contact
- SDE** "fault-trip" indication contact
- CE1** "connected-position" indication contact (carriage switch)
- F1** auxiliary power supply circuit breaker
- F2/F3** circuit breaker (high breaking capacity)
- S1** control switches
- KA1** auxiliary relays - UN presence detection
- KA2** auxiliary relays - UR presence detection
- KA3** auxiliary relays - generator set startup if UN absent
- KM1** contactors with 0.25 second delay (for transfer to "Replacement" source)
- KM2** contactors with 0.25 second delay (for transfer to "Normal" source)
- MT** Motor Mechanism

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:


after a fault trip, the breaker must be reset manually by pressing its reset button.
Diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MT...).

Remote-operated source-changeover systems

2 Masterpact NT or NW devices

Diagram no. 51201139

Electrical interlocking with lockout after a fault

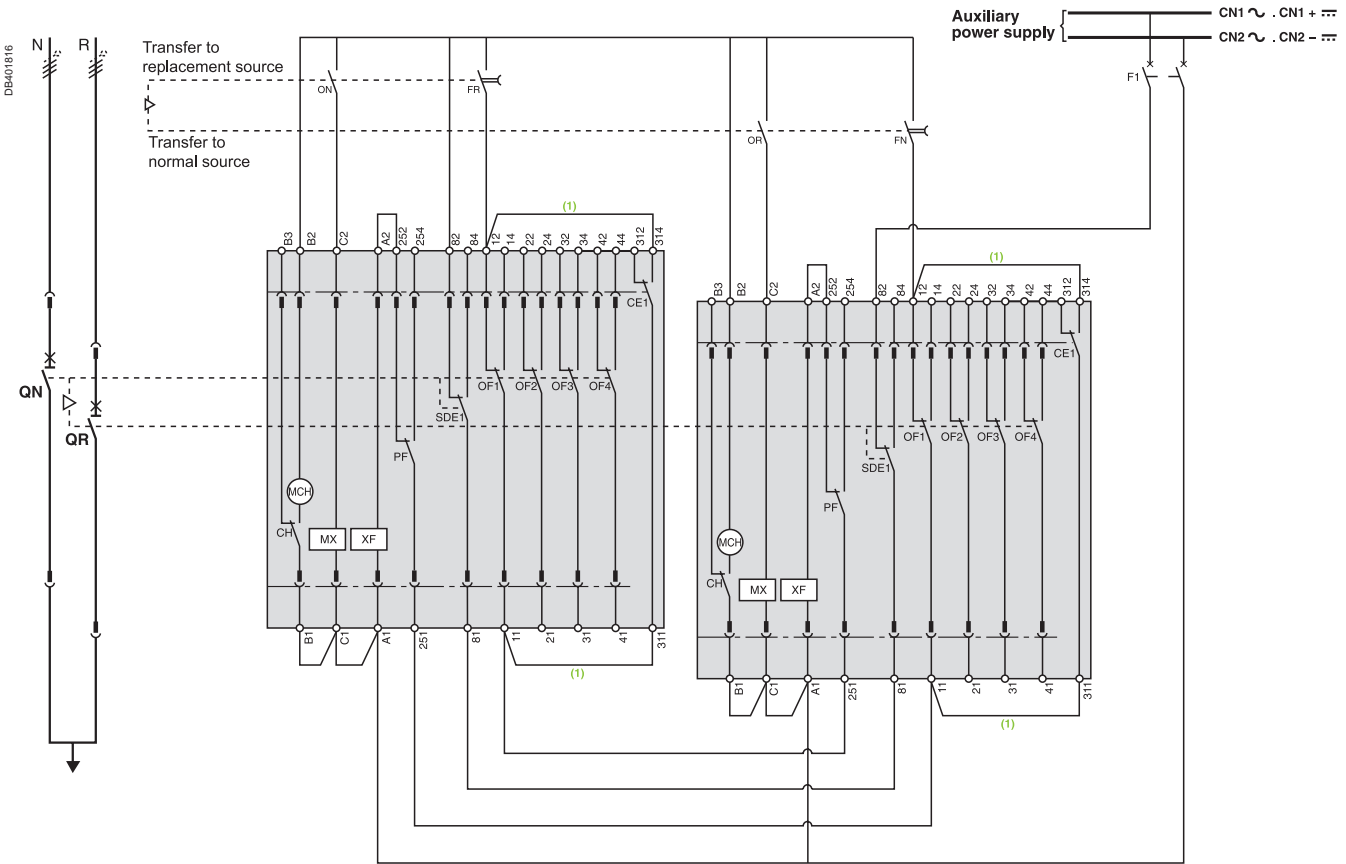

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

(1) Not to be wired on fixed version.

Legends

- QN** "Normal" source Masterpact NT or NW
- QR** "Replacement" source Masterpact NT or NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE1** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- ON** "Normal" source opening order
- OR** "Replacement" source opening order
- FN** "Normal" source closing order (0.25 second delay)
- FR** "Replacement" source closing order (0.25 second delay)

States permitted by mechanical interlocking system


Normal	Replacement
0	0
1	0
0	1

Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF..).

2 Masterpact NT or NW devices

Diagram no. 51201140

Electrical interlocking with lockout after a fault and emergency off by shunt release

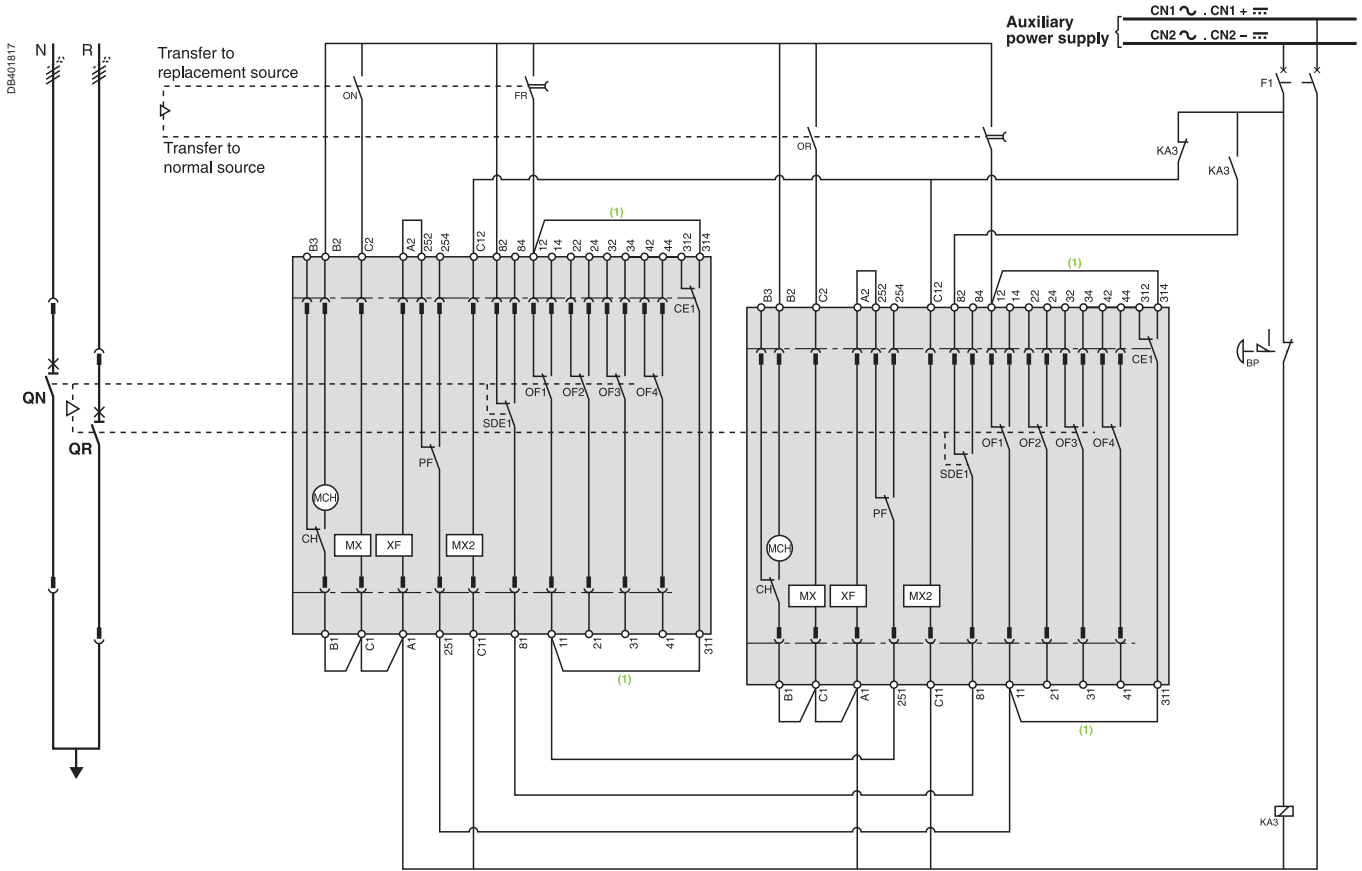

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

(1) Not to be wired on fixed version.

Legends

- KA3** time delay for genset startup order to avoid starting the genset for transient UN disturbances
- QN** "Normal" source Masterpact NT or NW
- QR** "Replacement" source Masterpact NT or NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE1** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- MX2** shunt release
- BP** emergency off button with latching
- ON** "Normal" source opening order
- OR** "Replacement" source opening order
- FN** "Normal" source closing order (0.25 second delay)
- FR** "Replacement" source closing order (0.25 second delay)
- BP** emergency off button with latching

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:


diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

2 Masterpact NT or NW devices

Diagram no. 51201141

Electrical interlocking with lockout after a fault and emergency off by undervoltage release

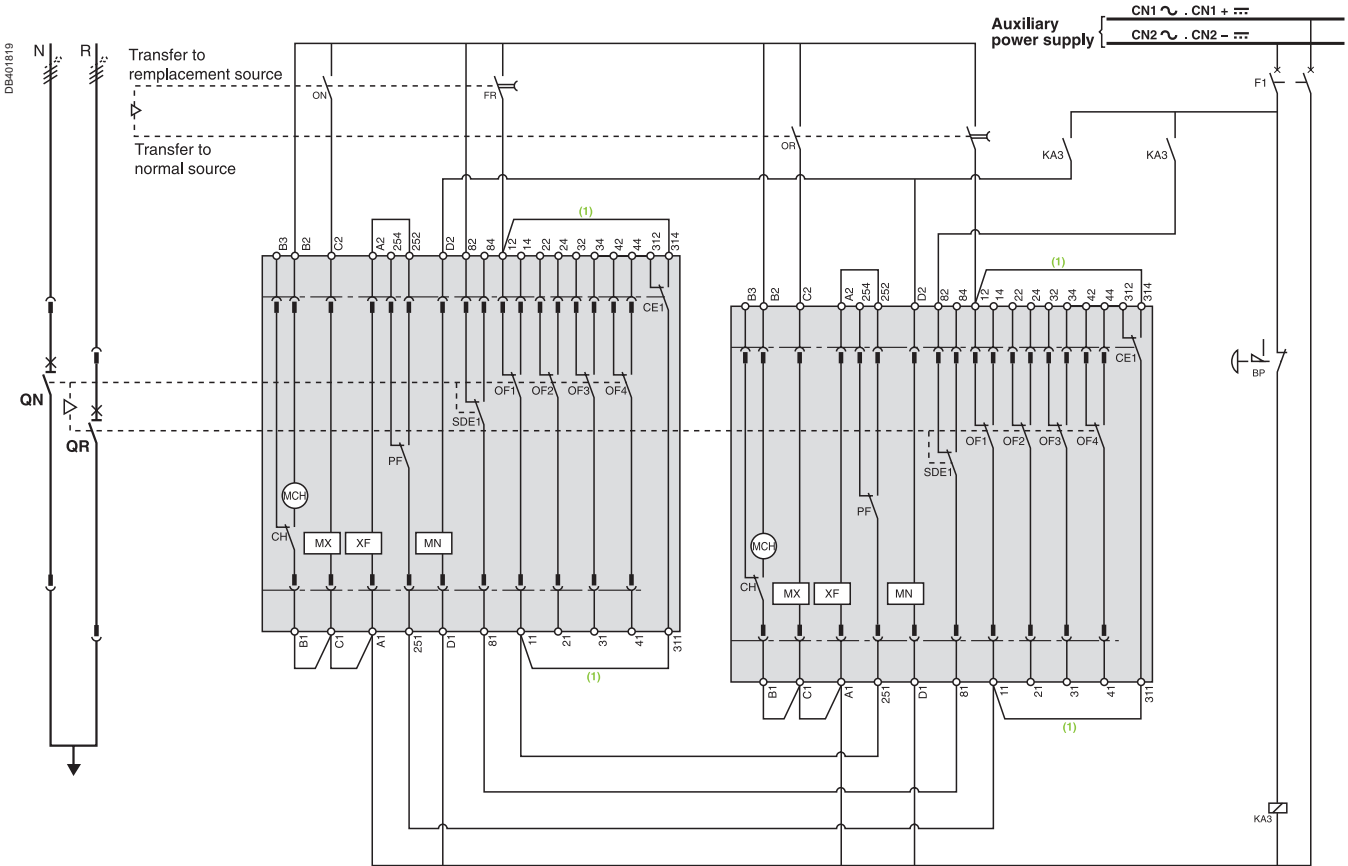

ATTENTION
 The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

(1) Not to be wired on fixed version.

Legends

- QN** "Normal" source Masterpact NT or NW
- QR** "Replacement" source Masterpact NT or NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- MN** undervoltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE1** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- BP** emergency off button with latching
- KA3** auxiliary relay
- ON** "Normal" source opening order
- OR** "Replacement" source opening order
- FN** "Normal" source closing order (0.25 second delay)
- FR** "Replacement" source closing order (0.25 second delay)

States permitted by mechanical interlocking system


Normal	Replacement
0	0
1	0
0	1

Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, MN, XF...).

2 Masterpact NT or NW devices

Diagram no. 51201142

Electrical interlocking by IVE unit with lockout after a fault

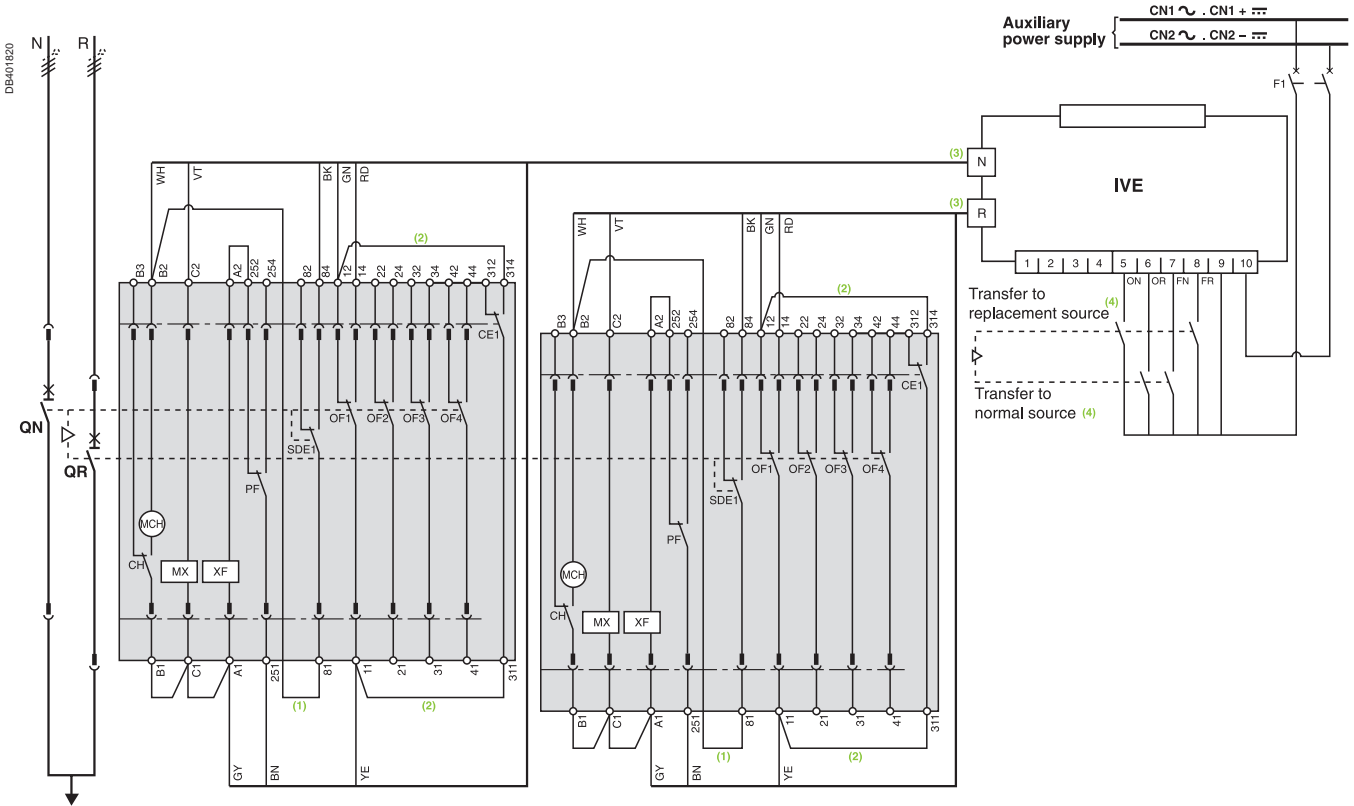

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect wire BK to terminal 82.

- (1) Not to be wired for the "without lockout after a fault" solution.
- (2) Not to be wired on fixed version.
- (3) Prefabricated wiring supplied.
- (4) See section "IMPORTANT" here after.

IMPORTANT

The relays controlling the "normal" and "replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

Legends

- QN "Normal" source Masterpact NT or NW
- QR "Replacement" source Masterpact NT or NW
- MCH spring-charging motor
- MX standard opening voltage release
- XF standard closing voltage release
- OF... breaker ON/OFF indication contact
- SDE1 "fault-trip" indication contact
- PF "ready-to-close" contact
- CE1 "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- IVE electrical interlocking and terminal block unit
- F1 auxiliary power supply circuit breaker
- ON "Normal" source opening order
- OR "Replacement" source opening order
- FN "Normal" source closing order (0.25 second delay)
- FR "Replacement" source closing order (0.25 second delay)

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:


diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...)
 = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

2 Masterpact NT or NW devices

Diagram no. 51201143

Electrical interlocking by IVE unit with lockout after a fault and emergency off by shunt release

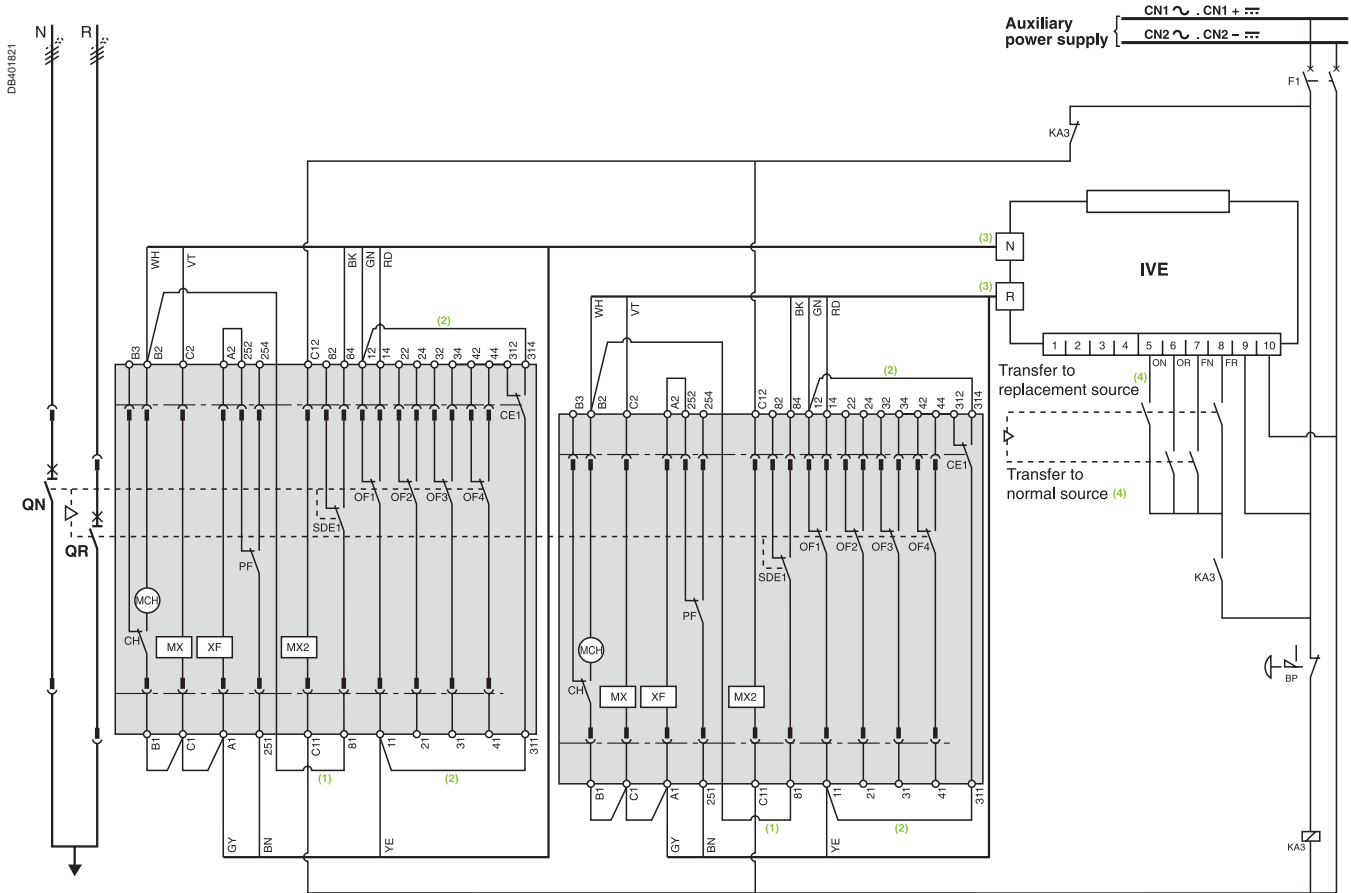

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors, connect wire BK to terminal 82.**

- (1) Not to be wired for the "without lockout after a fault" solution.
- (2) Not to be wired on fixed version.
- (3) Prefabricated wiring supplied.
- (4) See section "IMPORTANT" here after.

IMPORTANT

The relays controlling the "normal" and "replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

Legends

- QN** "Normal" source Masterpact NT or NW
- QR** "Replacement" source Masterpact NT or NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE1** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- IVE** electrical interlocking and terminal block unit
- F1** auxiliary power supply circuit breaker
- BP** emergency off button with latching
- KA3** auxiliary relay
- ON** "Normal" source opening order
- OR** "Replacement" source opening order
- FN** "Normal" source closing order (0.25 second delay)
- FR** "Replacement" source closing order (0.25 second delay)

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1


Note:

diagram shown with circuit breakers in connected position, open, charged, and ready to close. Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF..).

2 Masterpact NT or NW devices

Diagram no. 51201144

Electrical interlocking by IVE unit with lockout after a fault and emergency off by undervoltage release

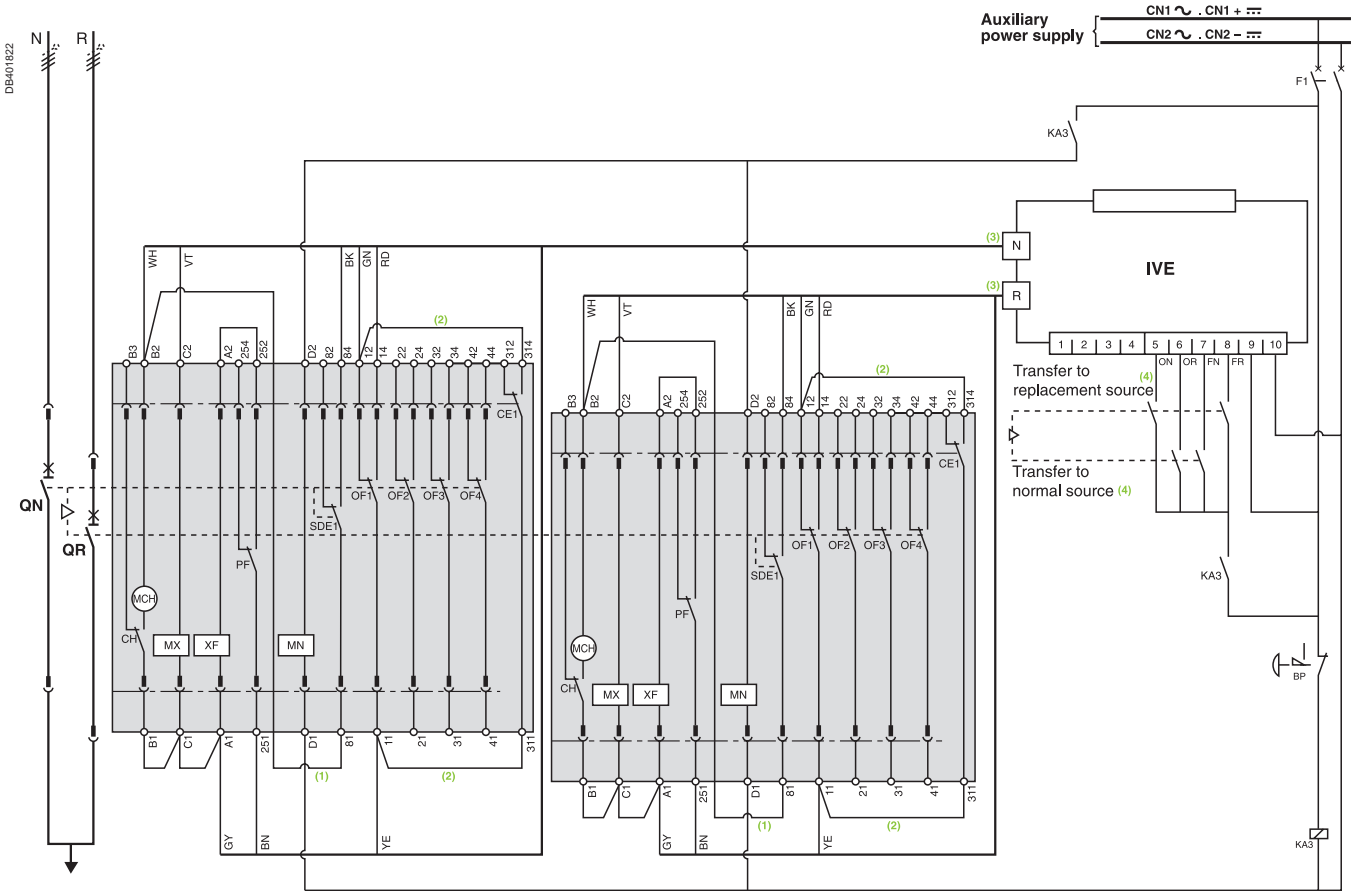

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect wire **BK** to terminal **82**.

- (1) Not to be wired for the "without lockout after a fault" solution.
- (2) Not to be wired on fixed version.
- (3) Prefabricated wiring supplied.
- (4) See section "IMPORTANT" here after.

IMPORTANT

The relays controlling the "normal" and "replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

Legends

- QN** "Normal" source Masterpact NT or NW
- QR** "Replacement" source Masterpact NT or NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- MN** undervoltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE1** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- IVE** electrical interlocking and terminal block unit
- F1** auxiliary power supply circuit breaker
- BP** emergency off button with latching
- KA3** auxiliary relay
- ON** "Normal" source opening order
- OR** "Replacement" source opening order
- FN** "Normal" source closing order (0.25 second delay)
- FR** "Replacement" source closing order (0.25 second delay)

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:


diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, MN, XF...).

Remote-operated source-changeover systems

2 Masterpact NT or NW devices

Diagram no. 51156226

Automatic-control system without IVE unit for permanent replacement source with lockout after a fault

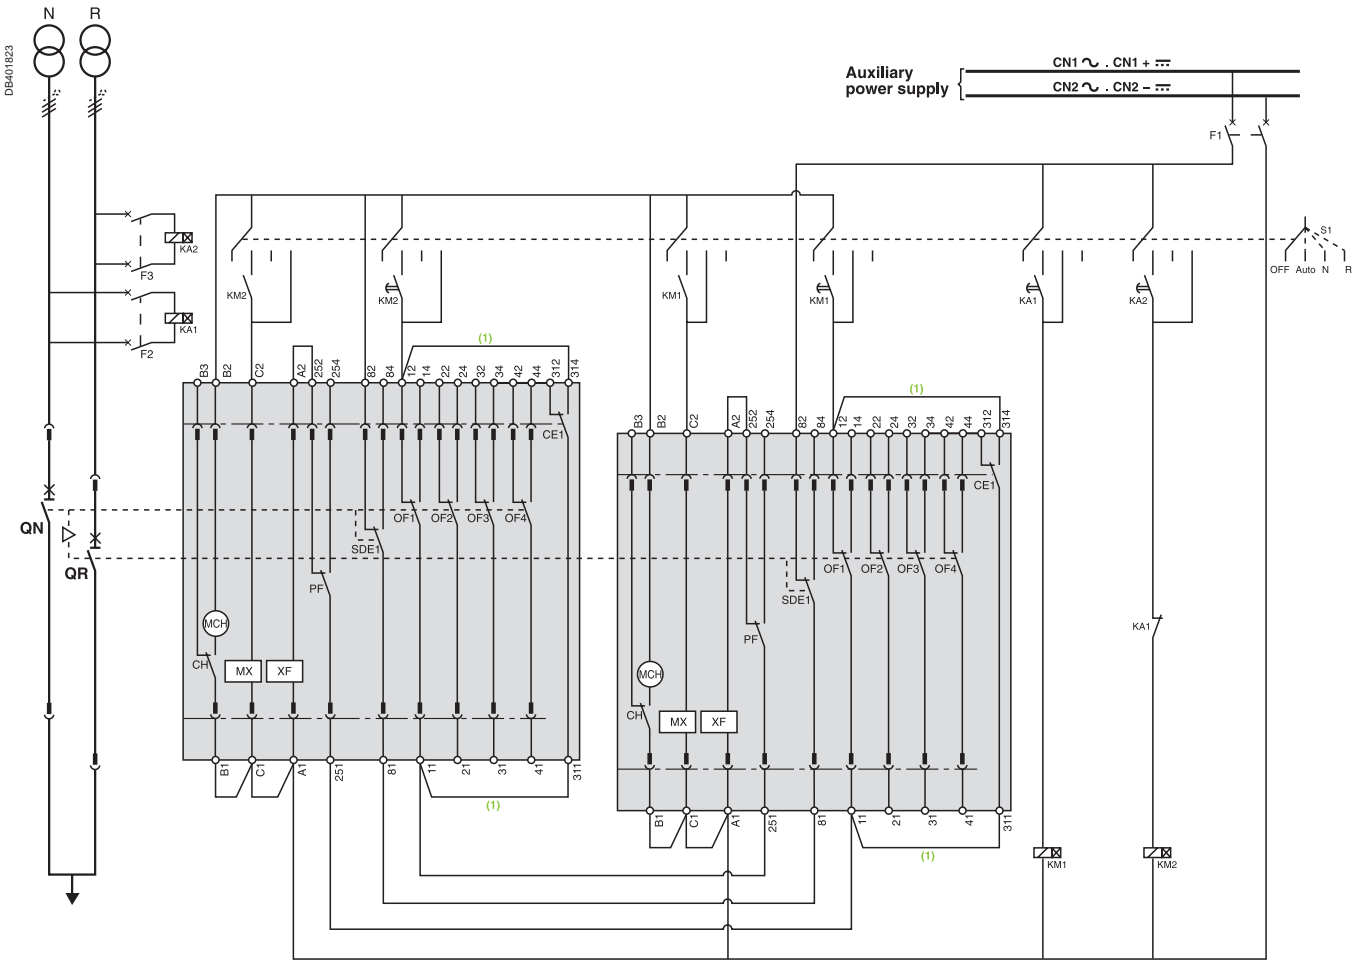

ATTENTION
 The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect the SDE to terminals 81 and 84.

(1) Not to be wired on fixed version.

Legends

- QN** "Normal" source Masterpact NT or NW
- QR** "Replacement" source Masterpact NT or NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE1** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- F2/F3** circuit breaker (high breaking capacity)
- S1** control switches
- KA1** auxiliary relays - UN presence detection
- KA2** auxiliary relays - UR presence detection
- KM1** contactors with 0.25 second delay (for transfer to "Replacement" source)
- KM2** contactors with 0.25 second delay (for transfer to "Normal" source)

States permitted by mechanical interlocking system


Normal	Replacement
0	0
1	0
0	1

Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF..).

2 Masterpact NT or NW devices

Diagram no. 51156227

Automatic-control system for replacement source generator set with lockout after a fault

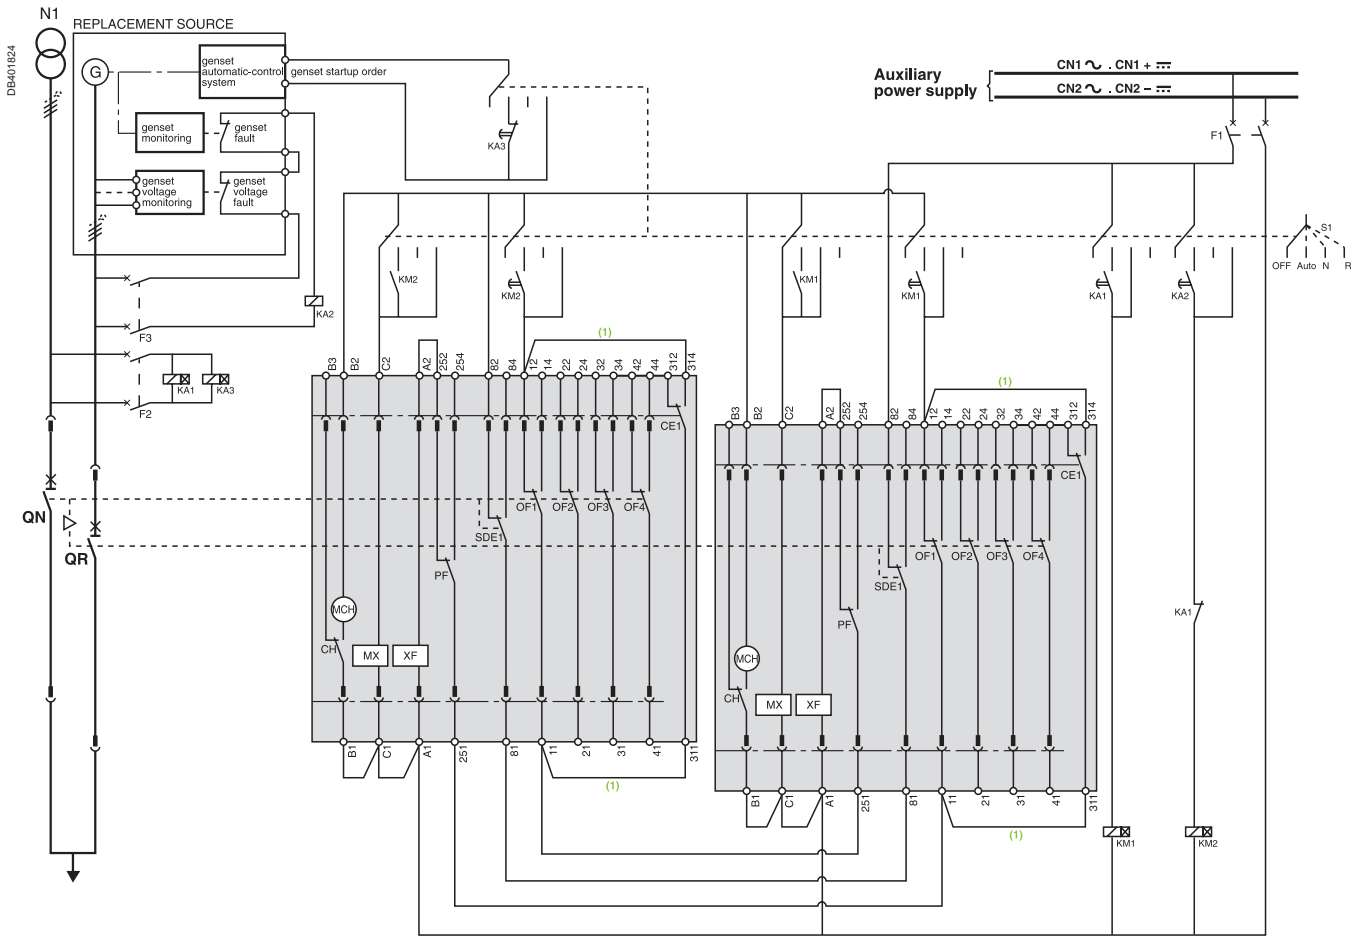

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

(1) Not to be wired on fixed version.

Legends

- QN** "Normal" source Masterpact NT or NW
- QR** "Replacement" source Masterpact NT or NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE1** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- F2/F3** circuit breaker (high breaking capacity)
- S1** control switches
- KA1** auxiliary relays - UN presence detection
- KA2** auxiliary relays - UR presence detection
- KA3** auxiliary relays - generator set startup if UN absent
- KM1** contactors with 0.25 second delay (for transfer to "Replacement" source)
- KM2** contactors with 0.25 second delay (for transfer to "Normal" source)

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1


Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

2 Masterpact NT or NW devices

Diagram no. 51156904

Automatic-control system for permanent replacement source with lockout after a fault (with MN)

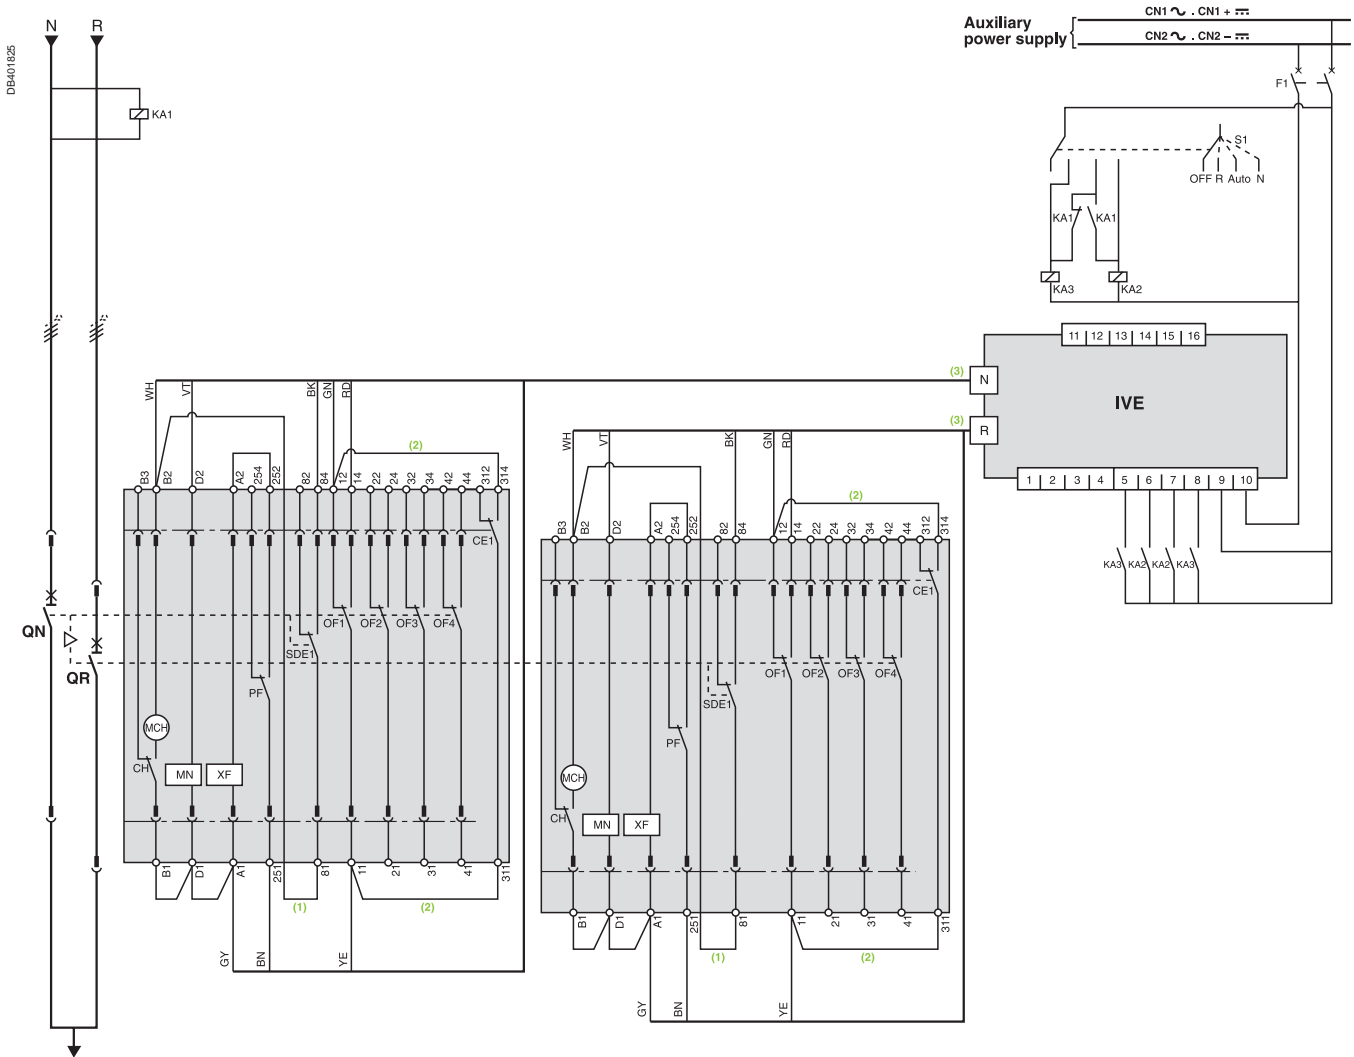

ATTENTION
The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect wire BK to terminal 82.

- (1) Not to be wired for the "without lockout after a fault" solution.
- (2) Not to be wired on fixed version.
- (3) Prefabricated wiring supplied.

Legends

- QN "Normal" source Masterpact NT or NW
- QR "Replacement" source Masterpact NT or NW
- MCH spring-charging motor
- XF standard closing voltage release
- MN undervoltage release
- OF... breaker ON/OFF indication contact
- SDE1 "fault-trip" indication contact
- PF "ready-to-close" contact
- CE1 "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- IVE electrical interlocking and terminal block unit
- F1 auxiliary power supply circuit breaker
- F2 circuit breaker (high breaking capacity)
- S1 control switches
- KA1 auxiliary relays
- KA2 auxiliary relays
- KA3 auxiliary relays

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system


Normal	Replacement
0	0
1	0
0	1

Note:
diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

2 Masterpact NT or NW devices

Diagram no. 51156905

Automatic-control system for replacement source generator set with lockout after a fault (with MN)

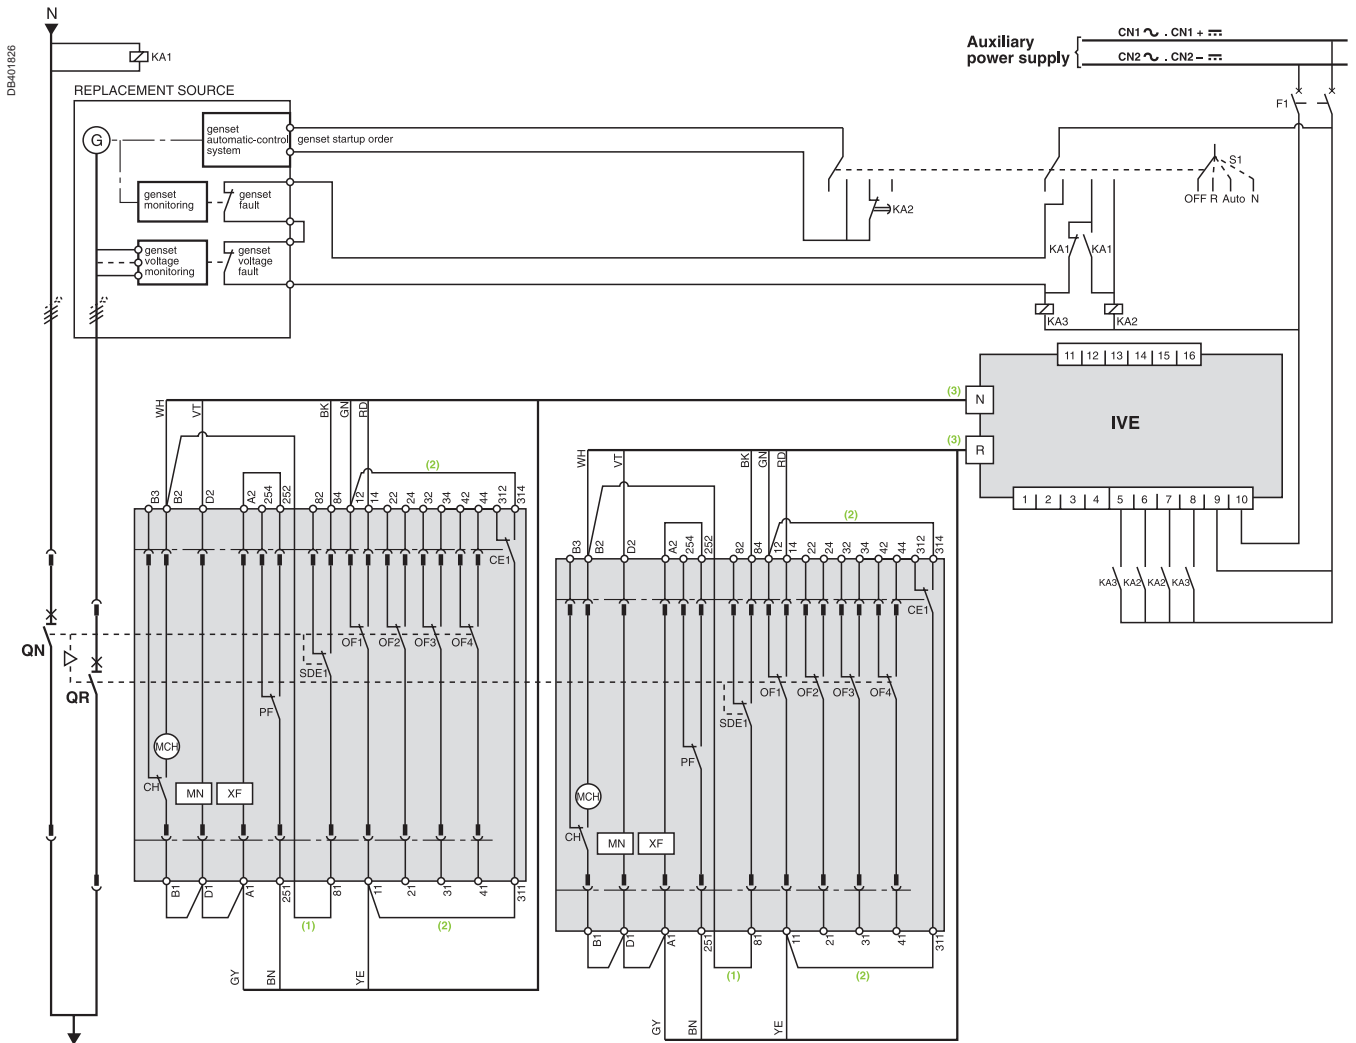

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect wire BK to terminal 82.

- (1) Not to be wired for the "without lockout after a fault" solution.
- (2) Not to be wired on fixed version.
- (3) Prefabricated wiring supplied.

Legends

- QN "Normal" source Masterpact NT or NW
- QR "Replacement" source Masterpact NT or NW
- MCH spring-charging motor
- XF standard closing voltage release
- MN undervoltage release
- OF... breaker ON/OFF indication contact
- SDE1 "fault-trip" indication contact
- PF "ready-to-close" contact
- CE1 "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- IVE electrical interlocking and terminal block unit
- F1 auxiliary power supply circuit breaker
- F2 circuit breaker (high breaking capacity)
- S1 control switches
- KA1 auxiliary relay
- KA2 time delay for genset startup order to avoid starting the genset for transient UN disturbances
- KA3 auxiliary relay

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:


diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

Remote-operated source-changeover systems

3 Masterpact NW devices

Diagram no. 51156906

2 normal sources and 1 replacement source: electrical interlocking without lockout after a fault

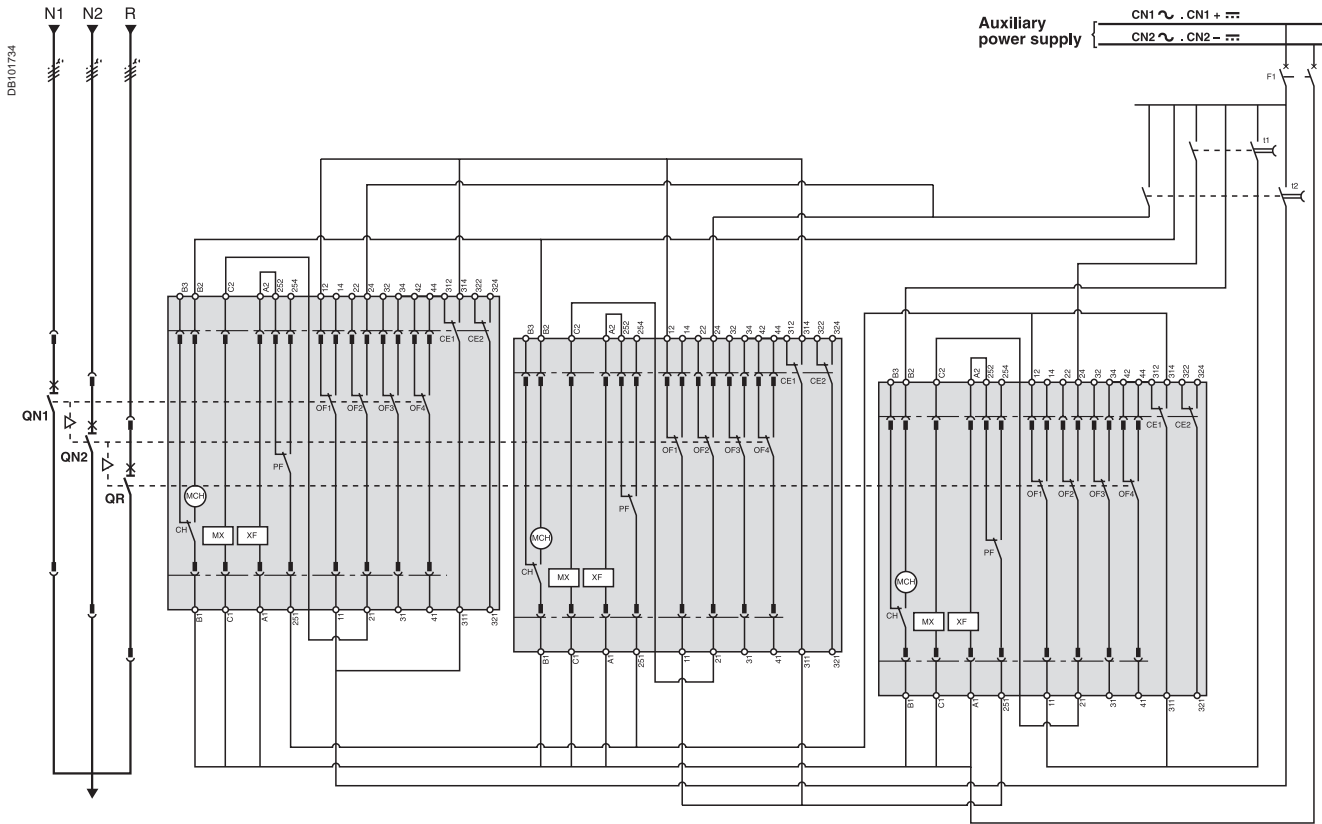

Legends

- QN...** "Normal" source Masterpact NW
- QR** "Replacement" source Masterpact NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- PF** "ready-to-close" contact
- CE** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- t1** order for transfer from "R" to "N1 + N2"
(QN1 and QN2 closing time delay = 0.25 sec. minimum)
- t2** order for transfer from "N1 + N2" to "R"
(QR closing time delay = 0.25 sec. minimum)

States permitted by mechanical interlocking system


Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

3 Masterpact NW devices

Diagram no. 51156907

2 normal sources and 1 replacement source: electrical interlocking with lockout after a fault

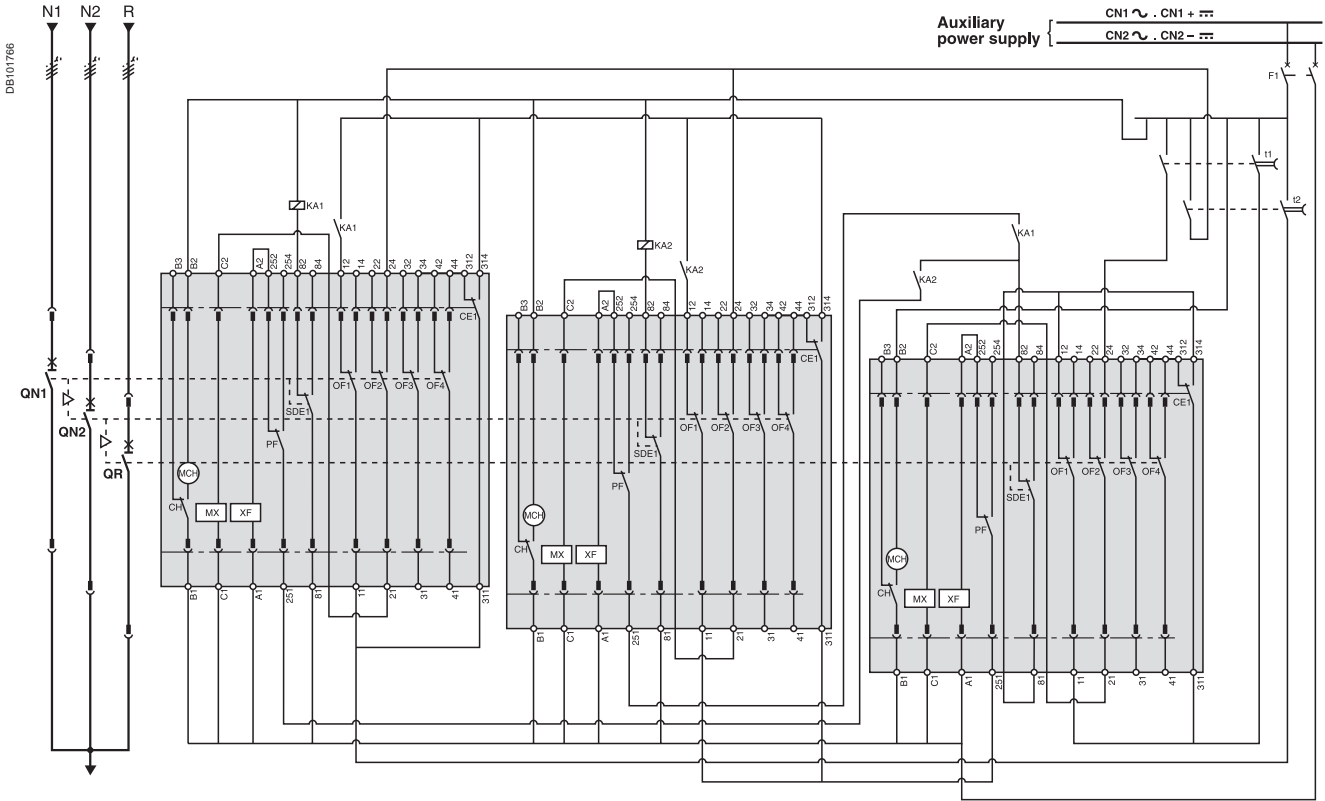

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

Legends

- QN...** "Normal" source Masterpact NW
- QR** "Replacement" source Masterpact NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE1** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- S1** control switches
- S2** source selection switches
- KA1** auxiliary relay
- KA2** auxiliary relays with 10 to 180 sec. time delay
- t1** order for transfer from "R" to "N1 + N2"
(QN1 and QN2 closing time delay = 0.25 sec. minimum)
- t2** order for transfer from "N1 + N2" to "R"
(QR closing time delay = 0.25 sec. minimum)

States permitted by mechanical interlocking system

Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note:


diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

3 Masterpact NW devices

Diagram no. 51156908

2 normal sources and 1 replacement source: automatic-control system for generator set without lockout after a fault (with MN)

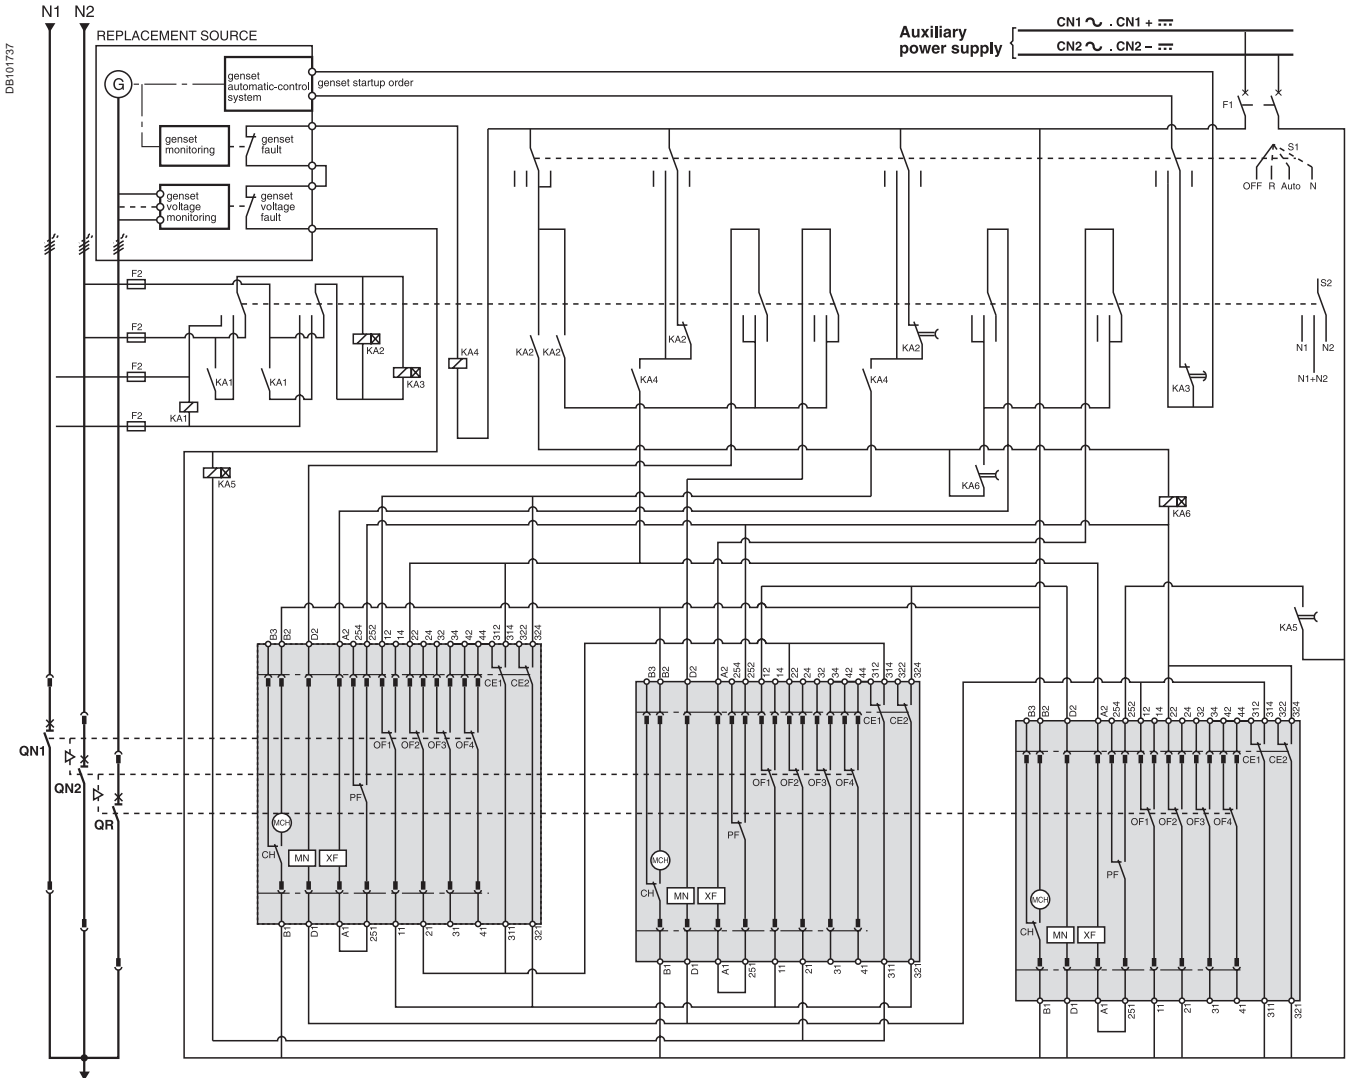

Legends

- QN...** "Normal" source Masterpact NW
- QR** "Replacement" source Masterpact NW
- MCH** spring-charging motor
- XF** standard closing voltage release
- MN** undervoltage release
- OF...** breaker ON/OFF indication contact
- PF** "ready-to-close" contact
- CE...** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- F2/F3** circuit breaker (high breaking capacity)
- S1** control switches
- S2** source selection switches
- KA1** auxiliary relay
- KA2** auxiliary relays with 10 to 180 sec. time delay
- KA3** auxiliary relays with 0.1 to 30 sec. time delay
- KA4** auxiliary relay
- KA5** auxiliary relays with 0.25 sec. time delay
- KA6** auxiliary relays with 0.25 sec. time delay

States permitted by mechanical interlocking system and with associated automatism


Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

3 Masterpact NW devices

Diagram no. 51156909

2 normal sources and 1 replacement source: automatic-control system for generator set with lockout after a fault (with MN)

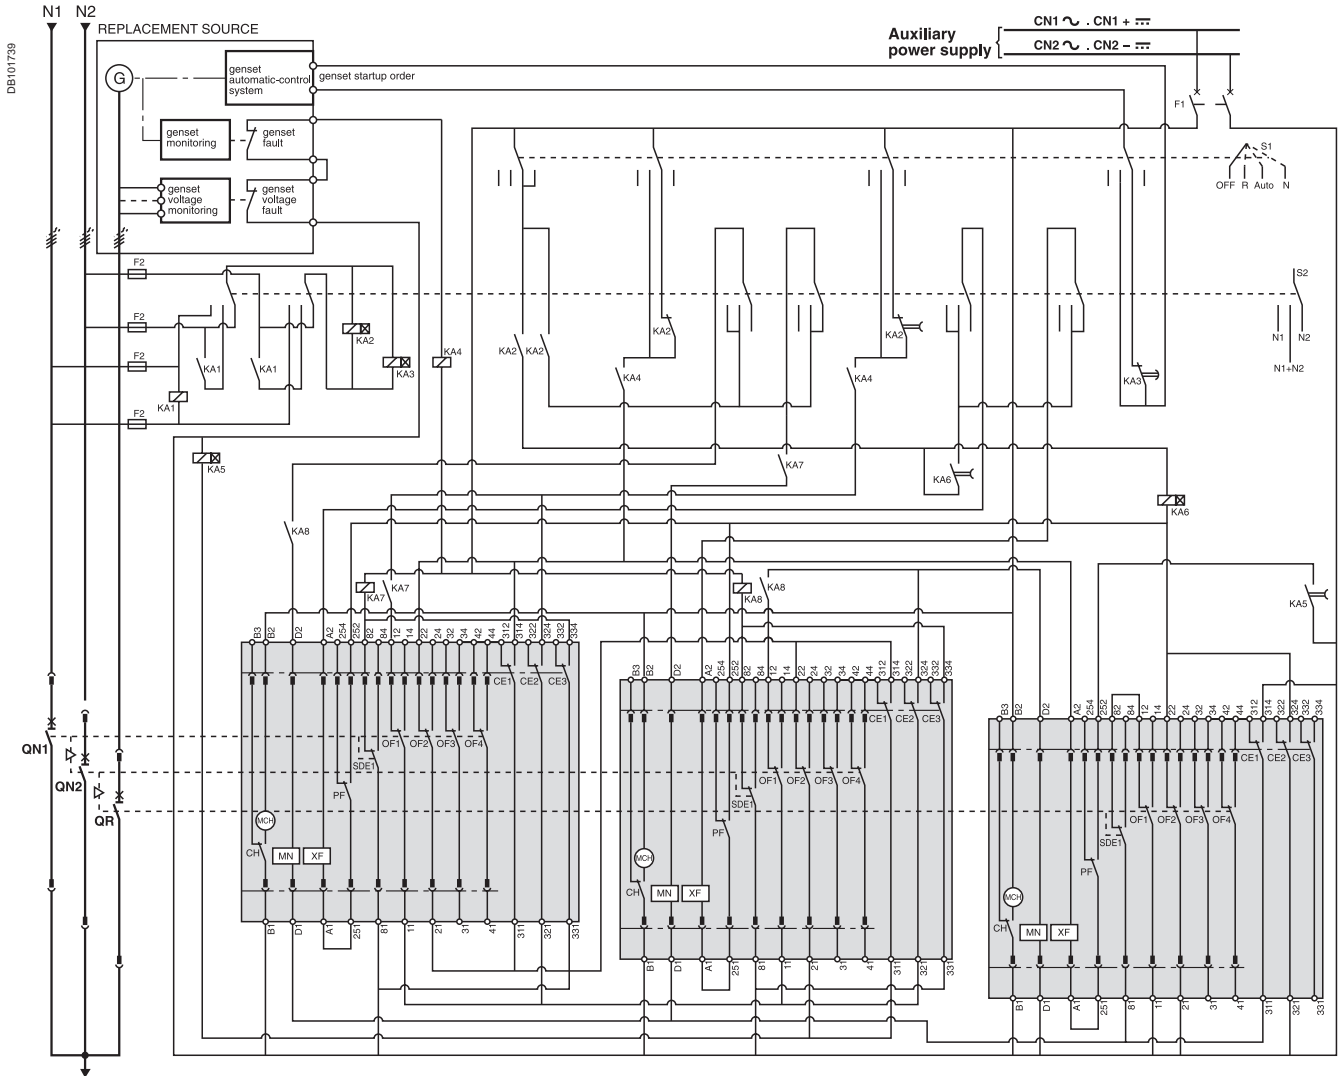

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals **81 and 84**.

Legends

- QN...** "Normal" source Masterpact NW
- QR** "Replacement" source Masterpact NW
- MCH** spring-charging motor
- XF** standard closing voltage release
- MN** undervoltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE...** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- F2/F3** circuit breaker (high breaking capacity)
- S1** control switches
- S2** source selection switches
- KA1** auxiliary relay
- KA2** auxiliary relays with 10 to 180 sec. time delay
- KA3** auxiliary relays with 0.1 to 30 sec. time delay
- KA4** auxiliary relay
- KA5** auxiliary relays with 0.25 sec. time delay
- KA6** auxiliary relays with 0.25 sec. time delay
- KA7** auxiliary relay
- KA8** auxiliary relay

States permitted by mechanical interlocking system and with associated automatism

Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note:


diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

Remote-operated source-changeover systems

3 Masterpact NW devices

Diagram no. 51156910

3 sources with only 1 device closed: electrical interlocking without lockout after a fault

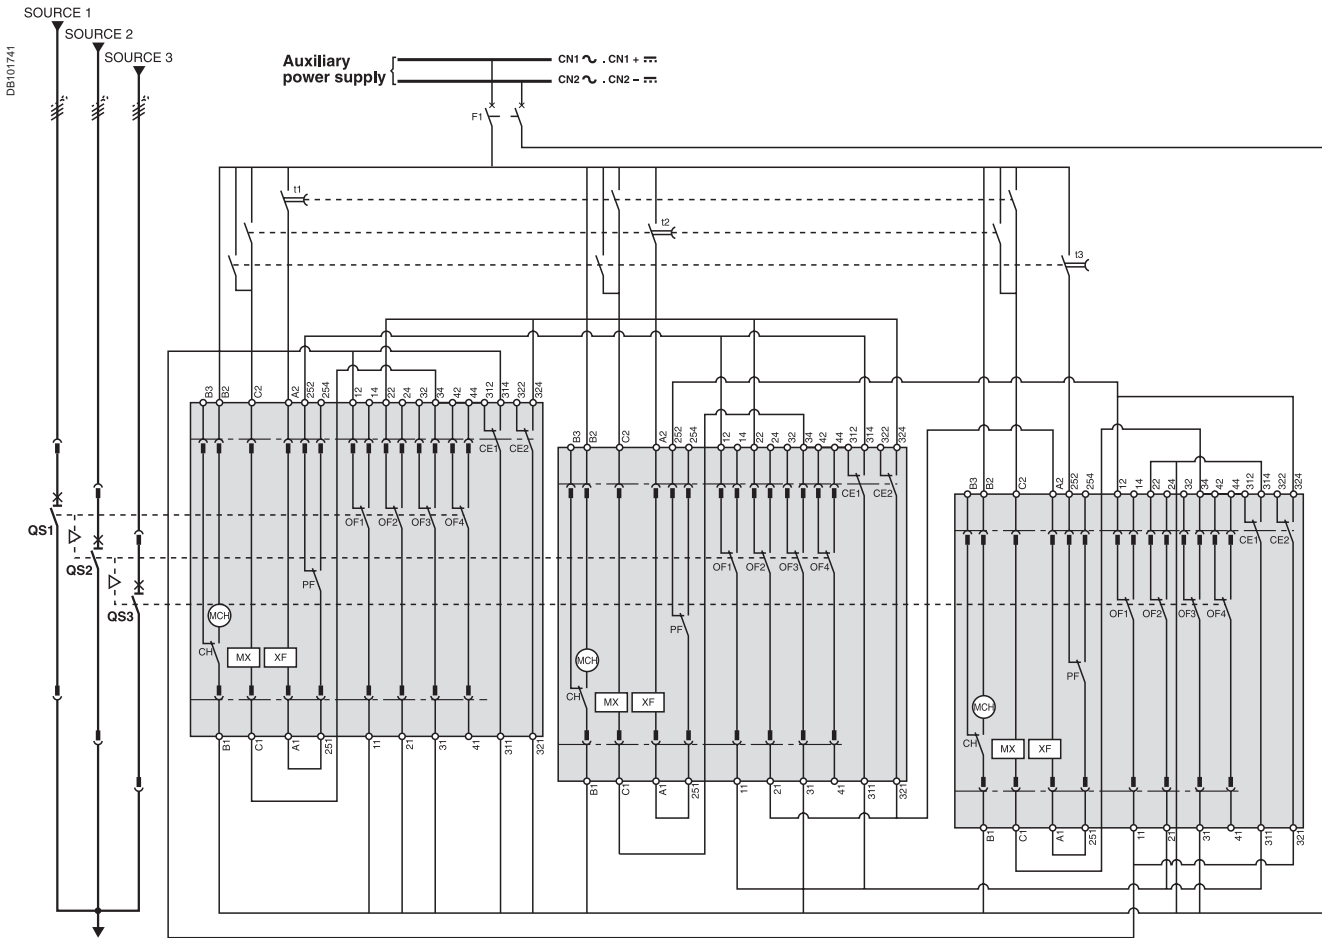

Legends

- QS...** "Source" Masterpact NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- PF** "ready-to-close" contact
- CE...** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- t1** order for transfer to "Source 1"
(QS1 closing time delay = 0.25 sec. minimum)
- t2** order for transfer to "Source 2"
(QS2 closing time delay = 0.25 sec. minimum)
- t3** order for transfer to "Source 3"
(QS3 closing time delay = 0.25 sec. minimum)

States permitted by mechanical interlocking system


Source 1	Source 2	Source 3
0	0	0
1	0	0
0	1	0
0	0	1

Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

3 Masterpact NW devices

Diagram no. 51156911

3 sources with only 1 device closed: electrical interlocking with lockout after a fault

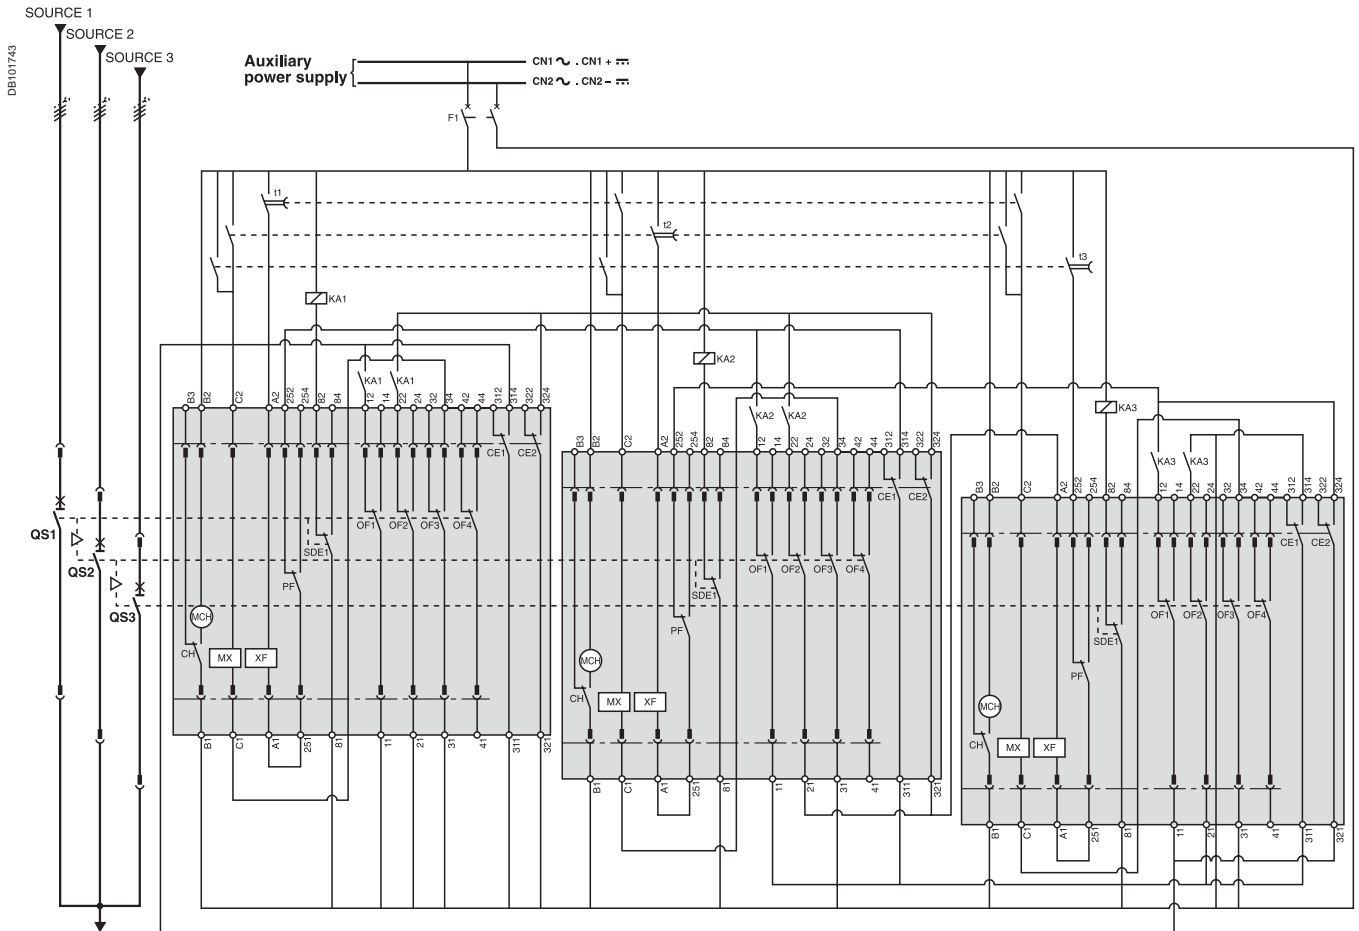

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

Legends

- QS...** "Source" Masterpact NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE...** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- t1** order for transfer to "Source 1"
(QS1 closing time delay = 0.25 sec. minimum)
- t2** order for transfer to "Source 2"
(QS2 closing time delay = 0.25 sec. minimum)
- t3** order for transfer to "Source 3"
(QS3 closing time delay = 0.25 sec. minimum)
- KA1** auxiliary relays
- KA2** auxiliary relays
- KA3** auxiliary relays

States permitted by mechanical interlocking system

Source 1	Source 2	Source 3
0	0	0
1	0	0
0	1	0
0	0	1

Note:


diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

3 Masterpact NW devices

Diagram no. 51156912

2 sources and 1 coupling: electrical interlocking without lockout after a fault

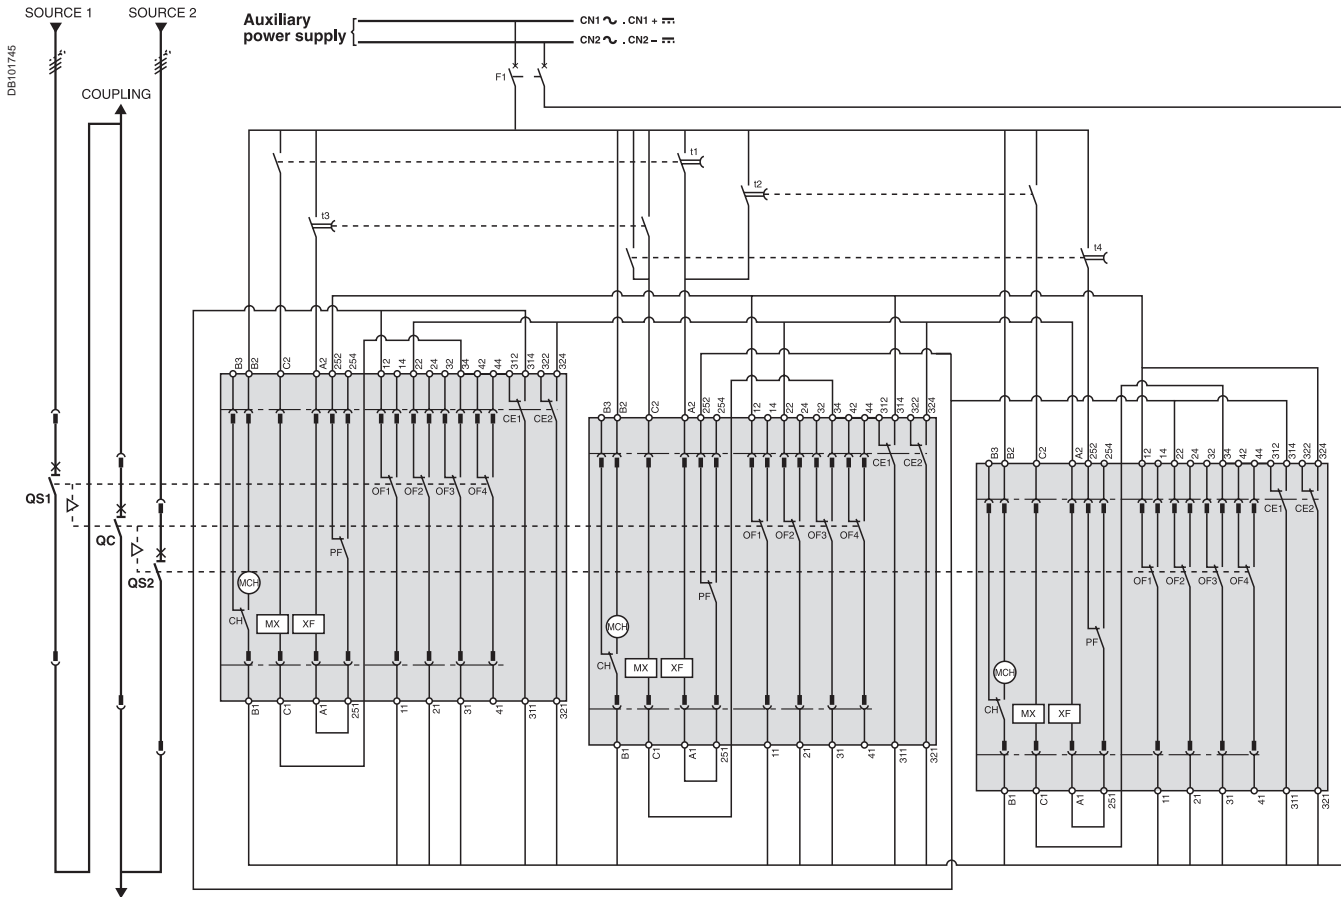

Legends

- QS...** "Source" Masterpact NW
- QC** "Coupling" Masterpact NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- PF** "ready-to-close" contact
- CE...** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- t1** coupling order for "Source 1 failure"
(QC closing time delay = 0.25 sec. minimum)
- t2** coupling order for "Source 2 failure"
(QC closing time delay = 0.25 sec. minimum)
- t3** coupling order for "Source 1 restored"
(QS1 closing time delay = 0.25 sec. minimum)
- t4** coupling order for "Source 2 restored"
(QS2 closing time delay = 0.25 sec. minimum)

States permitted by mechanical interlocking system


Source 1	Source 2	Coupling
0	0	0
1	1	0
1	0	1
0	1	1
1	0	0
0	1	0
0	0	1

Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...)
 = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

3 Masterpact NW devices

Diagram no. 51156913

2 sources and 1 coupling: electrical interlocking with lockout after a fault

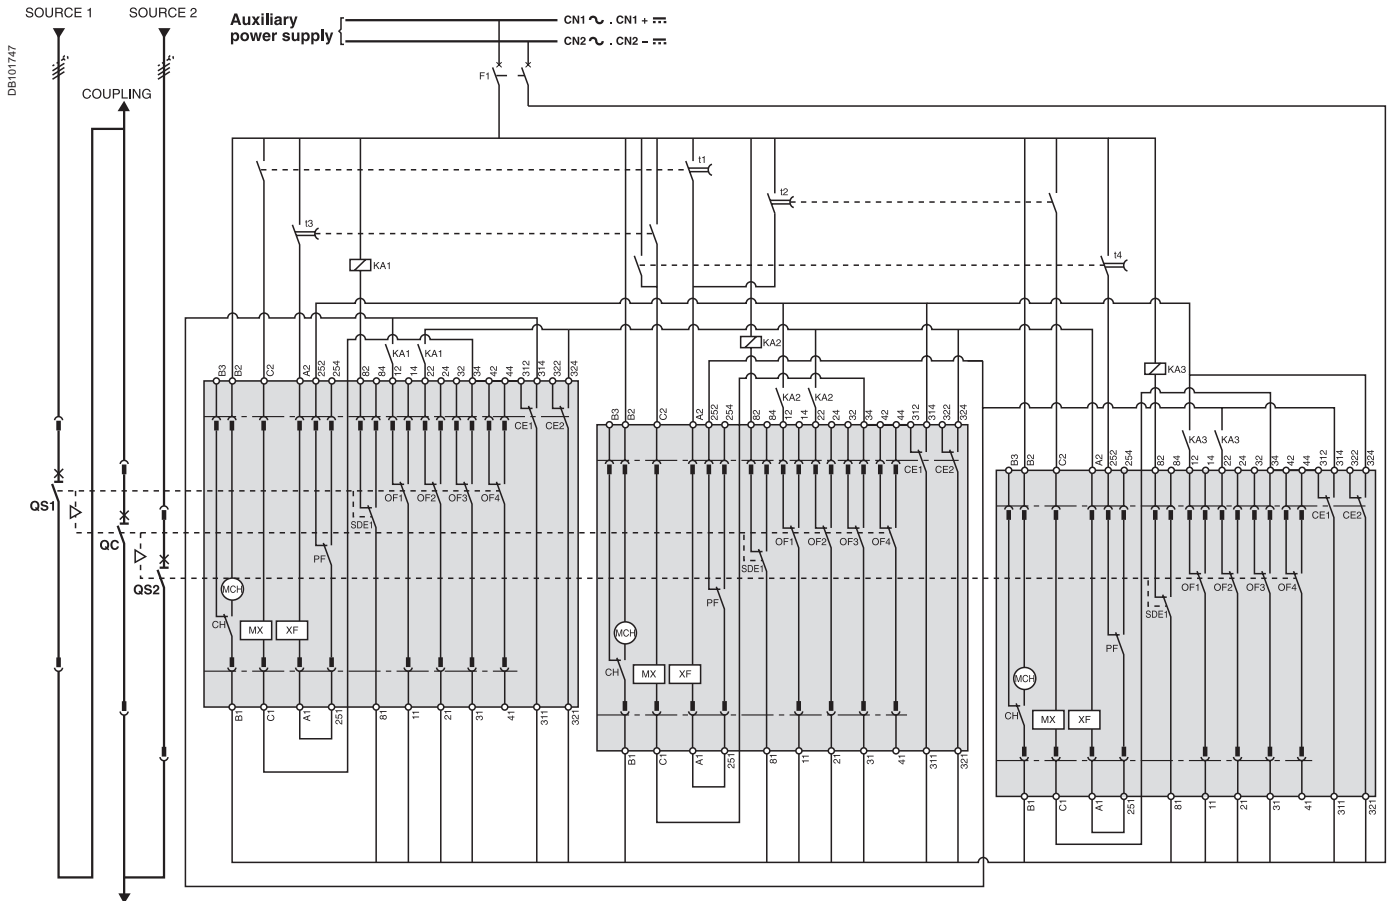

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals **81 and 84**.

Legends

- QS...** "Source" Masterpact NW
- QC** "Coupling" Masterpact NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE...** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact
- F1** auxiliary power supply circuit breaker
- t1** coupling order for "Source 1 failure"
(QC closing time delay = 0.25 sec. minimum)
- t2** coupling order for "Source 2 failure"
(QC closing time delay = 0.25 sec. minimum)
- t3** coupling order for "Source 1 restored"
(QS1 closing time delay = 0.25 sec. minimum)
- t4** coupling order for "Source 2 restored"
(QS2 closing time delay = 0.25 sec. minimum)
- KA1** auxiliary relays
- KA2** auxiliary relays
- KA3** auxiliary relays

States permitted by mechanical interlocking system

Source 1	Source 2	Coupling
0	0	0
1	1	0
1	0	1
0	1	1
1	0	0
0	1	0
0	0	1

Note:


diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

3 Masterpact NW devices

Diagram no. 51156914

2 sources and 1 coupling: automatic-control system with lockout after a fault

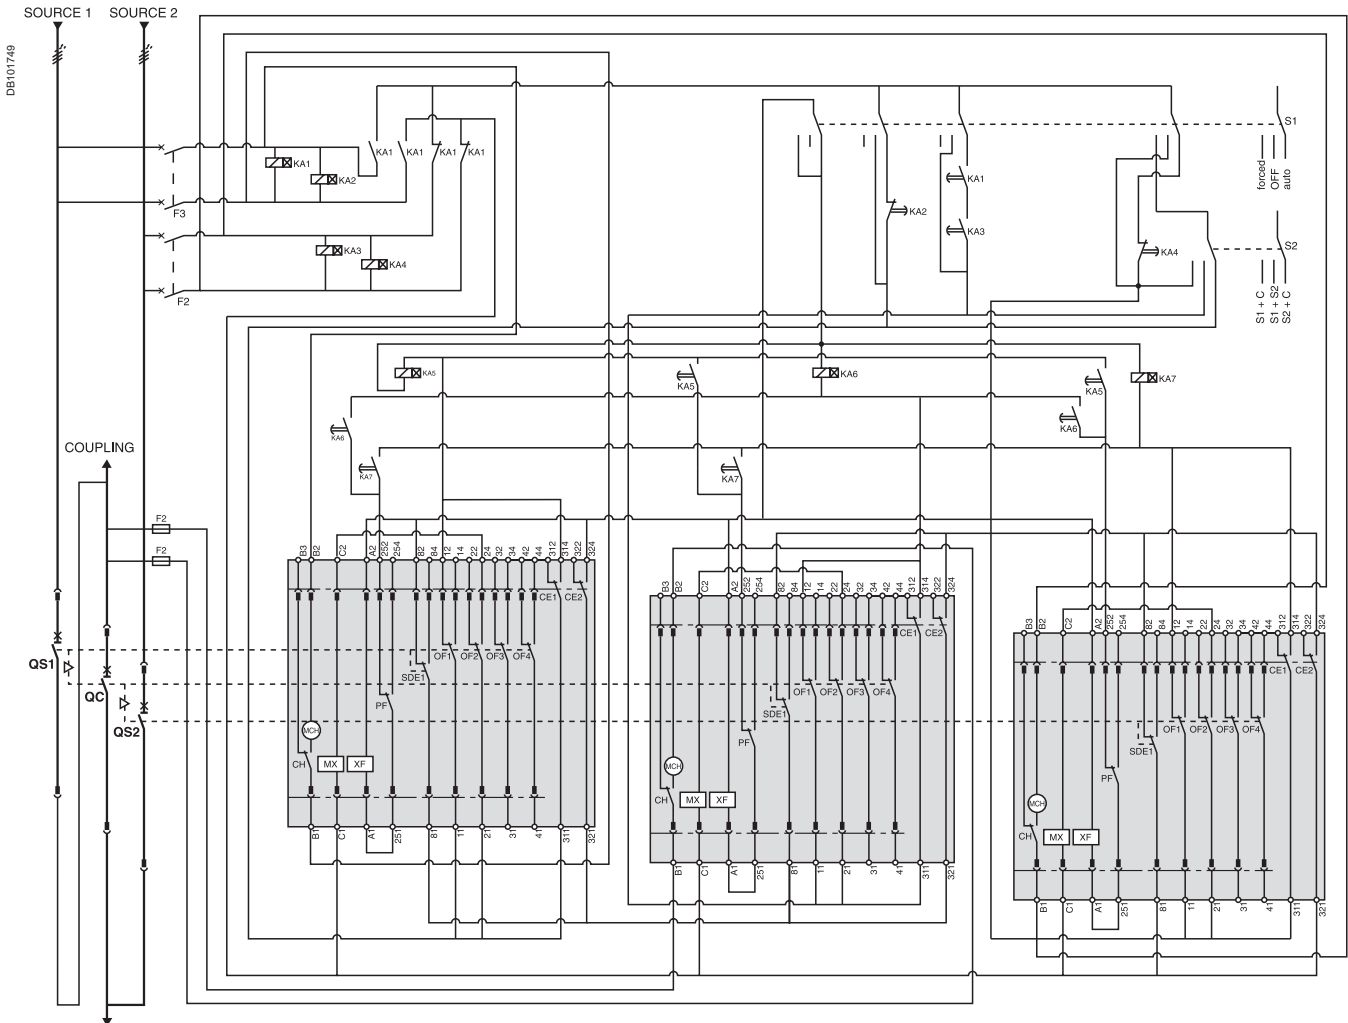

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

Legends

- QS... "Source" Masterpact NW
- QC "Coupling" Masterpact NW
- MCH spring-charging motor
- MX standard opening voltage release
- XF standard closing voltage release
- OF... breaker ON/OFF indication contact
- SDE1 "fault trip" indication contact
- PF "ready-to-close" contact
- CE... "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- F1 auxiliary power supply circuit breaker
- F2/F3 circuit breaker (high breaking capacity)
- S1 control switches
- S2 source selection switches
- KA1 auxiliary relays with 10 to 180 sec. time delay
- KA2 auxiliary relays with 0.1 to 30 sec. time delay
- KA3 auxiliary relays with 10 to 180 sec. time delay
- KA4 auxiliary relays with 0.1 to 30 sec. time delay
- KA5 auxiliary relays with 0.25 sec. time delay
- KA6 auxiliary relays with 0.25 sec. time delay
- KA7 auxiliary relays with 0.25 sec. time delay

States permitted by mechanical interlocking system and with associated automatism


Source 1	Source 2	Coupling
0	0	0
1	1	0
1	0	1
0	1	1
1	0	0
0	1	0
0	0	1

Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).


Source-changeover systems with automatic controllers

2 Compact NSX100/630, NS630b/1600 or Masterpact NT/NW devices


Source-changeover system with BA controller

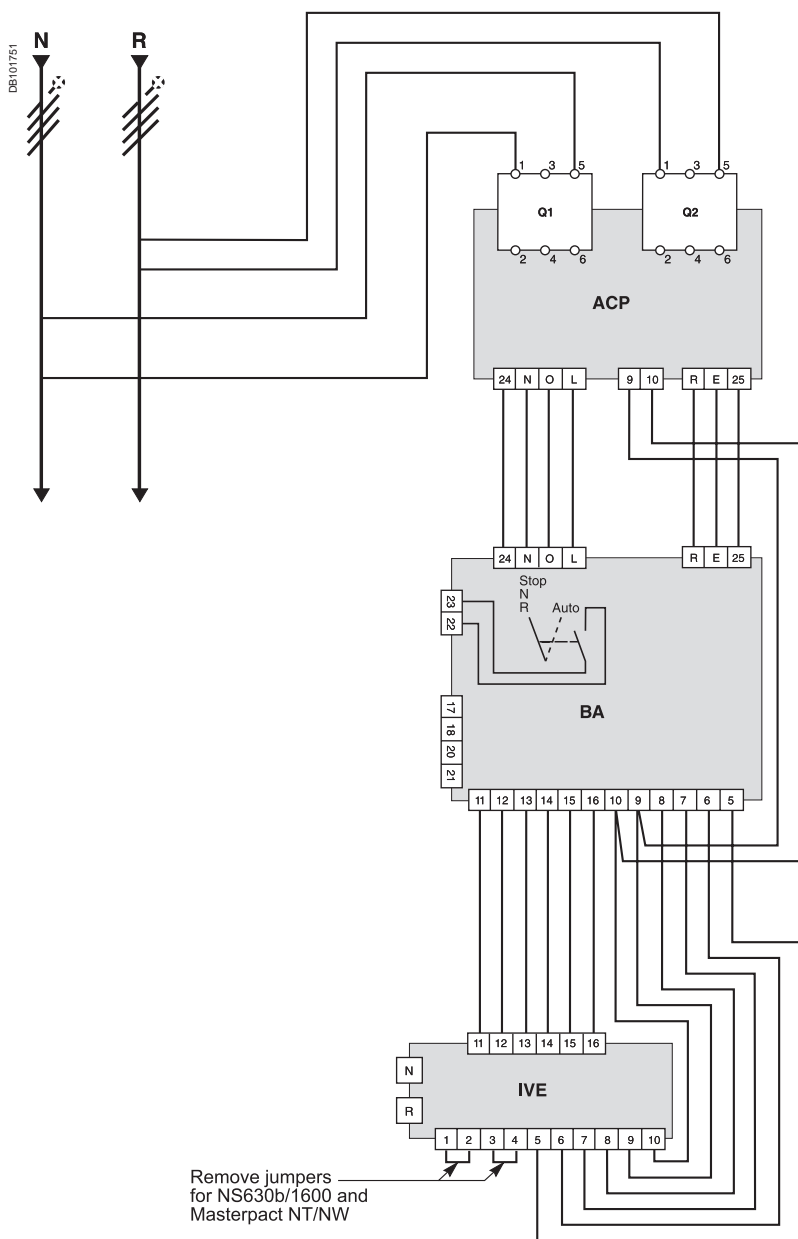

Coupling

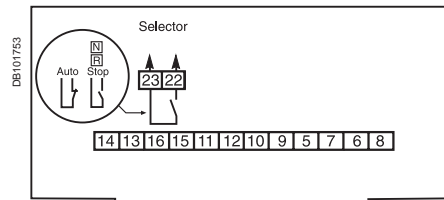

Transfer conditions

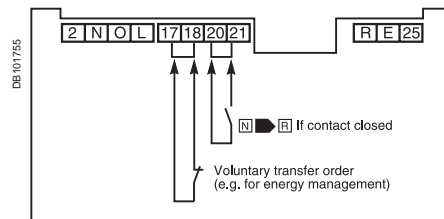

Terminals 20 and 21:
additional control contact (not part of controller).

Tests on "Normal" and "Replacement" source voltages

The single-phase check for UN and UR is implemented across terminals 1 and 5 of circuit breakers Q1 and Q2.

Legends


- Q1** circuit breaker supplying and protecting the automatic-control circuits for the "Normal" source
- Q2** circuit breaker supplying and protecting the automatic-control circuits for the "Replacement" source
- ACP** control plate
- BA** automatic controller
- IVE** electrical interlocking and terminal block unit

Note:
diagram shown with circuits de-energised, circuit breakers open and relays in normal position.


Source-changeover systems with automatic controllers

2 Compact NSX100/630, NS630b/1600 or Masterpact NT/NW devices


Source-changeover system with UA controller

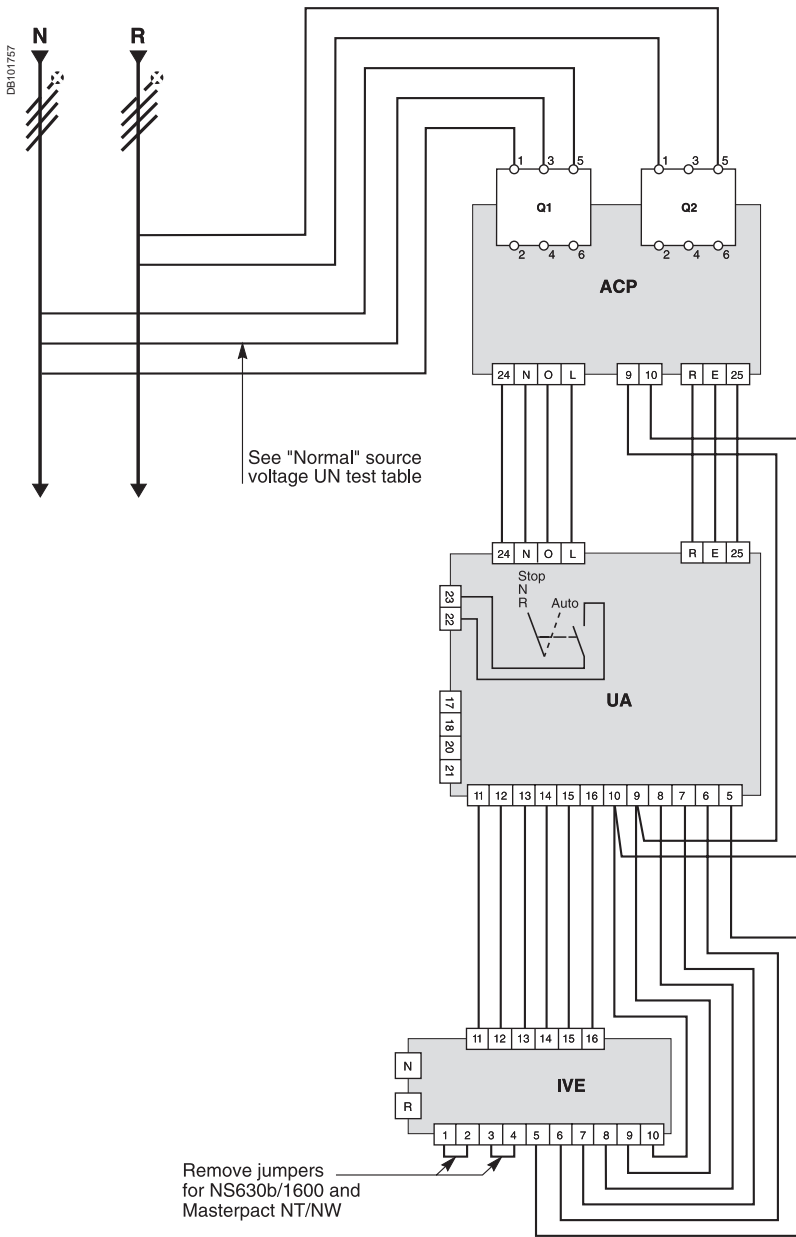

Load shedding and genset management

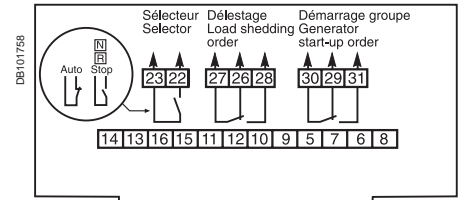

Transfer conditions

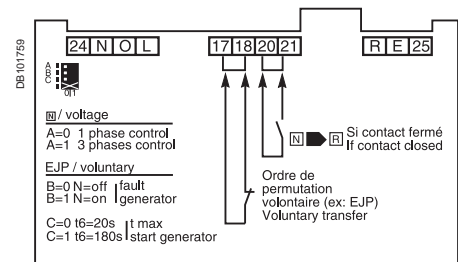

Terminals 20 and 21:

additional control contact (not part of controller).

Tests on "Normal" and "Replacement" source voltages

"Normal" source voltage UN test

Ref. UA	29472 29474	29472 29474	29473 29475
Supply voltage	N / φ 220/240VAC 50/60Hz	φ / φ 220/240VAC 50/60Hz	φ / φ 380/415VAC 50/60Hz 440V - 60Hz
Switch position			
A = 0			
A = 1			

"Replacement" source voltage UR test

The single-phase check for UR is implemented across terminals 1 and 5 of circuit breaker Q2.

Legends


- Q1** circuit breaker supplying and protecting the automatic-control circuits for the "Normal" source
- Q2** circuit breaker supplying and protecting the automatic-control circuits for the "Replacement" source
- ACP** control plate
- UA** automatic controller
- IVE** electrical interlocking and terminal block unit

Note:

diagram shown with circuits de-energised, circuit breakers open and relays in normal position.

Controller settings

Controller settings

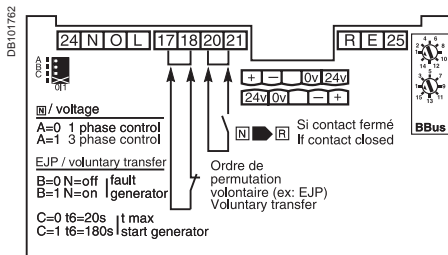

Tests on “Normal” source voltage


- A = 0 single-phase test,
- A = 1 three-phase test.

Voluntary transfert (e.g. for energy management)

- action in the event of genset failure
- B = 0 circuit breaker N opens,
- B = 1 circuit breaker N remains closed.
- maximum permissible genset startup time (T6)
- C = 0 T = 120 s,
- C = 1 T = 180 s.

After this time has elapsed, the genset is considered to have failed.

Using communication functions

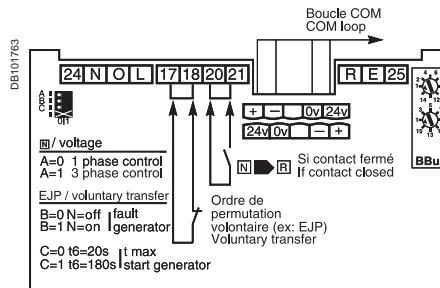


The address of the UA 150 controller is set using the two BBus dials.

Source-changeover systems with automatic controllers

2 Masterpact NT or NW devices

Diagram no. 51156903

Electrical interlocking with lockout after a fault

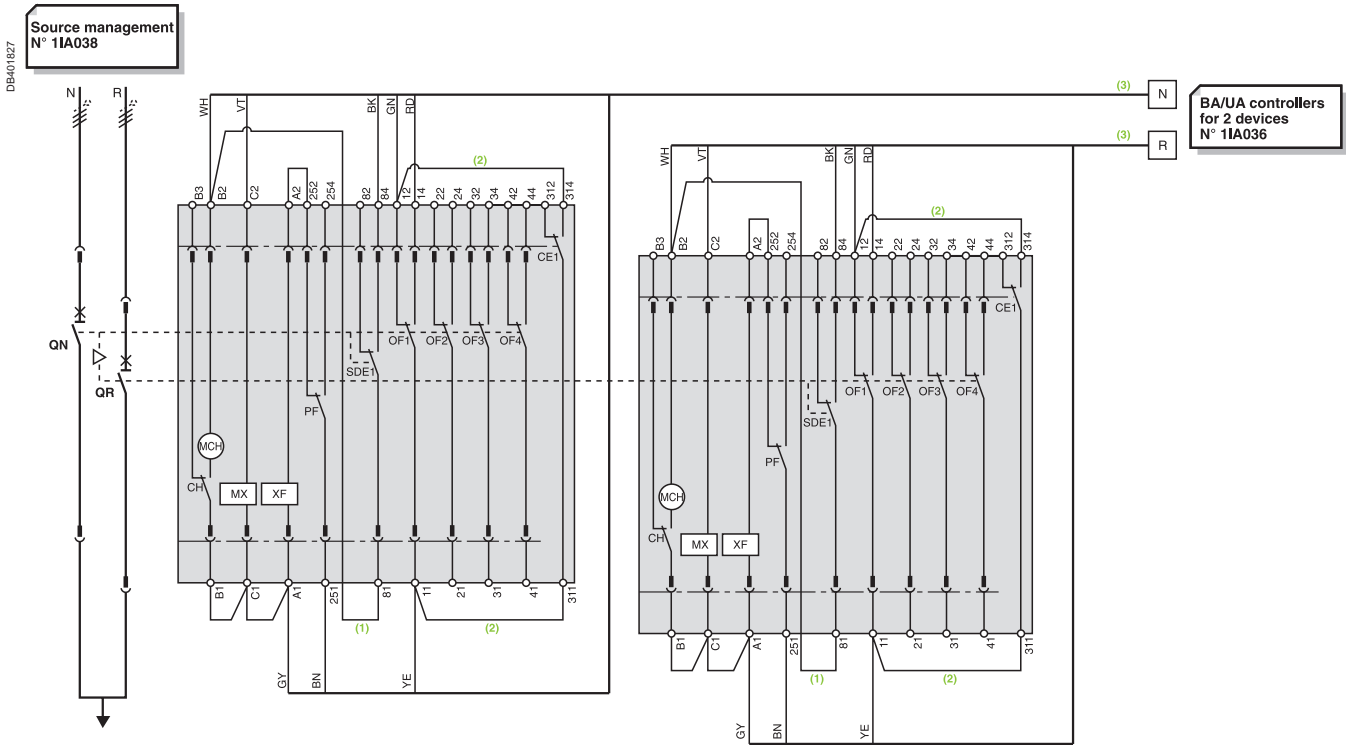

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE1 with **switch-disconnectors**, connect wire BK to terminal 82.

- (1) Not to be wired for the "without lockout after a fault" solution.
- (2) Not to be wired on fixed version.
- (3) Prefabricated wiring supplied.

Legends

- QN** "Normal" source Masterpact NT or NW
- QR** "Replacement" source Masterpact NT or NW
- MCH** spring-charging motor
- MX** standard opening voltage release
- XF** standard closing voltage release
- OF...** breaker ON/OFF indication contact
- SDE1** "fault-trip" indication contact
- PF** "ready-to-close" contact
- CE1** "connected-position" indication contact (carriage switch)
- CH** "springs charged" indication contact

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note:
 diagram shown with circuit breakers in connected position, open, charged, and ready to close.

<i>Presentation</i>	2
<i>Functions and characteristics</i>	A-1
<i>Dimensions</i>	B-1
<i>Electrical diagrams</i>	C-1
Source-changeover systems for 2 devices	D-2
Interpact INS40 to INS2500 and INV100 to INV2500	D-2
Compact NSX100 to NSX630	D-3
Compact NS630b to NS1600 circuit breakers and switch-disconnectors	D-5
Masterpact NT circuit breakers and switch-disconnectors	D-7
Source-changeover systems for 2 or 3 devices	D-8
Masterpact NW circuit breakers and switch-disconnectors	D-8
Order forms for source-changeover systems for 2 devices	D-10
Interpact INS40 to INS630 Switch-disconnectors	D-10
Compact NSX100 to NSX630 / Circuit breakers and switch-disconnectors	D-12
Compact NS630b to NS1600 / Circuit breakers and switch-disconnectors	D-14
Masterpact NT or NW / Circuit breakers and switch-disconnectors	D-16
Order forms for source-changeover systems for 3 devices	D-18
Masterpact NW / Circuit breakers and switch-disconnectors	D-18

Source-changeover systems for 2 devices

Interpact INS40 to INS2500
and INV100 to INV2500

Manual source-changeover systems Interpact INS40 to INS630 and INV100 to INV630

Interlocking for rotary handle

DB107710		Mechanical device for INS40 to INS160 equipped with an extended rotary handle	3/4P	28953
		Mechanical device for INS250-100 to INS250/INV100 to INV250 equipped with a direct or extended rotary handle		31073
DB404077		Mechanical device for INS/INV320 to INS/INV630 equipped with a direct or extended rotary handle		31074

Complete assembly source-changeover systems Interpact INS250 to INS630

DB404078		With Interpact INS250-100A	3P	4P
		With Interpact INS250-160A	31140	31141
		With Interpact INS250-200A	31144	31145
		With Interpact INS250-200A	31142	31143
		With Interpact INS250	31146	31147
		With Interpact INS320	31148	31149
		With Interpact INS400	31150	31151
		With Interpact INS500	31152	31153
With Interpact INS630	31154	31155		
Locking for INS complete source changeover assembly				
DB107711		Handle locking by 1 to 3 padlocks (in OFF position)		Built in
		By keylock	Keylocking device	31097
			+ Ronis 1351B.500 keylock	41940
		or + Profalux KS5 B24 D4Z keylock	42888	
Rotary handle				
DB404079		Extended front control for complete source changeover assembly		31055

Manual source-changeover systems Interpact INS250 to INS2500 and INV250 to INV2500 by keylock

Interlocking

DB101548		Locking device for Ronis/Profalux keylocks on INS250-100 to INS250/INV100 to INV250	2x	3/4P	31087
		Locking device for Ronis/Profalux keylocks on INS/INV320 to INS/INV630	2x		31088
DB404080		Locking device for Ronis/Profalux keylocks on INS/INV630b to INS/INV2500	2x		31291
		+ Ronis 1351B.500 keylock (2 keylocks / 1 key)			41950
		or + Profalux KS5 B24 D4Z keylock (2 keylocks / 1 key)			42878

Connection accessories



Downstream coupling accessories

DB101062		Short terminal shields	INS250 (1 pair)	3P	4P
			INS320 to INS630 (1 pair)	29322	29322
DB404082		"Normal" source / "replacement" source	INS250	29358	29359
			INS320 to INS630	32619	32620
DB403821		Long terminal shields	INS250 (1 pair)	29324	29324
			INS320 to INS630 (1 pair)	32583	32583


Compact NSX100 to NSX630

Manual source changeover

Mechanical interlocking


DB404083 	For toggle controlled circuit breakers	NSX100...250	29354
		NSX400...630	32614
DB404084 	For rotary handled circuit breakers	NSX100...250	29369
		NSX400...630	32621

Key lock interlocking


DB404085 	For rotary handled or remote controlled circuit breakers		
	2 locks, 1 key	Ronis 1351B.500	41950
		Profalux KS5 B24 D4Z	42878

Remote controlled source changeover

Plate + IVE unit

DB404086 	Source "normal"/source "replacement" (identical voltages)		24 to 250 V DC	48 to 415 V AC 50/60 Hz 440 V 60 Hz
	NSX100...250/NSX100...250			
	Plate + IVE unit ⁽¹⁾		29351	29350
	Plate		29349	29349
	IVE unit		29356	29352
	Auxiliary switches 2 OF + 2 SDE	4 x	29450	4 x 29450
	Spare wiring system (device/IVE unit)		29365	29365
	Back sockets option add:	Only long RC	⁽²⁾	⁽²⁾
	Plug in base option add:	Plug in kit	⁽²⁾	⁽²⁾
	NSX400...630/NSX100...630			
	Plate + IVE unit ⁽¹⁾		32611	32610
	Plate		32609	32609
	IVE unit		29356	29352
	Auxiliary switches 2 OF + 2 SDE	4 x	29450	4 x 29450
	Spare wiring system (device/IVE unit)		29365	29365
	Back sockets option add:	Only long RC	⁽²⁾	⁽²⁾
	Plug in base option add:	Plug in kit	⁽²⁾	⁽²⁾
		Adaptator kit for NSX100...250	1 x 32618	1 x 32618

Control unit option

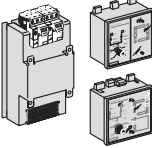DB404087 		110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	380/415 V AC 50/60 Hz 440 V 60 Hz
	ACP + controller BA ⁽¹⁾		29470	29471
	Plate ACP		29363	29364
	Controller BA		29376	29377
	ACP + controller UA ⁽¹⁾	29448	29472	29473
	Plate ACP	29447	29363	29364
	Controller UA	29446	29378	29380
	ACP + controller UA150 ⁽¹⁾ (communication option)		29474	29475
	Plate ACP		29363	29364
	Controller UA150		29379	29381

Wiring cable between BA/UA and ACP/IVE

Wiring cable (1 meter)	29368	29368
------------------------	-------	-------

Communication module




DB403922 	DC150 data concentrator	50823
	110-240 V AC / 115-125 V DC	

(1) The supply voltages BA/UA controller, ACP plate, IVE unit and the remote control must be identical whatever the source changeover type.

(2) See products pages.

Connection accessories


Downstream coupling accessories



		3P	4P
Short terminal shields (1 pair)	NSX100...250/NSX100...250	29321	29322
	NSX400...630/NSX400...630	32562	32563
Source "normal"/source "replacement"	NSX100...250/ 250 A	29358	29359
	NSX100...250		
	NSX400...630/ 630 A	32619	32620
Long terminal shields (1 pair)	NSX100...250/NSX100...250		29324
	NSX400...630/NSX400...630		32565

Typical composition of remote controlled source changeover


Remote controlled source changeover

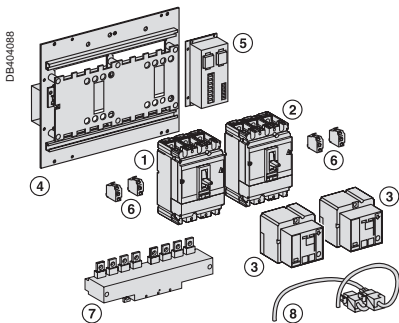

- 1 normal device N (1)
- + 1 replacement device R (2)
- + 2 remote controls (3)
- + 1 plate with interlocking (4) with IVE unit (5) and its wiring (8)
- + 2 plug-in kits (if plug-in version)
- + 1 adaptor kit for NSX100...250 plug-in (if NSX400...630 with NSX100...250)
- + auxiliary switches (6)
- 2 x (1 OF + 1 SDE) for Compact NSX100...630
- + 1 downstream coupling accessory (7) for Compact NSX100...630 (option)
- + long RC (if back connection)

IVE unit voltages and remote controls are identical.

Associated control unit

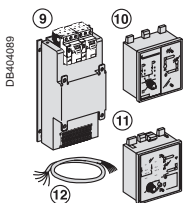


- 1 source changeover without associated control unit
- + 1 ACP (9) with BA controller (10)
- Or + 1 ACP (9) with UA controller (11)
- Or + 1 ACP (9) with UA150 controller (11)
- + extension (12) for remote UA/BA controller connection on front of switchboard

IVE unit voltages + remote control + ACP + BA or UA controller are identical.

Compact NS630b to NS1600 circuit breakers and switch-disconnectors

Interlocking for source-changeover systems


Mechanical interlocking

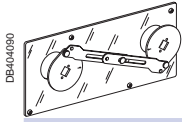

For 2 devices with extended rotary handles

33890

Interlocking using connecting rods for Compact electrically-operated devices

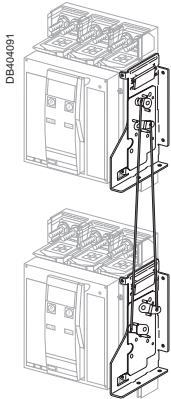

Complete assembly with 2 adaptation fixtures + rods


2 Compact fixed devices

33910

2 Compact withdrawable devices

33913

Interlocking using cables for Compact electrically-operated devices

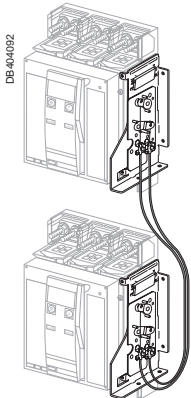

Complete assembly with 2 adaptation fixtures + cables

2 Compact fixed devices

33911

2 Compact withdrawable devices

33914

1 Compact fixed + 1 Compact withdrawable device

33915

Source-changeover systems for 2 devices

Compact NS630b to NS1600 circuit
breakers and switch-disconnectors (cont.)

Associated controller

The automatic-control option includes:

- an IVE electrical-interlocking unit
- an ACP control plate
- a BA or UA controller, depending on the required functions
- a UA/BA adapter kit.

Note: the circuit breaker auxiliaries (MCH, MX, XF) and the automatic-control components (IVE, ACP, UA or BA) must have the same voltages.

IVE electrical-interlocking unit


48/415 V AC 50/60 Hz
440 V 60 Hz

For 2 devices

Wiring kit for connection of 2 fixed/withdrawable devices to the IVE unit

29352

54655



Control unit option

110/127 V AC 50/60 Hz

220/240 V AC 50/60 Hz

380/415 V AC 50/60 Hz
440 V 60 Hz

ACP + controller BA ⁽¹⁾

Plate ACP

Controller BA

ACP + controller UA ⁽¹⁾

Plate ACP

Controller UA

ACP + controller UA150 ⁽¹⁾ (communication option)

Plate ACP

Controller UA150

29470

29363

29376

29448

29447

29446

29474

29363

29379

29471

29364

29377

29473


29364

29380

29475

29364


29381

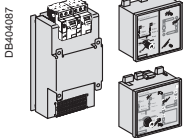

Communication module

DC150 data concentrator
110-240 V AC / 115-125 V DC

50823

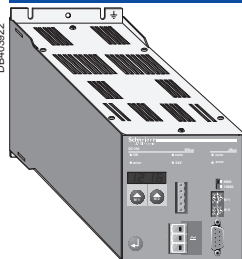


⁽¹⁾ The supply voltages of the BA/UA controller, ACP plate, IVE unit and circuit breaker operating mechanism must be identical whatever the type of source-changeover system.

Masterpact NT circuit breakers and switch-disconnectors

Interlocking for source-changeover systems

Interlocking using connecting rods

DB-404034	Complete assembly with 2 adaptation fixtures + rods		
	2 Masterpact NT fixed devices		33912
	2 Masterpact NT drawout devices		33913

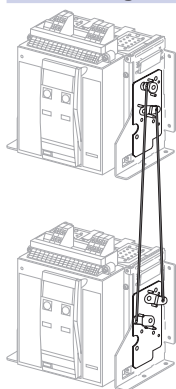

Interlocking using cables (*)

Choose 2 adaptation fixtures (1 for each breaker + 1 set of cables)		
1 adaptation fixture for Masterpact NT fixed devices		33200
1 adaptation fixture for Masterpact NT drawout devices		33201
1 set of 2 cables		33209

(*) Can be used with any combination of NT or NW, fixed or drawout devices.

Associated controller


The automatic-control option includes:

- an IVE electrical-interlocking unit
- an ACP control plate
- a BA or UA controller, depending on the required functions
- a UA/BA adapter kit.

Note: the circuit breaker auxiliaries (MCH, MX, XF) and the automatic-control components (IVE, ACP, UA or BA) must have the same voltages.


IVE electrical-interlocking unit

DB-404033		48/415 V AC 50/60 Hz
		440 V 60 Hz
	for 2 devices	29352
	wiring kit for connection of 2 fixed/drawout devices to the IVE unit	54655




Control unit option

	110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	380/415 V AC 50/60 Hz 440 V 60 Hz
DB-404037	ACP + controller BA (1)		
		29470	29471
	Plate ACP	29363	29364
	Controller BA		
	29376	29377	
DB-404037	ACP + controller UA (1)		
	29448	29472	29473
	Plate ACP	29447	29364
	Controller UA		
	29446	29378	29380
DB-403922	ACP + controller UA150 (1) (communication option)		
		29474	29475
	Plate ACP	29363	29364
	Controller UA150		
	29379	29381	

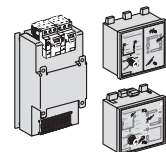

Communication module

DB-403922	DC150 data concentrator	50823
	110-240 V AC / 115-125 V DC	

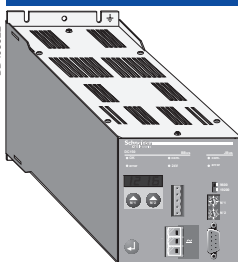


(1) The supply voltages of the BA/UA controller, ACP plate, IVE unit and circuit breaker operating mechanism must be identical whatever the type of source-changeover system.

Source-changeover systems for 2 or 3 devices

Masterpact NW circuit breakers and switch-disconnectors

Interlocking for source-changeover systems for 2 devices

Interlocking of 2 devices using connecting rods

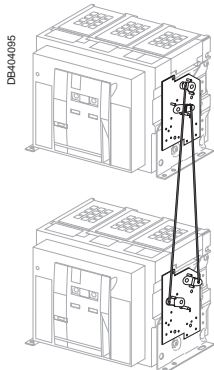

Complete assembly with 2 adaptation fixtures + rods

2 Masterpact NW fixed devices **48612**

2 Masterpact NW drawout devices **48612**

Can be used with 1 NW fixed + 1 NW drawout.

Interlocking of 2 devices using cables (*)

Choose 2 adaptation fixtures (1 for each breaker + 1 set of cables)

1 adaptation fixture for Masterpact NW fixed devices **47926**

1 adaptation fixture for Masterpact NW drawout devices **47926**

1 set of 2 cables **33209**

(*) *Can be used with any combination of NT or NW, fixed or drawout devices.*

Associated controller for 2 devices

The automatic-control option includes:

- an IVE electrical-interlocking unit
- an ACP control plate
- a BA or UA controller, depending on the required functions
- a UA/BA adapter kit.


Note: the circuit breaker auxiliaries (MCH, MX, XF) and the automatic-control components (IVE, ACP, UA or BA) must have the same voltages.

IVE electrical-interlocking unit


48/415 V AC 50/60 Hz
440 V 60 Hz

for 2 devices **29352**

wiring kit for connection of 2 fixed/drawout devices to the IVE unit **54655**




Control unit option

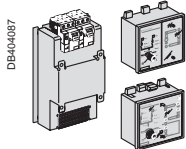

	110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	380/415 V AC 50/60 Hz 440 V 60 Hz
ACP + controller BA (1)		29470	29471
Plate ACP		29363	29364
Controller BA		29376	29377
ACP + controller UA (1)	29448	29472	29473
Plate ACP	29447	29363	29364
Controller UA	29446	29378	29380
ACP + controller UA150 (1) (communication option)		29474	29475
Plate ACP		29363	29364
Controller UA150		29379	29381

(1) *The supply voltages of the BA/UA controller, ACP plate, IVE unit and circuit breaker operating mechanism must be identical whatever the type of source-changeover system.*

Communication module

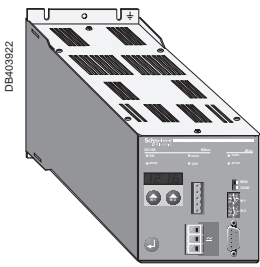

DC150 data concentrator
110-240 V AC / 115-125 V DC

50823

Interlocking for source-changeover systems for 3 devices

Interlocking of 3 devices using cables

Choose 3 adaptation fixtures (1 complete set with 3 adaptation fixtures + cables)

3 sources, only 1 device closed, fixed or drawout devices

48610

2 sources, 1 coupling, fixed or drawout devices

48609

2 normal, 1 replacement source, fixed or drawout devices

48608

Source-changeover systems for 2 devices

Interpact INS40 to INS630

Switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Mechanical interlocking of two INS40 to INS630 devices

Devices with front rotary handles, mounted side by side

	Two devices with direct rotary handles		
	INS250	<input type="checkbox"/>	INS320/400/500/630 <input type="checkbox"/>
	Two devices with extended rotary handles		
	INS40/63/80	<input type="checkbox"/>	INS100/125/160 <input type="checkbox"/>
	INS250	<input type="checkbox"/>	INS320/400/500/630 <input type="checkbox"/>
Downstream coupling accessory	INS250	<input type="checkbox"/>	INS320/400/500/630 <input type="checkbox"/>
Long terminal shields	INS250	<input type="checkbox"/>	INS320/400/500/630 <input type="checkbox"/>

Complete source-changeover assembly

	INS250-100 A	<input type="checkbox"/>	INS250-160 A	<input type="checkbox"/>
	INS250-200 A	<input type="checkbox"/>	INS250-250 A	<input type="checkbox"/>
	INS320	<input type="checkbox"/>	INS400	<input type="checkbox"/>
	INS500	<input type="checkbox"/>	INS630	<input type="checkbox"/>

Interpact INS40 to INS630 Switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

(one sheet per device, make copies if necessary)

Device identification:

Q 1 - NORMAL SOURCE

Q 2 - REPLACEMENT SOURCE

Switch-disconnector

Interpact type **INS40/63/80**

INS100/125/160

INS250

INS320/400/500/630

Rating **A**

Number of poles **3 or 4**

Connections

Front connection Standard

Rear connection 2 short 2 long

INS40/80 Distribution 3x16° rigid/10° flexible

INS100/160 Snap-on ≤ 95°

connectors Distribution 4x25° rigid/16° flexible

INS250 Snap-on 1.5° to 95° (< 160 A)

connectors Snap-on 10° to 185° (< 250 A)

Voltage tap connector for 185° connector

Clips for connectors Set of 10

Distribution 6x1.5° to 35° rigid with interphase barriers

INS320/630 1 cable 35° to 300°

connectors 2 cables 35° to 240°

Voltage tap connector for 185° connector

Distribution "Distribloc" 125 A 160 A

blocks Multi-stage 125 A 160 A

"Polybloc" 160 A 250 A

Rt-angle extension Set of 3 or 4 250 A 630 A

Straight extension INS250

Edgewise ext. INS630

Spreader INS250 (45 mm)

Front alignment base

INS320/630 52.5 mm 70 mm

One-piece INS250 INS630

CU cable lugs INS100/160 For 95° cable

supplied with INS250 For 120° cable

2 or 3 inter-phase For 150° cable

barriers For 185° cable

INS320/630 For 240° cable

For 300° cable

AL cable lugs INS250 For 150° cable

supplied with For 185° cable

2 or 3 inter-phase INS320/630 For 240° cable

barriers For 300° cable

Terminal shrouds INS40/63/80 INS100/125/160

Terminal shields INS40/63/80 INS100/125/160

INS250 Short Long

INS320/630 Short Long

Long for 52.5 mm spreaders

Interphase INS100/160 Set of 6

barriers INS250 Set of 6

INS320/630 Set of 6

Indication and measurements

4P ammeter module For INS250 Rating 100 A

150 A

250 A

Adaptation kit required for direct handles

For INS320/630 Rating 400 A

600 A

4P current-transformer module For INS250 Rating 100 A

150 A

250 A

For INS320/630 Rating 400 A

600 A

Auxiliary contact For INS40/160 1OF/CAF/CAO Standard

Low level

For INS250/630 1 OF/CAM Standard

Low level

Rotary handles

Extended front handles INS40 to INS160 Black Red on yellow front

INS250 Black Red on yellow front

INS320 to INS630 Black Red on yellow front

For complete changeover assembly INS250

INS320/630

Locking of rotary handles

Padlocking 1 to 3 padlocks (in OFF position)

Keylocking Keylock adapter (keylock not included)

Keylocks Ronis 1351B.500 Profalux KS5 B24 D4Z

Installation accessories

Front-panel escutcheon For switch-disconnectors

For ammeter module, IP40

Source-changeover systems for 2 devices

Compact NSX100 to NSX630 / Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Diagram for two Compact NSX devices

Without automatic control, without emergency off auxiliaries	(no. 51201177)	<input type="checkbox"/>
Without automatic control, with emergency off by MN	(no. 51201178)	<input type="checkbox"/>
Without automatic control, with emergency off by MX	(no. 51201179)	<input type="checkbox"/>

Mechanical interlocking of two NSX100 to NSX630 devices

(fixed, plug-in or withdrawable)

Manually operated devices, mounted side by side:

Two devices with toggles	<input type="checkbox"/>
Two devices with rotary handles	<input type="checkbox"/>

Mechanical and electrical interlocking of two NSX100 to NSX630 devices

(fixed or plug-in)

Electrically operated devices, mounted side by side:

Select 1 base plate + IVE unit, the 4 auxiliary contacts and the options / accessories

Base plate + IVE unit	Identical voltages:	48 to 415 V AC 50/60 Hz	
	24 to 250 V DC	<input type="checkbox"/>	440/480 V AC 60 Hz <input type="checkbox"/>
	"Normal" NSX100/250	<input type="checkbox"/>	"Replacement" NSX100/250 <input type="checkbox"/>
	"Normal" NSX400/630	<input type="checkbox"/>	"Replacement" NSX400/630 <input type="checkbox"/>
	"Normal" NSX400/630	<input type="checkbox"/>	"Replacement" NSX100/250 <input type="checkbox"/>
	Adapter kit for NSX400/630 with NSX100/250 (plug-in)		<input type="checkbox"/>
Auxiliary contacts	2 OF + 2 SDE (mandatory)	Quantity	<input type="text" value="4"/>
Options	Long rear connections <input type="checkbox"/>	Plug-in base	<input type="checkbox"/>
Downstream coupling accessory	3P <input type="checkbox"/>	NSX100/250	<input type="checkbox"/>
	4P <input type="checkbox"/>	NSX400/630	<input type="checkbox"/>
Prefabricated wiring	Between device and IVE	Quantity	<input type="text"/>

Automatic-control option

Power supply 220/240 V - 50/60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>
Power supply 380/415 V - 50/60 Hz and 440 V - 60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>

Compact NSX100 to NSX630 / Circuit breakers and switch-disconnectors

(One sheet per device, make copies if necessary)

Name of customer: _____
Address for delivery: _____
Requested delivery date: _____
Customer order no.: _____

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles

Q 1 - NORMAL SOURCE
Q 2 - SOURCE REPLACEMENT

Circuit breaker or switch disconnecter

Compact type **NSX100/160/250** **NSX400/630**

Rating **A**

Circuit breaker **B, F, N, H, S, L**

Switch-discon. **NA**

No. of poles **2, 3 or 4**

No. of poles protected **2d, 3d or 4d**

Fixed device Front connections

Plug-in/withdr. Plug-in Withdrawable

Earth-leakage protection **ME, MH, MB**

Vigi module Voltage V
 4P option on 3P NSX

Trip unit

Thermal-mag. **TMD** rating (16 ... 250 A)
TMG rating (16 ... 63 A)
MA rating (2,5 ... 220 A)

Electronic **Micrologic 2.2** **Micrologic 2.3**
Micrologic 2.2 G **Micrologic 2.3 AB**
Micrologic 2.2 AB **Micrologic 5.3 A**
Micrologic 5.2 A **Micrologic 5.3 E**
Micrologic 5.2 E **Micrologic 5.3 A-Z**
Micrologic 5.2 A-Z **Micrologic 6.3 A**
Micrologic 6.2 A **Micrologic 6.3 E**
Micrologic 6.2 E **Micrologic 1.3 M**
Micrologic 2.2 M **Micrologic 2.3 M**
Micrologic 6.2 E-M **Micrologic 6.3 E-M**
Module SDTAM

External neutral CT

24 V DC power supply connector

ZSI wiring accessory for NS630b NW/NT

External power supply module 24-30 V DC 48-60 V DC
 100-125 V AC 110-130 V AC
 24 V DC 200-240 V AC 380-415 V AC

Battery module

Connection

Rear-connection kit Short Long
 Mixed

NSX100/250 connectors Snap-on 1.5^o to 95^o (< 160 A)
 Snap-on 25^o to 95^o (< 250 A)
 Snap-on 120^o to 185^o (< 250 A)
 Distribution 6 x 1.5^o to 35^o
 Aluminium 2 cables 50^o to 120^o

NSX400/630 connectors 1 cable 35^o to 300^o
 2 cables 35^o to 240^o

Right-angle terminal extensions

Straight extensions **NSX100/250**

Edgewise extensions 45° term. ext. Dbl.-L term. ext.

Spreader NSX100/250 (one piece) (45 mm)
 NSX400/630 (52.5 mm) (70 mm)

Cu cable lugs NSX100/250 120^o 150^o 185^o
 NSX400/630 240^o 300^o

Al cable lugs NSX100/250 150^o 185^o
 NSX400/630 240^o 300^o

V mesrt Input for connector For lugs NSX100/250 ≤ 185^o
 For lugs NSX400/630

Terminal shields NSX100/250 Short Long
 NSX400/630 Short Long

Interphase barriers Lot de 6
 2 insulating scrn. NSX100/250 NSX400/630 Pas de 70

Test tool

Pocket battery for Micrologic

Maintenance case

USB maintenance interface

Power supply 110-240 V AC

Spare Micrologic cord

Indication and measurement

Ammeter module Standard 3P 4P
 I max 3P

Current-transformer module 3P 4P

Current-transformer module + TCU 3P 4P

Insulation-monitoring module 3P 4P

Voltage-presence indicator

Auxiliary contact OF SD SDE SDV Standard
 OF SD SDE SDV Low level

SDE adapter (TM, MA or Micrologic 2 trip units)

SDX module

Remote operation

Electrical operation Motor mechanism AC DC V
 Voltage releases Instantaneous MX AC DC V
 Instantaneous MN AC DC V
 Fixed time delay MN AC DC V
 Adjust. time delay MN AC DC V

Rotary handles

Direct Black Red and yellow front
 MCC conversion access. CNOMO conversion access.

Extended Black Red and yellow fron
 Telescopic handle for withdrawable device

Indication auxiliary 1 early-break switch 2 early-make switches

Locking

Toggle (1 to 3 padlocks) Removable Fixed

Rotary handle Keylock adapter (keylock not included)
 Keylocks Ronis 1351B.500 Profalux KS5 B24 D4Z

Motor mechanism Keylock adapter + keylock Ronis (special) NSX100/250
 Keylock adapter (keylock not included) NSX400/630
 Keylocks Ronis 1351B.500 Profalux KS5 B24 D4Z

Interlocking

Mechanical Toggle operated Rotary Handle

By key (2 keylocks, Locking kit without locks
 1 key) for rotary handle Keylocks Ronis 1351B.500 Profalux KS5 B24 D4Z

Installation accessories

IP30 escutcheon for all types (toggle/rotary handle/motor mechanism)

IP30 escutcheon (with access to toggle + trip unit)

IP30 escutcheon for Vigi module

IP40 escutcheon for all types (toggle/rotary handle/motor mechanism)

IP40 escutcheon for Vigi module

IP40 escutcheon for Vigi or ammeter module

Toggle cover

Sealing accessories

DIN rail adapter

3P 60 mm busbar adapter

Plug-in / withdrawable configuration accessories

Auxiliary connections 1 automatic connector fixed part with 9 wires (for base)
 1 automatic connector moving part with 9 wires (for circuit breaker)
 1 sup. for 3 auto. conn. moving parts 1 sup. for 2 auto. conn.
 9-wire manual auxiliary connector (fixed + moving)

Plug-in base accessories Long insulated terminals Set of 2
 2 IP4 shutters for base

Chassis accessories Escutcheon collar Toggle Vigi
 Locking kit (keylock not included)
 2 carriage switches (conn./disconnected position indication)

Parts or plug-in Plug-in base FC/RC 2P 3P 4P

Withdrawable kits Set of two power connections Standard Vigi
 Safety trip for advanced opening

For 3P/4P chassis Moving part
 Fixed part

Adaptateur pour socle (pour cache-bornes ou séparateurs de phases)

Communication

NSX Cord L = 0.35 m NSX Cord L = 1.3 m
 NSX Cord U > 480 V CAL = 0.35 m NSX Cord L = 3 m

BSCM (NSX400/630)

Communicating motor mechanism 220-240V

Switchboard front display module FDM121

FDM mounting accessory

Modbus interface

Stacking accessory

ULP line termination

RJ45 connectors Wire length RJ45 L = 0.3 m Wire length RJ45 L = 0.6 m
 female/female Wire length RJ45 L = 1 m Wire length RJ45 L = 2 m
 Wire length RJ45 L = 3 m Wire length RJ45 L = 5 m

Source-changeover systems for 2 devices

Compact NS630b to NS1600 / Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Diagram for two Compact NS devices

Electrical interlocking with lockout after fault:

Permanent replacement source (without IVE unit)	(no. 51201180)	<input type="checkbox"/>
With emergency off by MX (without IVE unit)	(no. 51201181)	<input type="checkbox"/>
With emergency off by MN (without IVE unit)	(no. 51201182)	<input type="checkbox"/>
Permanent replacement source (with IVE unit)	(no. 51201183)	<input type="checkbox"/>
With emergency off by MX (with IVE unit)	(no. 51201184)	<input type="checkbox"/>
With emergency off by MN (with IVE unit)	(no. 51201185)	<input type="checkbox"/>

Automatic control without lockout after fault:

Permanent replacement source (without IVE unit)	(no. 51201186)	<input type="checkbox"/>
Engine generator set (without IVE unit)	(no. 51201187)	<input type="checkbox"/>

Interlocking using connecting rods between two NS630b to NS1600 devices

Manually operated devices installed side-by-side:

For two fixed NS devices with extended rotary handles

Electrically operated devices installed one above the other:

Select a complete set including two adaptation fixtures and the connecting rods

Complete set for:	2 fixed NS devices	<input type="checkbox"/>
	2 withdrawable NS devices	<input type="checkbox"/>

Interlocking using cables between two NS630b to NS1600 devices

Electrically operated devices installed one above the other or side-by-side:

Select a complete set including two adaptation fixtures and the cables

Complete set for:	2 fixed NS devices	<input type="checkbox"/>
	2 withdrawable NS devices	<input type="checkbox"/>
	1 fixed NS device + 1 withdrawable NS device	<input type="checkbox"/>

Electrical interlocking between two NS630b to NS1600 devices

1 IVE unit 48/415 V - 50/60 Hz and 440 V - 60 Hz

1 wiring kit for connection between 2 fixed / withdrawable devices to the IVE unit

Automatic-control option

Power supply 110 V - 50/60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>
Power supply 220/240 V - 50/60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>
Power supply 380/415 V - 50/60 Hz and 440 V - 60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>

Compact NS630b to NS1600 / Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

(one sheet per device, make copies if necessary)

Device identification:

Q 1 - NORMAL SOURCE

Q 2 - REPLACEMENT SOURCE

Circuit breaker or switch-disconnector

Compact type	NS630b to NS1600	<input type="checkbox"/>
Rating	A	<input type="checkbox"/>
Circuit breaker	N, H, L	<input type="checkbox"/>
Switch-disconnector	NA	<input type="checkbox"/>
Number of poles	3 or 4	<input type="checkbox"/>
Device	Fixed	<input type="checkbox"/>
	Withdr. chassis	<input type="checkbox"/>
	Withdr. without chassis (moving part only)	<input type="checkbox"/>

Chassis alone without connections

Micrologic control unit

Basic protection 2.0 5.0

A - ammeter

2.0 5.0 6.0 7.0

AD - external power-supply module V

TCE - external sensor (CT) for neutral protection

Rectangular sensor 280 x 115 mm

TCW - external sensor for SGR protection

LR - long-time rating plug Standard 0.4 to 1 Ir

Low setting 0.4 to 0.8 Ir

High setting 0.8 to 1 Ir

LT OFF

Communication

COM module Jbus/ Manual operation

Modbus Electrical operation

Digipact Manual operation

Electrical operation

Modbus Eco COM module

(for switchboard display units)

Connections

Horizontal rear connections Top Bottom

Vertical rear connections Top Bottom

Front connections Top Bottom

4x240° bare cable connectors + shields NS - FC fixed

Long connection shields NS - FC fixed

Vertical-connection adapters NS - FC fixed, withdr.

Cable-lug adapters NS - FC fixed, withdr.

Arc chute screen NS - FC fixed

Interphase barriers NS - FC fixed, withdr.

Spreaders NS - FC fixed, withdr.

VO - safety shutters on chassis NS - FC fixed

Indication contacts

SD trip indication (maximum 1) 6 A-240 V AC Low level

SDE fault-trip indication (maximum 1) (SDE integrated in electrically operated devices) 6 A-240 V AC Low level

OF ON/OFF indication contacts (maximum 3) 6 A-240 V AC qty Low level qty

Carriage switches (possible combinations: 3 CE, 2 CD, 1 CT)

CE - "connected" position 6 A-240 V AC qty Low level qty

CD - "disconnected" position 6 A-240 V AC qty Low level qty

CT - "test" position 6 A-240 V AC qty Low level qty

Auxiliary terminals for chassis alone Jumpers (set of 10)

3-wire terminal (30 parts) 6-wire terminal (10 parts)

Remote operation

Electrical operation Standard Communicating

Power supply AC DC V

Voltage releases MX AC DC V

MN AC DC V

MN delay unit Adjustable Non-adjustable

Rotary handles for fixed and withdrawable device

Direct Black Red on yellow front

CNOMO conversion access.

Extended Black Red on yellow front

Telescopic handle for withdrawable device

Indication auxiliary 6 A-240 V AC 2 early-make switches

2 early-break switches

Locking

Toggle (1 to 3 padlocks) Removable system Fixed system

Rotary handle using OFF position ON and OFF positions

a keylock Ronis 1351B.500 Profalux KS5 B24 D4Z

Keylock kit (without keylock)

For electrically operated devices VBP - ON/OFF pushbutton locking

OFF position locking: VCPO - by padlocks

VSPO - by keylocks

Keylock kit (w/o keylock) Profalux Ronis

1 keylock Profalux Ronis

2 identical keylocks, 1 key Profalux Ronis

Chassis locking in "disconnected" position: VSPD - by keylocks Keylock kit (w/o keylock) Profalux Ronis

Kirk Castell

1 keylock Profalux Ronis

2 identical keylocks, 1 key Profalux Ronis

2 keylocks, different keys Profalux Ronis

Optional connected/disconnected/test position locking

VPEC - door interlock On right-hand side of chassis

On left-hand side of chassis

VPOC - racking interlock

VDC - mismatch protection

Accessories

CDM - mechanical operation counter

CDP - escutcheon

CP - transparent cover for escutcheon

OP - blanking plate for escutcheon

Mounting brackets for fixed NS for mounting on horizontal plane

Test kits Mini test kit Portable test kit

Source-changeover systems for 2 devices

Masterpact NT or NW / Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Diagram for 2 Masterpact NT/NW devices

Electrical interlocking with lockout after fault:

Permanent replacement source (without IVE unit)	(no. 51201139)	<input type="checkbox"/>
With emergency off by MX (without IVE unit)	(no. 51201140)	<input type="checkbox"/>
With emergency off by MN (without IVE unit)	(no. 51201141)	<input type="checkbox"/>
Permanent replacement source (with IVE unit)	(no. 51201142)	<input type="checkbox"/>
With emergency off by MX (with IVE unit)	(no. 51201143)	<input type="checkbox"/>
With emergency off by MN (with IVE unit)	(no. 51201144)	<input type="checkbox"/>

Automatic control without lockout after fault:

Permanent replacement source (without IVE unit)	(no. 51156226)	<input type="checkbox"/>
Engine generator set (without IVE unit)	(no. 51156227)	<input type="checkbox"/>

Automatic control with lockout after fault:

Permanent replacement source (with IVE unit)	(no. 51156904)	<input type="checkbox"/>
Engine generator set (with IVE unit)	(no. 51156905)	<input type="checkbox"/>

BA/UA controller (with IVE unit)	(no. 51156903)	<input type="checkbox"/>
----------------------------------	----------------	--------------------------

Interlocking using connecting rods (NT/NW devices one above the other)

Select a complete set including two adaptation fixtures and the connecting rods

Complete set for:	2 drawout NT devices	<input type="checkbox"/>	2 fixed NT devices	<input type="checkbox"/>
	2 drawout NW devices	<input type="checkbox"/>	2 fixed NW devices	<input type="checkbox"/>
	1 fixed NT device + 1 fixed NW devices			<input type="checkbox"/>
	1 drawout NT device + 1 drawout NW device			<input type="checkbox"/>

Interlocking using cables (NT/NW devices one above the other or side-by-side)

Select two adaptation fixtures (one for each device) and a set of two cables

Adaptation fixture for:	1 fixed NT device	qty	<input type="text"/>
(NT/NW fixed and drawout devices may be mixed)	1 drawout NT device	qty	<input type="text"/>
	1 fixed NW device	qty	<input type="text"/>
	1 drawout NW device	qty	<input type="text"/>
	1 set of 2 cables (for two devices)		<input type="checkbox"/>

Electrical interlocking 2 Masterpact NT/NW devices

1 IVE unit 48/415 V - 50/60 Hz and 440 V - 60 Hz	<input type="checkbox"/>
1 wiring kit for connection between 2 fixed / withdrawable devices to the IVE unit	<input type="checkbox"/>

Automatic-control option

Power supply 220/240 V - 50/60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>
Power supply 380/415 V - 50/60 Hz and 440 V - 60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>

Masterpact NT or NW / Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

(one sheet per device, make copies if necessary)

Device identification:

Q 1 - NORMAL SOURCE

Q 2 - REPLACEMENT SOURCE

Circuit breaker or switch-disconnector

Masterpact type **NT** **NW**

Rating **A**

Sensor rating **A**

Circuit breaker **N1, H1, H2, H3, L1**

Switch-disconnector **NA, HA, HF, ES, HA10 (NW)**

Number of poles **3 or 4**

Option: neutral on right side

Device **Fixed**

Withdr. chassis

Withdr. without chassis (moving part only)

Chassis alone without connections

Micrologic control unit

A - ammeter

2.0 **5.0** **6.0** **7.0**

P - power meter **5.0** **6.0** **7.0**

H - harmonic meter **5.0** **6.0** **7.0**

AD - external power-supply module **V**

TCE - external sensor (CT) for neutral protection

Rectangular sensor **NT (280 x 115 mm)**

for earth-leakage protection **NW (470 x 160 mm)**

LR - long-time rating plug **Standard 0.4 to 1 Ir**

Low setting 0.4 to 0.8 Ir

High setting 0.8 to 1 Ir

LT OFF

PTE - external voltage measurement input (required for reverse supply)

BAT - battery module

Communication

Eco COM module **Modbus**

(for switchboard display units)

Connections

Horizontal **Top** **Bottom**

Vertical **Top** **Bottom**

Front **Top** **Bottom**

Vertical-connection adapters **NT - FC fixed, draw.**

Cable-lug adapters **NT - FC fixed, draw.**

Arc chute screen **NT - FC fixed**

Interphase barriers **NT, NW fixed, draw.**

Spreaders **NT fixed, drawout**

Disconnectable front connection adapter **NW fixed**

Lugs for 240² or 300² cables **NT fixed, draw.**

VO - safety shutters on chassis **NT, NW**

VIVC - shutter position indication and locking **NW**

Indication contacts

OF - ON/OFF indication contacts

Standard 4 OF 6 A-240 V AC (10 A-240 V AC and low-level for NW)

Additional 1 block of 4 OF for NW max. 2 qty

EF - combined "connected/closed" contacts

1 EF 6 A-240 V AC for NW max. 8 qty

1 EF low-level for NW max. 8 qty

SDE - "fault-trip" indication contact

Standard 1 SDE 6 A-240 V AC

Additional 1 SDE 6 A-240 V AC 1 SDE Low level

Programmable contacts 2 M2C contacts 6 M6C contacts

Carriage switches 6 A-240 V AC Low level

CE - "connected" position max. 3 for NW / NT qty

CD - "disconnected" position max. 3 for NW, 2 for NT qty

CT - "test" position max. 3 for NW, 1 for NT qty

AC - NW actuator for 6 CE - 3 CD - 0 CT additional carriage switches qty

Remote operation

Remote ON/OFF **MCH - gear motor**

XF - closing voltage release

MX - opening voltage release

PF - "ready to close" contact Low level

6 A-240 V AC

BPFE - electrical closing pushbutton

Res - electrical reset option

RAR - automatic reset option

Remote tripping

MN - undervoltage release

R - delay unit (non-adjustable)

Rr - adjustable delay unit

2nd MX - shunt release

Locking

VBP - ON/OFF pushbutton locking (by transparent cover + padlocks)

OFF position locking:

VCPO - by padlocks

VSPO - by keylocks Keylock kit (w/o keylock) Profalux Ronis

Kirk Castell

1 keylock Profalux Ronis

2 identical keylocks, 1 key Profalux Ronis

2 keylocks, different keys (NW) Profalux Ronis

Chassis locking in "disconnected" position:

VSPD - by keylocks Keylock kit (w/o keylock) Profalux Ronis

Kirk Castell

1 keylock Profalux Ronis

2 identical keylocks, 1 key Profalux Ronis

2 keylocks, different keys Profalux Ronis

Optional connected/disconnected/test position locking

VPEC - door interlock On right-hand side of chassis

On left-hand side of chassis

VPOC - racking interlock

IPA - cable-type door interlock

IBPO - racking interlock between crank and OFF pushbutton for NW

DAE - automatic spring discharge before breaker removal for NW

VDC - mismatch protection

Accessories

CDM - mechanical operation counter

CB - auxiliary terminal shield for chassis

CDP - escutcheon

CP - transparent cover for escutcheon

OP - blanking plate for escutcheon

Brackets for mounting NW fixed on backplates

Test kits Mini test kit Portable test kit

Source-changeover systems for 3 devices

Masterpact NW / Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Diagram for 3 Masterpact NW devices

2 "Normal" sources + 1 "Replacement" source:

- | | | |
|---|----------------|--------------------------|
| Electrical interlocking without lockout after fault | (no. 51156906) | <input type="checkbox"/> |
| Electrical interlocking with lockout after fault | (no. 51156907) | <input type="checkbox"/> |

2 "Normal" sources + 1 "Replacement" source with source selection:

- | | | |
|---|----------------|--------------------------|
| Automatic control w/ engine generator set w/o lockout after fault | (no. 51156908) | <input type="checkbox"/> |
| Automatic control w/ engine generator set w/ lockout after fault | (no. 51156909) | <input type="checkbox"/> |

3 sources, only 1 device ON:

- | | | |
|---|----------------|--------------------------|
| Electrical interlocking without lockout after fault | (no. 51156910) | <input type="checkbox"/> |
| Electrical interlocking with lockout after fault | (no. 51156911) | <input type="checkbox"/> |

2 "Normal" sources + 1 coupling:

- | | | |
|---|----------------|--------------------------|
| Electrical interlocking without lockout after fault | (no. 51156912) | <input type="checkbox"/> |
| Electrical interlocking with lockout after fault | (no. 51156913) | <input type="checkbox"/> |
| Automatic control with lockout after fault: | (no. 51156914) | <input type="checkbox"/> |

Interlocking using cables (NW devices one above the other or side-by-side)

Select a complete set including three adaptation fixtures and the cables

- | | | |
|---------------------|--|--------------------------|
| 1 complete set for: | 3 sources / 1 device ON, fixed or drawout | <input type="checkbox"/> |
| | 2 sources + 1 coupling, fixed or drawout | <input type="checkbox"/> |
| | 2 sources + 1 replacement source, fixed or drawout | <input type="checkbox"/> |

Masterpact NW / Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

(one sheet per device, make copies if necessary)

Device identification:

Q 1 - NORMAL SOURCE

Q 2 - REPLACEMENT SOURCE

Circuit breaker or switch-disconnector

Masterpact type **NW**

Rating **A**

Sensor rating **A**

Circuit breaker **N1, H1, H2, H3, L1**

Switch-disconnector **NA, HA, HF**

Number of poles **3 or 4**

Option: neutral on right side

Device

Fixed

Drawout with chassis

Drawout without chassis

(moving part only)

Chassis alone without connections

Micrologic control unit

A - ammeter

2.0 5.0 6.0 7.0

P - power meter 5.0 6.0 7.0

H - harmonic meter 5.0 6.0 7.0

AD - external power-supply module **V**

TCE - external sensor (CT) for neutral protection

Rectangular sensor 470 x 160 mm

for earth-leakage protection

TCW - external sensor for SGR protection

LR - long-time rating plug

Standard 0.4 to 1 Ir

Low setting 0.4 to 0.8 Ir

High setting 0.8 to 1 Ir

LT OFF

PTE - external voltage measurement input (required for reverse supply)

BAT - battery module

Communication

Eco COM module Modbus

(for switchboard display units)

Connections

Horizontal Top Bottom

Vertical Top Bottom

Front Top Bottom

Interphase barriers Fixed, drawout

Disconnectable front connection adapter Fixed

VO - safety shutters on chassis

VIVC - shutter position indication and locking

Indication contacts

OF - ON/OFF indication contacts

Standard 4 OF 6 A-240 V AC (10 A-240 V AC and low-level)

Additional 1 block of 4 OF max. 2 qty

EF - combined "connected/closed" contacts

1 EF 6 A-240 V AC max. 8 qty

1 EF low-level max. 8 qty

SDE - "fault-trip" indication contact

Standard 1 SDE 6 A-240 V AC

Additional 1 SDE 6 A-240 V AC 1 SDE Low level

Programmable contacts

2 M2C contacts 6 M6C contacts

Carriage switches 6 A-240 V AC Low level

CE - "connected" position max. 3 qty

CD - "disconnected" position max. 3 qty

CT - "test" position max. 3 qty

AC - NW actuator for 6 CE - 3 CD - 0 CT additional carriage switches

qty

Remote operation

Remote ON/OFF **MCH - gear motor** **V**

XF - closing voltage release **V**

MX - opening voltage release **V**

PF - "ready to close" contact Low level

6 A-240 V AC

BPFE - electrical closing pushbutton

Res - electrical reset option **V**

RAR - automatic reset option

Remote tripping

MN - undervoltage release **V**

R - delay unit (non-adjustable)

Rr - adjustable delay unit

2^{eme} MX - shunt release **V**

Locking

VBP - ON/OFF pushbutton locking (by transparent cover + padlocks)

OFF position locking:

VCPO - by padlocks

VSPO - by keylocks Keylock kit (w/o keylock) Profalux Ronis

Kirk Castell

1 keylock Profalux Ronis

2 identical keylocks, 1 key Profalux Ronis

2 keylocks, different keys (NW) Profalux Ronis

Chassis locking in "disconnected" position:

VSPD - by keylocks Keylock kit (w/o keylock) Profalux Ronis

Kirk Castell

1 keylock Profalux Ronis

2 identical keylocks, 1 key Profalux Ronis

2 keylocks, different keys Profalux Ronis

Optional connected/disconnected/test position locking

VPEC - door interlock

On right-hand side of chassis

On left-hand side of chassis

VPOC - racking interlock

IPA - cable-type door interlock

IBPO - racking interlock between crank and OFF pushbutton for NW

DAE - automatic spring discharge before breaker removal for NW

VDC - mismatch protection

Accessories

CDM - mechanical operation counter

CB - auxiliary terminal shield for chassis

CDP - escutcheon

CP - transparent cover for escutcheon

OP - blanking plate for escutcheon

Brackets for mounting NW fixed on backplates

Test kits Mini test kit Portable test kit

Schneider Electric Industries SAS

35, rue Joseph Monier
CS 30323
92506 Rueil Malmaison Cedex
France

RCS Nanterre 954 503 439
Capital social 896 313 776 €
www.schneider-electric.com

As standards, specifications and designs change from time to time, please ask for confirmation of the information given in this publication.



This document has been printed on ecological paper

Design: Schneider Electric
Photos: Schneider Electric
Edition: Altavia Connexion - made in France

