Autonics TCD210005AA

Safety Non-contact **Door Switch**



SFN Series

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- · Vertical/Horizontal installation supported
- · Available to install at back-forth, up-down, right-left moving door
- Connectible maximum 30 units to one controller
- Easy notification of operation status with an operation indicator (ON: green, OFF: red)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ▲ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety **equipment, crime/disaster prevention devices, etc.)**Failure to follow this instruction may result in personal injury, economic loss or fire.
- System manager means followings;
 a personnel who is fully aware of installation, setting, operation, and maintenance of the product
 - a personnel who well observes standard/regulation/statute on the product by type of machine the product installed in and nation/region the product used in Machine user means a personnel who is appropriately trained about using machine by the system manager, so that machine user can operate the machine correctly. System manager has duty to train the machine user about operation of the product. Machine user has to report directly to the system manager when unusual status has been found while system is operating.
 Failure to follow this instruction may result in personal injury, economic loss or fire.

- 03. The product has to be installed, set, and combined with machine control system by the qualified system manager.

 Failure to follow this instruction may result in personal injury due to unintended operation
 - and unstable detection
- 04. Before using the product, check that function of the product operates as intended while machine is turned off after installation.
 Failure to follow this instruction may result in personal injury due to unintended operation
 - and unstable detection
- 05. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, salinity, moisture, or **steam, or dust may be present.**Failure to follow this instruction may result in explosion or fire.
- 06. Do not disassemble or modify the unit.
 - Failure to follow this instruction may result in personal injury or fire due to loss of safety
- 07. Do not defeat, tamper, modify, or bypass the switch and enter the door. Failure to follow this instruction may result in personal injury.
- **08.** Check whether machine is stopped or not when the door is opened. Failure to follow this instruction may result in personal injury.
- Check the installed status of the switch, operating status of the switch, and signs of damage, modification, tampering of the switch at the following situation and on a
 - when operating the safety system at first
 - when replacing component of the system
- when the system has not been operated for a long time Failure to follow this instruction may result in personal injury due to malfunction of the product and safety function.

 10. Do not connect, repair, inspect, or replace the unit while connected to a power
- Failure to follow this instruction may result in fire.
- 11. Check 'Connections' before wiring.
- Failure to follow this instruction may result in fire.

 12. Keep away from high voltage lines or power lines to prevent surge and inductive
 - noise, and make cable as short as possible. In case installing power line and input signal line closely, use line filter or varistor at
 - power line and shielded wire at input signal line. Do not use near the equipment which generates strong magnetic force or high
 - Failure to follow this instruction may result in personal injury due to malfunction of the product and safety function.



riangle $extbf{Caution}$ Failure to follow instructions may result in injury or product damage

01. Use the unit within the rated specifications.

Failure to follow this instruction may result in fire or product damage

- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire
- 03. Make cable as short as possible, and keep the length of the cable within 100m when extent the length of the cable.

Failure to follow this instruction may result in malfunction of the product and safety function

04. When wiring two or more products in series, keep the total length of the cable within

Failure to follow this instruction may result in malfunction of the safety function due to

- 05. When installing two or more product adjacently, give at least 26mm interval. Failure to follow this instruction may result in malfunction due to mutual interference
- 06. Do not install the switch and actuator on the magnetic object. Use bolt and nut of stainless steel or non-magnetic material, when installing the switch and actuator.

Failure to follow this instruction may result in malfunction or affect sensing distance.

77. Do not use the switch as a guard door stopper. Install separate mechanical stopper.

Failure to follow this instruction may result in product damage.

Cautions during Use


- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Use the switch with the dedicated actuator and controller. Do not use the switch with another actuator or controller randomly.
 The switch is cannot be used without the controller (SFC-N322).

- · Power supply should be insulated and limited voltage/current or Class 2, SELV power supply
- When using switching mode power supply to supply the power, ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise.

 This unit may be used in the following environments.
- Indoors (UL Type 1 Enclosure) Altitude max. 2,000 m
- Pollution degree 3
- Installation category II

Cautions during Installation

- Install the unit correctly with the usage environment, location, and the designated specifications
- When installing the product, tightening the screw of M4 \times 20 mm with the tightening torque of
- Installing more than 2 non-contact door switches closely may result in malfunction due to mutual interference.
- Do not impact on the switch and excessively bend the cables.
- Install the switch to the sensing surface of the switch and the actuator be exactly parallel.

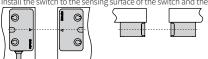


Install the switch to the direction as below with the consideration of moving directions of the actuator



Install the switch and actuator with a gap of minimum 1mm between them.

• Install the switch at the adjoining wall of the guard door and the actuator at guard door.

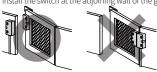

Ordering Information

This is only for reference.

For selecting the specified model, follow the Autonics website.

SFN 0 М

Cable

020: cable type (2 m) 050: cable type (5 m)

W: cable connector type

Product Components

• Product • Instruction manual

Sold Separately

- Connector cable: C1D5-□, CID5-□, CID5-□P
- Branch connector: CCD5-SFN, CYD5-SFN
- · Loop connector: CND5-SFN
- Safety controller non-contact door switch unit: SFC-N322

Specifications

Model		SFN-M-□
Operating	OFF→ON	≥ 5 mm
distance ⁽¹⁾	ON→OFF	≤ 15 mm
Approval		C € (10) is usino morages (S)
Unit weight (packaged)		Cable type (2 m): ≈ 100.5 g (≈ 113.8 g) Cable type (5 m): ≈ 199.5 g (≈ 214.8 g) Cable connector type: ≈ 58.1 g (≈ 71.6 g)

01) It is rated at 23°C of ambient temperature, and it may be differed up to \pm 20 % by ambient temperature

Power supply	24 VDC== (± 10 %)			
Operating frequency	100 Hz			
Power consumption 01)	≤ 400 mA			
Auxiliary output	PNP open collector output - 24 VDC, 10 mA			
Operation indicator	ON: green, OFF: red			
Life expectancy	≥ 20,000,000 times (with low load)			
Insulation resistance	≥ 50 MΩ (500 VDC== megger)			
Protection circuit	Surge protection circuit, output short over current protection circuit, reverse polarity protection circuit			
Dielectric strength	1,500 VAC ~ 50/60Hz for 1 minute			
Vibration	1.0 mm amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 2 hours			
Vibration (malfunction)	1.0 mm amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 10 min			
Shock	300 m/s² (≈ 30 G) in each X, Y, Z direction for 3 times			
Shock (malfunction)	300m/s² (≈ 30G) in each X, Y, Z direction in output ON/OFF status for 3 times			
Ambient temperature	-10 to 55 °C, storage: -20 to 60 °C (no freezing or condensation)			
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)			
Protection structure	IP67 (IEC standard)			
Connection	Cable type / cable connector type model			
Cable	Ø 5 mm, 5-wire, cable type: 2 m / 5 m, cable connector type: 0.3 m			
Wire	AWG26 (0.08 mm), 28-core, core diameter: Ø 0.74 mm			
Connector spec.	M12 plug connector			
Material	Body/CAP: PC			

01) Power to the load is not included.

Characteristic level / Safety category (with SFC-N322)	IEC 61508 SIL 3 IEC 62061 SIL CL 3 ISO 13849-1 PLe Cat.4 - HFT = 1 - Diagnostic Coverage: 99 % (high) - MTTFd = 100 year (high) - Mission time = 20 year - PFH = 3.88E-09

Safety status in case of error: the switch does not have an internal error recognition function, so it cannot maintain a

Error recognition is processed in the connected controller (SFC-N322).

Operation Distance

- Operating distance represents the distance between the sensing surface of switch and that of actuator.
- Operating distance can be differed according to the moving direction of actuator from the switch. (at ambient temperature of 23 °C)
- · The operating distance may be affected by metal or magnetic substances which is placed closely to the switch.

On anation attains Marriage diseases						
Operation status	Moving direction	n —	Operating distance			
	Front - Back		≥5 mm			
OFF→ON	Top - Bottom		≥2mm			
	Left - Right	<u> </u>	≥5mm			
	Front - Back		≤ 15 mm			
$ON \!\to\! OFF$	Top - Bottom		≥6 mm			
	Left - Right		≤ 15 mm			

Connections


Signal	Function	Pin	Color	Controller (SFC-N322)		
Powerinput	VCC	1	Brown	D3		
rowerinput	GND	3	Blue	D4		
Signal input	IN	2	White	D1		
Signal output	OUT	4	Black	D2		
Auxilian/ outnut	ALIX	5	Vellow			

 M12 connector pin arrangement




Connection Examples

■ Cable type

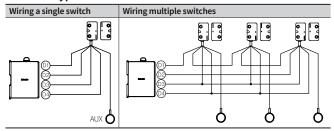

■ Cable connector type

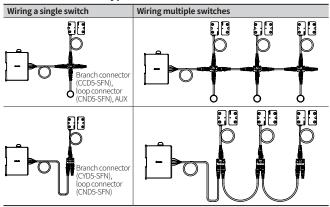


Maximum 30 unit of switches can be connected to a controller (SFC-N322).


Dimensions

• Unit: mm, For the detailed drawings, follow the Autonics website.

■ Cable type

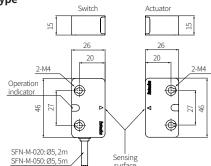


■ Cable connector type

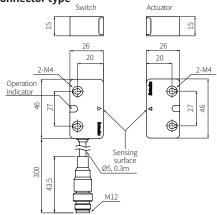


Sold Separately: Branch Connector

• Unit: mm, For the detailed drawings, follow the Autonics website.

■ CCD5-SFN

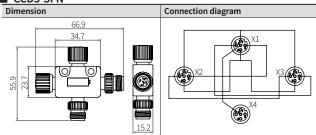


CYD5-SFN

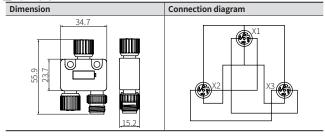

Sold Separately: Loop Connector

- Unit: mm, For the detailed drawings, follow the Autonics website.
- When using the branch connector, use the loop connector together.

■ CND5-SFN

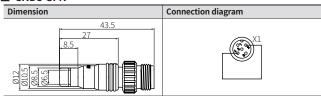

Sold Separately: Connector Cable

- Unit: mm, For the detailed drawings, follow the Autonics website.
- $\bullet \ \square$ in model stands for the cable length.

