

6. TECHNICAL DATA

Ratings

Rated current I_n 5 A
 Frequency 50 Hz or 60 Hz
 Burden < 0.3 VA at I_n
 Thermal withstand 4 x I_n continuous

Auxiliary Supply

NX232A-240A 198~265 VAC
 NX232A-240AD 85~265 VAC/110~370 VDC
 NX232A-110A 94~127 VAC
 Supply frequency 50 Hz or 60 Hz
 VA rating 3 VA typical

Setting Ranges

Low-set setting I_0 0.10 - 5.00 A (2%-100%)
 Time multiplier kt 0.01 - 1.00
 Low-set definite time $t >$ 0.00 - 100 s
 High-set setting $I_{>>}$ 0.10 - 50.0 A (2%-1000%)
 High-set definite time $t_{>>}$ 0.00 - 100 s
 (0.00 - 1.00, step 0.01; 1.00-10.0, step 0.10;
 10.0-100, step 0.5)

Accuracy

Protection thresholds $\pm 5\%$
 Time delay $\pm 5\%$ with a
 minimum of 50ms

Outputs

Rated voltage 250 VAC
 Continuous carry 5A ($\cos \Phi = 1.0$)
 Expected electrical life 10^5 operations
 Expected mechanical life 5×10^6 operations

Indicators

Auxiliary supply Green LED indicator
 Pick up Red LED indicator
 Trip 7 segment LED and
 Red LED indicators

Environmental conditions


Temperature -10°C to 55°C
 Humidity 5% to 95% non-condensing

Mechanical


Mounting Panel mounting
 Dimension (mm) 96(w) x 96(h) x 110(d)
 Enclosure protection IP54 at the panel
 Approximate weight 0.7 kg

7. CONNECTION DIAGRAMS

a) Earth Fault Relay

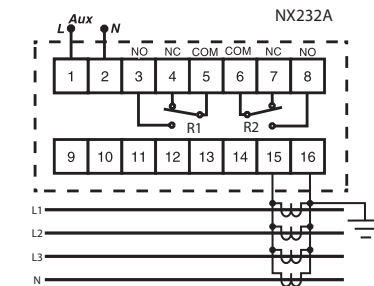

b) Overcurrent Relay and Earth fault relay (3 phase 4 wire system)

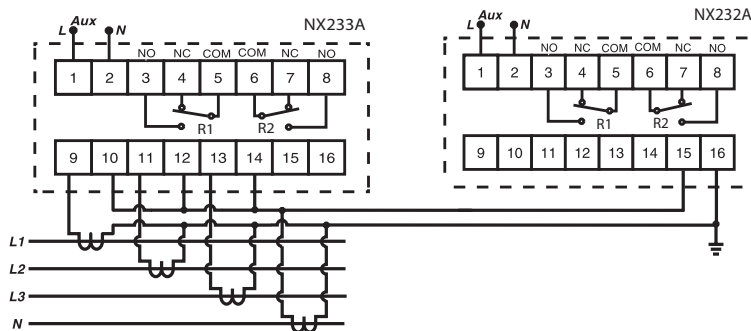

8. CASE DIMENSIONS


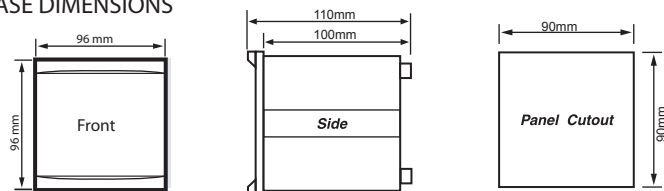


Figure 7: Case Dimensions

NX232A Earth-fault Relay User's Guide

Rev M0 (04/19)

A BRIEF OVERVIEW

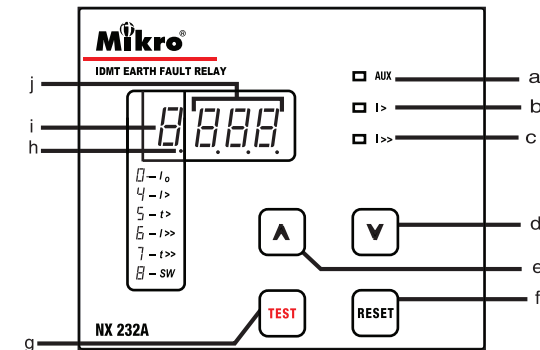

- a - Auxiliary power supply indicator
- b - Low-set start/trip status indicator
- c - High-set start/trip status indicator
- d - Down key
- e - Up key
- f - Reset key
- g - Test key
- h - DP indicator
- i - FUNCTION LED indicator
- j - DATA LED indicator

Symbols

- I_0 - Earth-fault current
- I_0 - Low-set
- kt - Low-set time multiplier
- $I_{>>}$ - High-set
- $t_{>>}$ - High-set time delay
- SW - Soft switches

1. DESCRIPTION

The NX232A is a microprocessor based numerical earth-fault relay. It uses fundamental frequency current measurement for excellent harmonic current rejection. The relay consists of independent low-set and high-set elements. The high-set element can be disabled by the user. The time current characteristics of the low-set elements are definite time or five selectable IDMT curves. The high-set element is a definite time or instantaneous relay. The 4-digit panel display on the NX232A allows the display of the present load current; recorded fault current for last tripping; and all settings of the relay.

2. LIGHT INDICATORS

The indicators display the status of the system as follow:

Indicator					Status
Aux	I_0	$I_{>>}$	FUNC	DT	
0	0	0	0	0	No Auxiliary power supply.
1	0	0	X	X	Normal condition, no tripping.
1	1	0	X	X	Low-set overcurrent triggered, time delay countdown started.
1	0	1	X	X	High-set overcurrent triggered, time delay countdown started.
1	B	0	B	B	Low-set tripped, DT LEDs show tripped value.
1	0	B	B	B	High-set tripped, DT LEDs show tripped value.
1	X	X	1	B	Programming mode.

Table 1: System Status

1 = ON 0 = OFF X = don't care, not blinking
 B = blinking DT = DATA FUNC = FUNCTION

Indicator		
FUNCTION	DP	DATA
0	off	Earth-fault current
t	blink	Last trip elapsed time
0	blink	Previous tripped current
4	off	Low-set current setting
5	off	Low-set time multiplier/delay setting
6	off	High-set current setting
7	off	High-set time delay setting
8	off	Soft switch setting

Table 2: FUNCTION Code

Display off Mode

To toggle display off mode, press "RESET" for 10 seconds. When display off mode enabled, the display will switch off after 6 minutes if no key is pressed.

3. PUSH-BUTTONS OPERATION

a) Trip test

Press and hold the "TEST" key for 3.5 seconds to stimulate a trip.

Display blinks "T.E.S.T.", indicators I> and I>> after test tripped.

b) Trip reset

Press the "RESET" key to reset the relay when tripped

c) View setting

When the relay is not under tripped condition, pressing the "RESET" key will scroll through the various functions.




Figure 1: Scroll sequence

d) Last Trip Elapsed Time

The function LED shows "t." and time elapsed after last trip in day ("d"), hour ("h") and minute ("n"). If more than 99 days, the display shows "99d" and "oUr"

e) Trip Current Record

By default the most recent ("1") trip current is shown. Press "UP" or "DOWN" key to show the previous ("2") and oldest ("3") trip current.

f) Program setting

Only function codes from 4 to 8 can be programmed.

Step 1: Press RESET key until the function digit shows required function.

Step 2: Press the "UP" and "DOWN" key simultaneously to enter programming mode. The Data digit blinks to indicate the relay is in programming mode.

Step 3: Use the UP or DOWN key to select the desired value.

Step 4: To save the selected value, press the UP and DOWN key simultaneously again. It will exit the programming mode with the data digits displaying new setting.

To exit programming mode without saving the selected setting, press the RESET key once.

4. OUTPUT CONTACTS

The NX232A has two sets of output contact:

- (i) CONTACT R1 - linked to trip signal.
- (i) CONTACT R2 - linked to trip or start signal.


The output contact can be programmed to be either auto reset type or manual reset type.

For auto reset type, the contact remain activated until the fault current is removed.

For manual reset type, the contact remain activated.

5. SOFT SWITCHES

The NX232A incorporates 5 soft switches for system configuration. When the function digit shows "8", the relay is in soft switch setting mode.



SW	SVL	System configuration
1	00	Contact R1 linked to trip signal auto reset type.
	01	Contact R1 linked to trip signal manual reset type.
2	00	Contact R2 linked to trip signal auto reset type.
	01	Contact R2 linked to trip signal manual reset type.
	10	Contact R2 linked to start signal auto reset type.
	11	Contact R2 linked to start signal manual reset type.
	05	Low-set definite time.
3	00	Low-set normal inverse curve 3/10.
	01	Low-set normal inverse curve 1.3/10.
	02	Low-set long time inverse curve.
	03	Low-set very inverse curve.
	04	Low-set extremely inverse curve.
4	00	High-set disabled.
	01	High-set enabled.
5	50	Network frequency 50 Hz
	60	Network frequency 60 Hz

Table 3: Soft switch setting

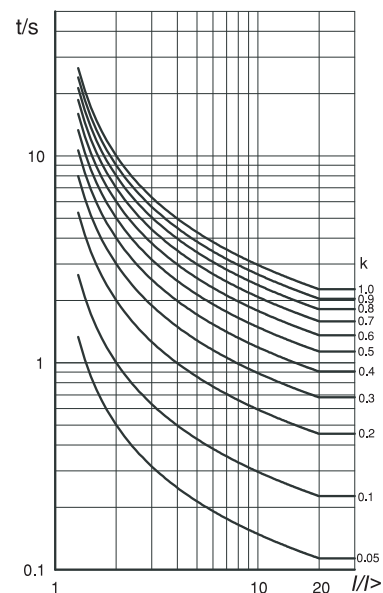


Figure 2: IDMT Normal Inverse Curve 3/10

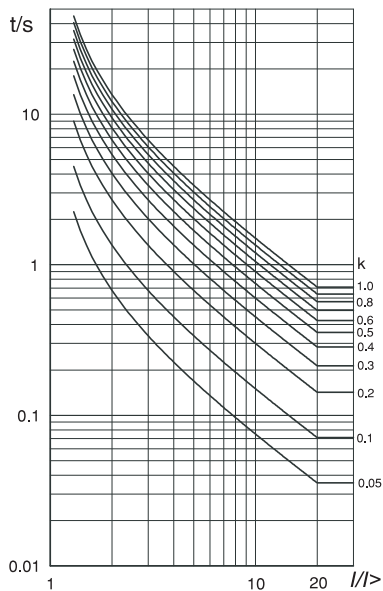


Figure 3: IDMT Very Inverse Curve

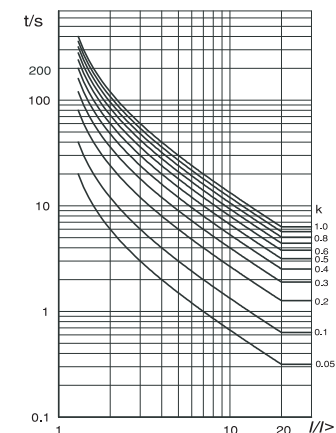


Figure 4: IDMT Long time Inverse Curve

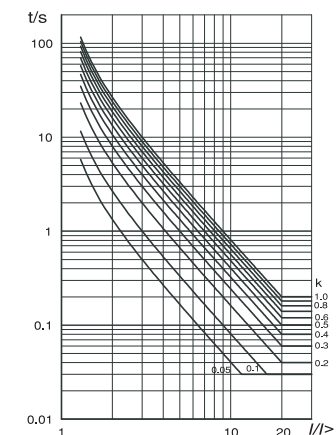


Figure 5: IDMT Extremely Inverse Curve

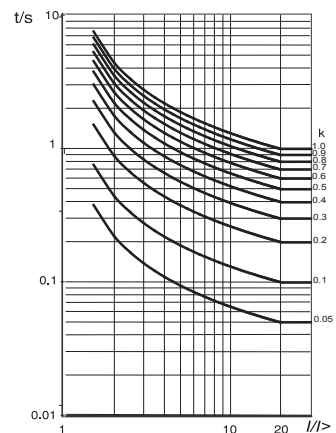


Figure 6: IDMT Normal Inverse Curve 1.3/10